



This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + *Refrain from automated querying* Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search


Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at <http://books.google.com/>





Library
of the
University of Wisconsin









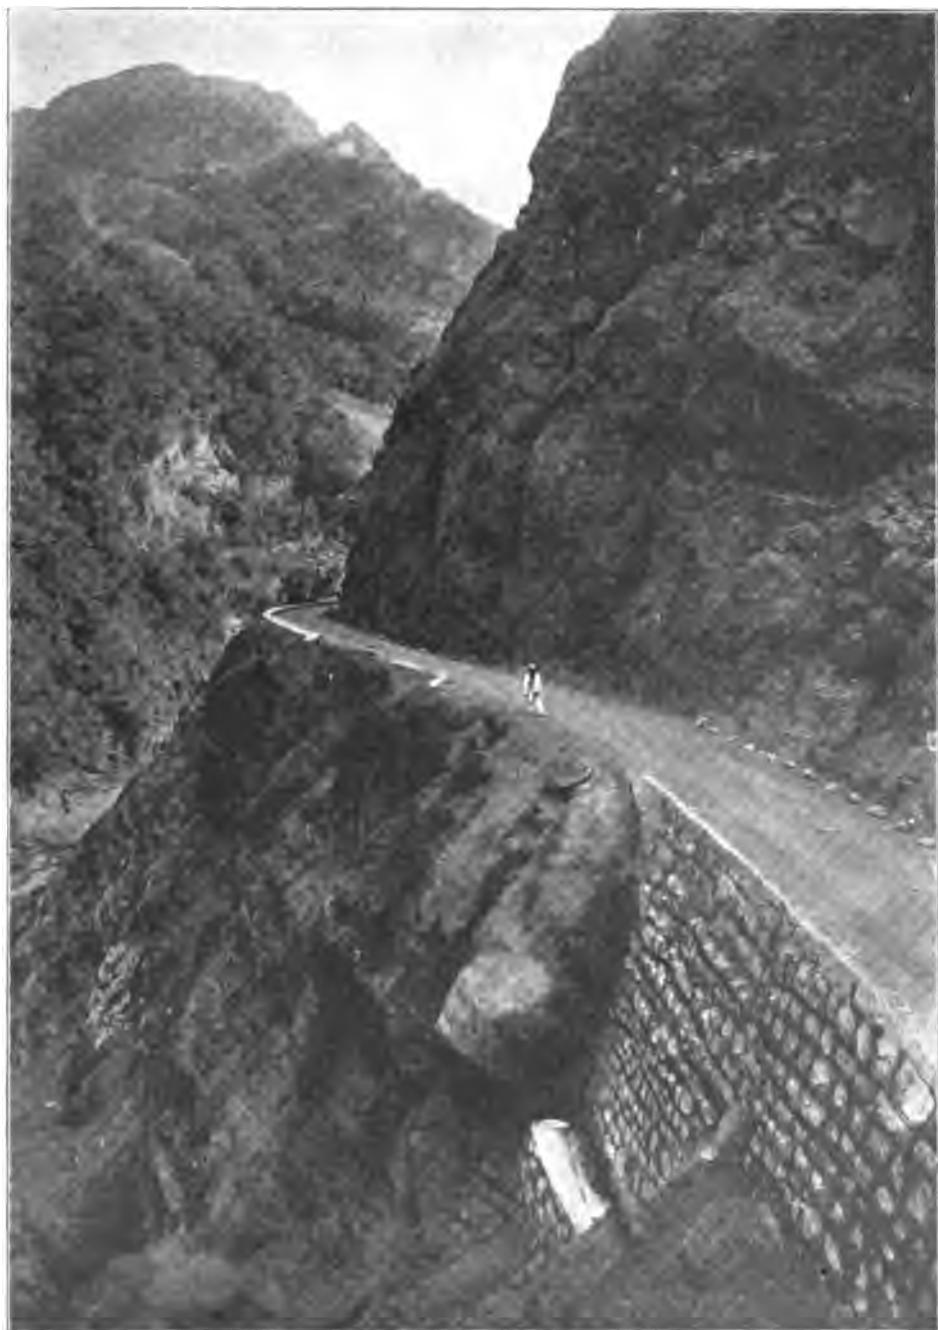

ROAD CONSTRUCTION IN THE PHILIPPINES

Section of 35-mile road built by American engineers, connecting the seaport of Dagupan with the mountain village of Baguio, province of Benguet, island of Luzón, and affording a cool and healthful retreat from the heat and malaria of the lowland regions. Dagupan lies 120 miles north of Manila, with which it is connected by rail. This view reveals some of the engineering difficulties to be overcome, masonry and concrete work of the type shown being necessary at many points.

Highway Construction

A Practical Guide to

MODERN METHODS OF ROADBUILDING AND THE DEVELOPMENT OF
BETTER WAYS OF COMMUNICATION

By AUSTIN T. BYRNE

Civil Engineer. Author of "Highway Construction,"
"Materials and Workmanship"

and

ALFRED E. PHILLIPS, C.E., PH.D.

Professor of Civil Engineering, Armour Institute of Technology

ILLUSTRATED

CHICAGO
AMERICAN SCHOOL OF CORRESPONDENCE
1918

**COPYRIGHT 1907 BY
AMERICAN SCHOOL OF CORRESPONDENCE**
Entered at Stationers' Hall, London
All Rights Reserved

6620059
184084
MAY - 5 1914

SR
B77
H

Foreword



N recent years, such marvelous advances have been made in the engineering and scientific fields, and so rapid has been the evolution of mechanical and constructive processes and methods, that a distinct need has been created for a series of *practical working guides*, of convenient size and low cost, embodying the accumulated results of experience and the most approved modern practice along a great variety of lines. To fill this acknowledged need, is the special purpose of the series of handbooks to which this volume belongs.

¶ In the preparation of this series, it has been the aim of the publishers to lay special stress on the *practical* side of each subject, as distinguished from mere theoretical or academic discussion. Each volume is written by a well-known expert of acknowledged authority in his special line, and is based on a most careful study of practical needs and up-to-date methods as developed under the conditions of actual practice in the field, the shop, the mill, the power house, the drafting room, the engine room, etc.

¶ These volumes are especially adapted for purposes of self-instruction and home study. The utmost care has been used to bring the treatment of each subject within the range of the com-

mon understanding, so that the work will appeal not only to the technically trained expert, but also to the beginner and the self-taught practical man who wishes to keep abreast of modern progress. The language is simple and clear; heavy technical terms and the formulæ of the higher mathematics have been avoided, yet without sacrificing any of the requirements of practical instruction; the arrangement of matter is such as to carry the reader along by easy steps to complete mastery of each subject; frequent examples for practice are given, to enable the reader to test his knowledge and make it a permanent possession; and the illustrations are selected with the greatest care to supplement and make clear the references in the text.


¶ The method adopted in the preparation of these volumes is that which the American School of Correspondence has developed and employed so successfully for many years. It is not an experiment, but has stood the severest of all tests—that of practical use—which has demonstrated it to be the best method yet devised for the education of the busy working man.

¶ For purposes of ready reference and timely information when needed, it is believed that this series of handbooks will be found to meet every requirement.



Table of Contents

COUNTRY ROADS	Page 1
Object of Roads—Road Resistances to Traction—Axle Friction—Air-Resistance—Tractive Power and Gradients—Tractive Power of Horses—Effect of Springs on Vehicles—Location of Roads—Contour Lines—Levels—Cross-Levels—Bridge Sites—Mountain Roads—Alignment of Roads—Zigzags—Final Location—Construction Profile—Determination of Gradients—Level Stretches—Width and Transverse Contour—Drainage—Side Ditches—Water Breaks—Culverts—Jointing of Pipe—Earthwork—Formation of Embankments—Roadways on Rock Slopes—Earth Roads—Sand Roads—Tools Used in Grading, Draining, etc.—Rollers—Sprinkling Carts—Road Coverings—Gravel Roads—Broken Stone (Macadam or Telford) Roads.	
CITY STREETS	Page 73
General Arrangement—Width of Streets—Street Grades—Grades at Street Intersections—Transverse Grade—Transverse Contour or Crown—Drainage—Gutters—Catch-Basins—Foundations for Pavements.	
STONE-BLOCK PAVEMENTS	Page 82
Properties of Stones (Granite, Sandstone, Trap Rock, Limestone)—Cobblestone Pavement—Belgian Block Pavement—Granite Block Pavements—Manner of Laying Blocks—Cushion Coat above Foundation—Ramming—Joint Filling.	
BRICK AND WOOD PAVEMENTS	Page 92
Requirements of Paving Brick—Tests of Paving Brick (Rattler, Absorption, Cross-Breaking, Crushing)—Properties of Paving Brick—Advantages and Defects of Brick Pavements—Foundation and Sand Cushion—Manner of Laying—Joint Filling—Tools—Concrete—Mixers—Gravel Heaters—Melting Furnaces—Wood Pavements—Kinds of Wood Used—Chemical Treatment of Wood (Creosoting)—Expansion of Blocks—Manner of Laying—Filling for Joints.	
ASPHALT PAVEMENTS, FOOTPATHS, CURBS, AND GUTTERS . . .	Page 106
Bituminous Limestone and Sandstone—Trinidad Asphaltum—Artificial Asphalt Pavements—Mixing Formula—Advantages and Defects—Asphalt Blocks—Asphalt Macadam—Tools—Footpaths—Curbstones—Artificial Stone—Problem of Pavement Selection—Resistance to Traction on Various Pavements—Serviceability—Safety—Life of Pavements—Cost—Relative Economies.	
INDEX	Page 131

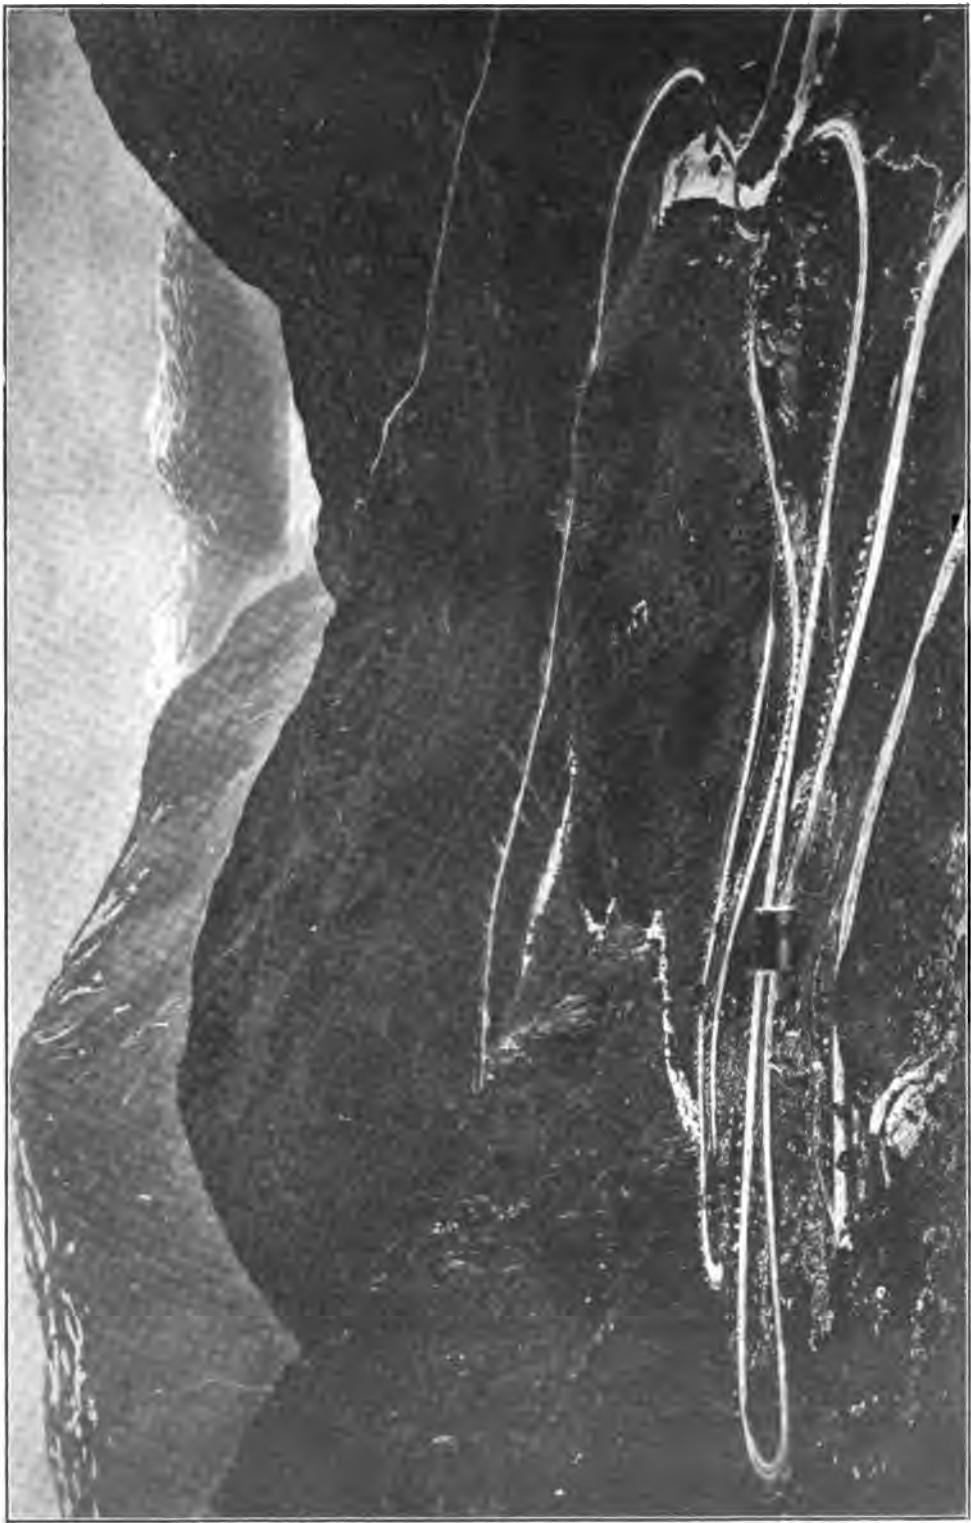

A TYPICAL EXAMPLE OF ROAD BUILDING IN NORWAY

View of the zigzags at Roldac. No other country in the world—except, possibly British India—affords better examples of highway construction under difficulties than does this mountainous kingdom. See page 24.

HIGHWAY CONSTRUCTION

PART I.

COUNTRY ROADS.

GENERAL CONSIDERATIONS.

Object of Roads. The object of a road is to provide a way for the transportation of persons and goods from one place to another with the least expenditure of power and expense. The facility with which this traffic or transportation may be conducted over any given road depends upon the resistance offered to the movement of vehicles. This resistance is composed of: (1) The resistance offered by the roadway, which consists of (a) "friction" between the surface of the road and the wheel tires; (b) resistance offered to the rolling of the wheels, occasioned by the want of uniformity in the road surface, or lack of strength to resist the penetrating efforts of loaded wheels, thus requiring the load to be lifted over projecting points and out of hollows and ruts, thereby diminishing the effective load the horse may draw to such as it can lift. This resistance is called "resistance to rolling" or "penetration;" (c) resistance due to gravity called "grade resistance;" (2) The resistance offered by vehicles, termed "axle friction;" (3) Resistance of the air.

The road which offers the least resistance to traffic should combine a surface on which the friction of the wheels is reduced to the least possible amount, while offering a good foothold for horses, to enable them to exert their utmost tractive power, and should be so located as to give the most direct route with the least gradients.

Friction. The resistance of friction arises from the rubbing of the wheel tires against the surface of the road. This resistance to traction is variable, and can be determined only by experiment. From many experiments the following deductions are drawn:

- (1) The resistance to traction is directly proportional to the pressure.

(2) On solid, unyielding surfaces it is independent of the width of the tire, but on compressible surfaces the resistance decreases as the width of the tire increases (but there is no material advantage gained in making a tire more than 4 inches wide).

(3) It is independent of the speed.

(4) On rough, irregular surfaces, which give rise to constant concussion, it increases with the speed.

The following table shows the relative resistance to traction of various surfaces:

TABLE 1.
Resistance to Traction on Different Road Surfaces.

	Traction Resistance.	
	Pounds per ton.	In terms of load.
Earth road—ordinary condition	50 to 200	$\frac{1}{10}$ to $\frac{1}{5}$
Gravel	50 to 100	$\frac{1}{10}$ to $\frac{1}{5}$
Sand	100 to 200	$\frac{1}{5}$ to $\frac{1}{2}$
Macadam	30 to 100	$\frac{1}{7}$ to $\frac{1}{3}$
Plank Road	30 to 50	$\frac{1}{7}$ to $\frac{1}{3}$
Steel Wheelway	15 to 40	$\frac{1}{15}$ to $\frac{1}{5}$

These coefficients refer to the power required to keep the load in motion. It requires from two to six or eight times as much force to start a load as it does to keep it in motion, at two or three miles per hour. The extra force required to start a load is due in part to the fact that during the stop the wheel may settle into the road surface, in part to the fact that the axle friction at starting is greater than after motion has begun, and further in part to the fact that energy is consumed in accelerating the load.

Resistance to Rolling. This resistance is caused (1) by the wheel penetrating or sinking below the surface of the road, leaving a track or rut behind it. It is equal to the product of the load multiplied by one-third of the semi-chord of the submerged arc of the wheel; and (2) by the wheel striking or colliding with loose or projecting stones, which give a sudden check to the horses, depending upon the height of the obstacle, the momentum destroyed being oftentimes considerable.

The rolling resistance varies inversely as some function of the

diameter of the wheel, as the larger the wheel the less force required to lift it over the obstruction or to roll it up the inclination due to the indentation of the surface.

The power required to draw a wheel over a stone or any obstacle, such as S in Fig. 1, may be thus calculated. Let P represent the power sought, or that which would just balance the weight on

the point of the stone, and the slightest increase of which would draw it over. This power acts in the direction C P with the leverage of B C or D E. Gravity, represented by W, resists in the direction C B with the leverage B D. The equation of equilibrium

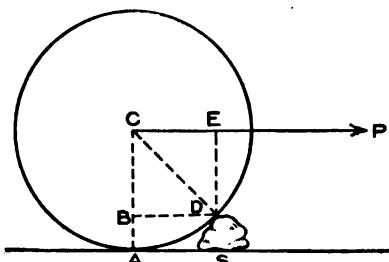


Fig. 1.

will be $P \times C B = W \times B D$, whence

$$P = W \frac{B D}{C B} = W \frac{C D^2 - B C^2}{C D - A D}$$

Let the radius of the wheel = C D = 26 inches, and the height of the obstacle = A B = 4 inches. Let the weight W = 500 pounds, of which 200 pounds may be the weight of the wheel and 300 pounds the load on the axle. The formula then becomes

$$P = 500 \frac{1}{26 - 4} \frac{676 - 484}{2} = 500 \frac{13.85}{22} = 314.7 \text{ pounds.}$$

The pressure at the point D is compounded of the weight and the power, and equals

$$W \frac{C D}{C B} = 500 \times \frac{26}{22} = 591 \text{ pounds,}$$

and therefore acts with this great effect to destroy the road in its collision with the stone, in addition there is to be considered the effect of the blow given by the wheel in descending from it. For minute accuracy the non-horizontal direction of the draught and the thickness of the axle should be taken into account. The power required is lessened by proper springs to vehicles, by enlarged wheels, and by making the line of draught ascending.

The mechanical advantage of the wheel in surmounting an obstacle may be computed from the principle of the lever.

Let the wheel, Fig. 2, touch the horizontal line of traction in the point A and meet a protuberance B D. Suppose the line of draught C P to be parallel to A B. Join C D and draw the perpendiculars D E and D F.

We may suppose the power to be applied at E and the weight at F, and the action is then the same as the bent lever E D F turning round the fulcrum at D. Hence $P : W :: FD : DE$. But $FD : DE :: \tan FCD : 1$, and $\tan FCD = \tan 2(DAB)$; therefore $P = W \tan 2(DAB)$.

Now it is obvious that the angle DAB increases as the radius of the circle diminishes; and therefore, the weight W being constant, the power required to overcome an obstacle of given height is diminished when the diameter is increased. Large wheels are therefore the best adapted for surmounting inequalities of the road.

There are, however, circumstances which provide limits to the height of the wheels of vehicles. If the radius AC exceeds the height of that part of the horse to which the traces are attached, the line of traction CP will be inclined to the horse, and part of the power will be exerted in pressing the wheel against the ground. The best average size of wheels is considered to be about 6 feet in diameter.

Wheels of large diameter do less damage to a road than small ones, and cause less draught for the horses.

With the same load, a two-wheeled cart does far more damage than one with four wheels, and this because of their sudden and irregular twisting motion in the trackway.

Grade Resistance is due to the action of gravity, and is the same on good and bad roads. On level roads its effect is immaterial, as it acts in a direction perpendicular to the plane of the horizon, and neither accelerates nor retards motion. On inclined roads it offers considerable resistance, proportional to the steepness of the incline.

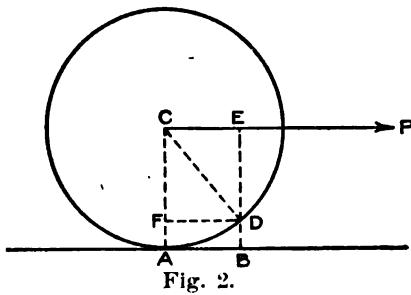


Fig. 2.

The resistance due to gravity on any incline in pounds per ton
is equal to $\frac{2000}{\text{rate of grade}}$

The following table shows the resistance due to gravity on different grades.

TABLE 2.

Resistance Due to Gravity on Different Inclinations.

Grade 1 in	20	30	40	50	60	70	80	90	100	200	300	400
Rise in feet per mile . . .	264	176	132	105	88	75	66	58	52	26	17	13
Resistance in lb. per ton .	112	74½	56	45	38	32	28	25	22	11½	7½	5½

The additional resistance caused by inclines may be investigated in the following manner: Suppose the whole weight to be borne on one pair of wheels, and that the tractive force is applied in a direction parallel to the surface of the road.

Let A B in Fig. 3 represent a portion of the inclined road, C being a vehicle just sustained in its position by a force acting in the direction C D. It is evident that the vehicle is kept in its position by three forces; namely, by its own weight W acting in the vertical direction C F, by the force F applied in the direction C D parallel to the surface of the road, and by the pressure P which the vehicle exerts against the surface of the road acting in the direction C E perpendicular to same.

To determine the relative magnitude of these three forces, draw a horizontal line A G and the vertical one B G; then, since the two lines C F and B G are parallel and are both cut by the line A B, they must make the two angles C F E and A B G equal; also the two angles C E F and A G B are equal; therefore, the remaining angles F C E and B A G are equal, and the two triangles C F E and A B G are similar. And as the three sides of the former are proportional to the three forces by which the vehicle is sustained, so also are the three sides of the latter; namely, A B or the length of the road is proportional to W, or the weight of the vehicle; B G,

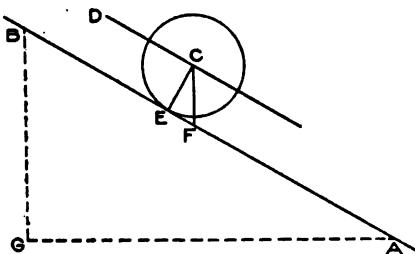


Fig. 3.

equal; also the two angles C E F and A G B are equal; therefore, the remaining angles F C E and B A G are equal, and the two triangles C F E and A B G are similar. And as the three sides of the former are proportional to the three forces by which the vehicle is sustained, so also are the three sides of the latter; namely, A B or the length of the road is proportional to W, or the weight of the vehicle; B G,

or the vertical rise in the same, to F, or the force required to sustain the vehicle on the incline; and A G, or the horizontal distance in which the rise occurs, to P, or the force with which the vehicle presses upon the surface of the road. Therefore,

$$W : A B :: F : G B,$$

and

$$W : A B :: P : A G.$$

If to A G such a value be assigned that the vertical rise of the road is exactly one foot, then

$$F = \frac{W}{A B} = \frac{W}{\sqrt{A G^2 + 1}} = W \cdot \sin A$$

and

$$P = \frac{W \cdot A G}{A B} = \frac{W \cdot A G}{\sqrt{A G^2 + 1}} = W \cdot \cos A,$$

in which A is the angle B A G.

To find the force requisite to sustain a vehicle upon an inclined road (the effects of friction being neglected), divide the weight of the vehicle and its load by the inclined length of the road, the vertical rise of which is one foot, and the quotient is the force required.

To find the pressure of a vehicle against the surface of an inclined road, multiply the weight of the loaded vehicle by the horizontal length of the road, and divide the product by the inclined length of the same; the quotient is the pressure required.

The force with which a vehicle presses upon an inclined road is always less than its actual weight; the difference is so small that, unless the inclination is very steep, it may be taken equal to the weight of the loaded vehicle.

To find the resistance to traction in passing up or down an incline, ascertain the resistance on a level road having the same surface as the incline, to which add, if the vehicle ascends, or subtract, if it descends, the force requisite to sustain it on the incline; the sum or difference, as the case may be, will express the resistance.

Tractive Power and Gradients. The necessity for easy grades is dependent upon the power of the horse to overcome the resistance to motion composed of the four forces, friction, collision, gravity, and the resistance of the air.

All estimates on the tractive power of horses must to a certain

extent be vague, owing to the different strengths and speeds of animals of the same kind, as well as to the extent of their training to any particular kind of work.

The draught or pull which a good average horse, weighing 1,200 pounds, can exert on a level, smooth road at a speed of $2\frac{1}{2}$ miles per hour is 100 pounds, equivalent to 22,000 foot-pounds per minute, or 13,200,000 foot-pounds per day of 10 hours.

The tractive power diminishes as the speed increases and, perhaps, within certain limits, say from $\frac{3}{4}$ to 4 miles per hour, nearly in inverse proportion to it. Thus the average tractive force of a horse, on a level, and actually pulling for 10 hours, may be assumed approximately as follows:

TABLE 3.
Tractive Power of Horses at Different Velocities.

Miles per hour.	Tractive Force. Lb.	Miles per hour.	Tractive Force. Lb.
$\frac{3}{4}$	333.33	$2\frac{1}{2}$	111.11
1	250	$2\frac{3}{4}$	100
$1\frac{1}{4}$	200	$2\frac{1}{4}$	90.91
$1\frac{1}{2}$	166.66	3	83.33
$1\frac{3}{4}$	142.86	$3\frac{1}{2}$	71.43
2	125	4	62.50

The work done by a horse is greatest when the velocity with which he moves is $\frac{1}{2}$ of the greatest velocity with which he can move when unloaded; and the force thus exerted is 0.45 of the utmost force that he can exert at a dead pull.

The traction power of a horse may be increased in about the same proportion as the time is diminished, so that when working from 5 to 10 hours, on a level, it will be about as shown in the following table:

TABLE 4.

Hours per day	Traction (pounds)	Hours per day	Traction (pounds)
10	100	7	$146\frac{6}{7}$
9	$111\frac{1}{3}$	6	$166\frac{2}{3}$
8	125	5	200

The tractive power of teams is about as follows

1 horse	= 1
2 horses	$0.95 \times 2 = 1.90$
3 "	$0.85 \times 3 = 2.55$
4 "	$0.80 \times 4 = 3.20$

Loss of Tractive Power on Inclines. In ascending inclines a horse's power diminishes rapidly; a large portion of his strength is expended in overcoming the resistance of gravity due to his own weight and that of the load. Table 5 shows that as the steepness of the grade increases the efficiency of both the horse and the road surface diminishes; that the more of the horse's energy is expended in overcoming gravity the less remains to overcome the surface resistance.

TABLE 5.
Effects of Grades Upon the Load a Horse can Draw on Different Pavements.

Grade.	Earth.	Broken Stone.	Stone Blocks.	Asphalt.
Level	1.00	1.00	1.00	1.00
1 : 100	.80	.66	.72	.41
2 : 100	.66	.50	.55	.25
3 : 100	.55	.40	.44	.18
4 : 100	.47	.33	.36	.13
5 : 100	.41	.29	.30	.10
10 : 100	.26	.16	.14	.04
15 : 100	.10	.05	.07	...
20 : 100	.0403	...

Table 6 shows the gross load which an average horse, weighing 1,200 pounds, can draw on different kinds of road surfaces, on a level and on grades rising five and ten feet per one hundred feet.

TABLE 6.

Description of Surface.	Level.	5 per cent grade.	10 per cent grade.
Asphalt	13,216
Broken stone (best condition)	6,700	1,840	1,060
" (slightly muddy)	4,700	1,500	1,000
" (ruts and mud)	3,000	1,390	890
" (very bad condition)	1,840	1,040	740
Earth (best condition)	3,600	1,500	930
" (average condition)	1,400	900	660
" (moist but not muddy)	1,100	780	600
Stone-block pavement (dry and clean)	8,300	1,920	1,090
" " (muddy)	6,250	1,800	1,040
Sand (wet)	1,500	675	390
" (dry)	1,087	445	217

The decrease in the load which a horse can draw upon an incline is not due alone to gravity; it varies with the amount of foothold

afforded by the road surface. The tangent of the angle of inclination should not be greater than the coefficient of frictional resistance; therefore it is evident that the smoother the road surface, the easier should be the grade. The smoother the surface the less the foothold, and consequently the load.

The loss of tractive power on inclines is greater than any investigation will show; for, besides the increase of draught caused by gravity, the power of the horse is much diminished by fatigue upon a long ascent, and even in greater ratio than man, owing to its anatomical formation and great weight. Though a horse on a level is as strong as five men, on a grade of 15 per cent, it is less strong than three; for three men carrying each 100 pounds will ascend such a grade faster and with less fatigue than a horse with 300 pounds.

A horse can exert for a short time twice the average tractive pull which he can exert continuously throughout the day's work; hence, so long as the resistance on the incline is not more than double the resistance on the level, the horse will be able to take up the full load which he is capable of drawing.

Steep grades are thus seen to be objectionable, and particularly so when a single one occurs on an otherwise comparatively level road, in which case the load carried over the less inclined portions must be reduced to what can be hauled up the steeper portion.

The bad effects of steep grades are especially felt in winter, when ice covers the roads, for the slippery condition of the surface causes danger in descending, as well as increased labor in ascending; the water of rains also runs down the road and gulleys it out, destroying its surface, thus causing a constant expense for repairs. The inclined portions are subject to greater wear from horses ascending, thus requiring thicker covering than the more level portions, and hence increasing the cost of construction.

It will rarely be possible, except in a flat or comparatively level country, to combine easy grades with the best and most direct route. These two requirements will often conflict. In such a case, increase the length. The proportion of this increase will depend upon the friction of the covering adopted. But no general rule can be given to meet all cases as respects the length which may thus be added, for the comparative time occupied in making the journey forms an

important element in any case which arises for settlement. Disregarding time, the horizontal length of a road may be increased to avoid a 5 per cent grade, seventy times the height.

Table 7 shows, for most practical purposes, the force required to draw loaded vehicles over inclined roads. The first column expresses the rate of inclination; the second, the pressure on the plane in pounds per ton; the third, the tendency down the plane (or force required to overcome the effect of gravity) in pounds per ton; the fourth, the force required to haul one ton up the incline; the fifth, the length of level road which would be equivalent to a mile in length of the inclined road—that is, the length which would require the same motive power to be expended in drawing the load over it, as would be necessary to draw over a mile of the inclined road; the sixth, the maximum load which an average horse weighing 1,200 pounds can draw over such inclines, the friction of the surface being taken at $\frac{1}{60}$ of the load drawn.

TABLE 7.

Rate of grade. Feet per 100 feet.	Pressure on the plane in lb. per ton.	Tendency down the plane in lb. per ton.	Power in lb. required to haul one ton up the plane.	Equivalent length of level road. Miles.	Maximum load in lb. which a horse can haul.
0.0	2240	.00	45.00	1.000	6270
0.25	2240	5.60	50.60	1.121	5376
0.50	2240	11.20	56.20	1.242	4973
0.75	2240	16.80	61.80	1.373	4490
1.	2240	22.40	67.40	1.500	4115
1.25	*2240	28.00	73.00	1.622	3830
1.50	2240	33.60	78.60	1.746	3584
1.75	2240	39.20	84.20	1.871	3290
2	2240	45.00	90.00	2.000	3114
2.25	2240	50.40	95.40	2.120	2935
2.50	2240	56.00	101.00	2.244	2725
2.75	2240	61.33	106.33	2.363	2620
3	2239	67.20	112.20	2.481	2486
4	2238	89.20	134.20	2.982	2083
5	2237	112.00	157.00	3.444	1800
6	2233	134.40	179.40	3.986	1568
7	2232	156.80	201.80	4.844	1367
8	2232	179.20	224.20	4.982	1235
9	2231	201.60	246.60	5.810	1125
10	2229	224.00	269.00	5.977	1030

* Near enough for practice; actually 2239.888.

Pressure on the plane = weight \times nat cos of angle of plane.

Axle Friction. The resistance of the hub to turning on the axle is the same as that of a journal revolving in its bearing, and has

nothing to do with the condition of the road surface. The coefficient of journal friction varies with the material of the journal and its bearing, and with the lubricant. It is nearly independent of the velocity, and seems to vary about inversely as the square root of the pressure. For light carriages when loaded, the coefficient of friction is about 0.020 of the weight on the axle; for the ordinary thimble-skein wagon when loaded, it is about 0.012. These coefficients are for good lubrication; if the lubrication is deficient, the axle friction is two to six times as much as above.

The traction power required to overcome the above axle friction for carriages of the usual proportions is about 3 to $3\frac{1}{2}$ lb. per ton of the weight on the axle; and for truck wagons, which have medium sized wheels and axles, is about $3\frac{1}{2}$ to $4\frac{1}{2}$ lb. per ton.

Resistance of the Air. The resistance arising from the force of the wind will vary with the velocity of the wind, with the velocity of the vehicle, with the area of the surface acted upon, and also with the angle of incidence of direction of the wind with the plane of the surface.

The following table gives the force per square foot for various velocities:

TABLE 8.

Velocity of wind in miles per hour.	Force in lbs. per sq. ft.	Description.
15	1.107	Pleasant Breeze
20	1.968	Brisk Gale
25	3.075	
30	4.428	High Wind
35	6.027	
40	7.872	Very High Wind
45	9.963	
50	12.300	Storm

Effect of Springs on Vehicles. Experiments have shown that vehicles mounted on springs materially decrease the resistance to traction, and diminish the wear of the road, especially at speeds beyond a walking pace. Going at a trot, they were found not to cause more wear than vehicles without springs at a walk, all other conditions being similar. Vehicles with springs improperly fixed cause considerable concussion, which in turn destroys the road covering.

LOCATION OF COUNTRY ROADS.

The considerations governing the location of country roads are dependent upon the commercial condition of the country to be traversed. In old and long-inhabited sections the controlling elements will be the character of the traffic to be accommodated. In such a section, the route is generally predetermined, and therefore there is less liberty of a choice and selection than in a new and sparsely settled district, where the object is to establish the easiest, shortest, and most economical line of intercommunication according to the physical character of the ground.

Whichever of these two cases may have to be dealt with, the same principle governs the engineer, namely, to so lay out the road as to effect the conveyance of the traffic with the least expenditure of motive power consistent with economy of construction and maintenance.

Economy of motive power is promoted by easy grades, by the avoidance of all unnecessary ascents and descents, and by a direct line; but directness must be sacrificed to secure easy grades and to avoid expensive construction.

Reconnaissance. The selection of the best route demands much care and consideration on the part of the engineer. To obtain the requisite data upon which to form his judgment, he must make a personal reconnaissance of the district. This requires that the proposed route be either ridden or walked over and a careful examination made of the principal physical contours and natural features of the district. The amount of care demanded and the difficulties attending the operations will altogether depend upon the character of the country.

The immediate object of the reconnaissance is to select one or more trial lines, from which the final route may be ultimately determined.

When there are no maps of the section traversed, or when those which can be procured are indefinite or inaccurate, the work of reconnoitering will be much increased.

In making a reconnaissance there are several points which, if carefully attended to, will very considerably lessen the labor and time otherwise required. Lines which would run along the imme-

diate bank of a large stream must of necessity intersect all the tributaries confluent on that bank, thereby demanding a corresponding number of bridges. Those, again, which are situated along the slopes of hills are more liable in rainy weather to suffer from washing away of the earthwork and sliding of the embankments; the others which are placed in valleys or elevated plateaux, when the line crosses the ridges dividing the principal water courses will have steep ascents and descents.

In making an examination of a tract of country, the first point to attract notice is the unevenness or undulations of its surface, which appears to be entirely without system, order, or arrangement; but upon closer examination it will be perceived that one general principle of configuration obtains even in the most irregular countries. The country is intersected in various directions by main water courses or rivers, which increase in size as they approach the point of their discharge. Towards these main rivers lesser rivers approach on both sides, running right and left through the country, and into these, again, enter still smaller streams and brooks. The streams thus divide the hills into branches or spurs having approximately the same direction as themselves, and the ground falls in every direction from the main chain of hills towards the water courses, forming ridges more or less elevated.

The main ridge is cut down at the heads of the streams into depressions called gaps or passes; the more elevated points are called peaks. The water which has fallen upon these peaks is the origin of the streams which have hollowed out the valleys. Furthermore, the ground falls in every direction towards the natural water courses, forming ridges more or less elevated running between them and separating from each other the districts drained by the streams.

The natural water courses mark not only the lowest lines, but the lines of the greatest longitudinal slope in the valleys through which they flow.

The direction and position of the principal streams give also the direction and approximate position of the high ground or ridges which lie between them.

The positions of the tributaries to the larger stream generally indicate the points of greatest depression in the summits of the ridges,



Fig. 4. Contour Lines.

and therefore the points at which lateral communication across the high ground separating contiguous valleys can be most readily made.

The instruments employed in reconnoitering, are: The compass, for ascertaining the direction; the aneroid barometer, to fix the approximate elevation of summits, etc.; and the hand level, to ascertain the elevation of neighboring points. If a vehicle can be used, an odometer may be added, but distances can usually be guessed or ascertained by time estimates or otherwise, closely enough for preliminary purposes. The best maps obtainable and traveling companions who possess a local knowledge of the country, together with the above outfit is all that will be necessary for the first inspection.

The reconnaissance being completed, instrumental surveys of the routes deemed most advantageous should be made. When the several lines are plotted to the same scale, a good map can be prepared from which the exact location of the road can be determined.

In making the preliminary surveys the topographical features should be noted for a convenient distance to the right and the left of the line, and all prominent points located by compass bearings. The following data should also be obtained: the importance, magnitude, and direction of all streams and roads crossed; the character of the material to be excavated or available for embankments, the position of quarries and gravel pits, and the modes of access thereto; and all other information that may effect a selection.

Topography. There are various methods of delineating upon paper the irregularities of the surface of the ground. The method of most utility to the engineer is that by means of "contour lines." These are fine lines traced through the points of equal level over the surface surveyed, and denote that the level of the ground throughout the whole of their course is identical; that is to say, that every part of the ground over which the line passes is at a certain height above a known fixed point termed the datum, this height being indicated by the figures written against the line.

The intervals between the lines vertically are equal and may be 1, 3, 5, 10 or more feet apart; where the surface is very steep they lie close together. These lines by their greater or less distance apart have the effect of shading, and make apparent to the eye, the undulations and irregularities in the surface of the country.

Fig. 4 shows an imaginary tract of country, the physical features of which are shown by contour lines.

Map. The map should show the lengths and direction of the different portions of the line, the topography, rivers, water courses, roads, railroads, and other matters of interest, such as town and county lines, dividing lines between property, timbered and cultivated lands, etc.

Any convenient scale may be adopted; 400 feet to an inch will be found the most useful.

Memoir. The descriptive memoir should give with minuteness all information, such as the nature of the soil, character of the several excavations whether earth or rock, and such particular features as cannot be clearly shown upon the map or profile.

Special information should be given regarding the rivers crossed, as to their width, depth at highest known flood, velocity of current, character of banks and bottom, and the angle of skew which the course makes with the line of the road.

Levels. Levels should be taken along the course of each line, usually at every 100 feet, or at closer intervals, depending upon the nature of the country.

In taking the levels, the heights of all existing roads, railroads, rivers, or canals should be noted. "Bench marks" should be established at least every half mile, that is, marks made on any fixed object, such as a gate post, side of a house, or, in the absence of these, a cut made on a large tree. The height and exact

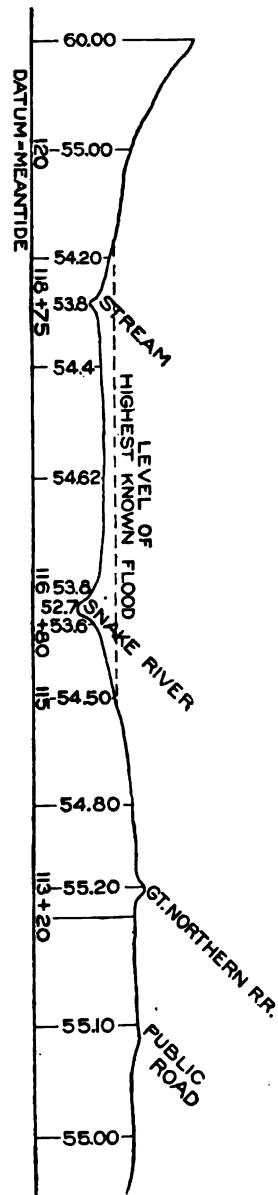


Fig. 5. Preliminary Profile

description of each bench mark should be recorded in the level book.

Cross Levels. Wherever considered necessary levels at right angle to the center line should be taken. These will be found useful in showing what effect a deviation to the right or left of the surveyed line would have. Cross levels should be taken at the intersection of all roads and railroads to show to what extent, if any, these levels will have to be altered to suit the levels of the proposed road.

Profile. A profile is a longitudinal section of the route, made from the levels. Its horizontal scale should be the same as that of the map; the vertical scale should be such as will show with distinctness the inequalities of the ground.

Fig. 5 shows the manner in which a profile is drawn and the nature of the information to be given upon it.

Bridge Sites. The question of choosing the site of bridges is an important one. If the selection is not restricted to a particular point, the river should be examined for a considerable distance above and below what would be the most convenient point for crossing; and if a better site is found, the line of the road must be made subordinate to it. If several practicable crossings exist, they must be carefully compared in order to select the one most advantageous. The following are controlling conditions: (1) Good character of the river bed, affording a firm foundation. If rock is present near the surface of the river bed, the foundation will be easy of execution and stability and economy will be insured. (2) Stability of river banks, thus securing a permanent concentration of the waters in the same bed. (3) The axis of the bridge should be at right angles to the direction of the current. (4) Bends in rivers are not suitable localities and should be avoided if possible. A straight reach above the bridge should be secured if possible.

Final Selection. In making the final selection the following principles should be observed as far as practicable.

(a) To follow that route which affords the easiest grades. The easiest grade for a given road will depend on the kind of covering adopted for its surface.

(b) To connect the places by the shortest and most direct route commensurate with easy grades.

(c) To avoid all unnecessary ascents and descents. When a

road is encumbered with useless ascents, the wasteful expenditure of power is considerable.

(d) To give the center line such a position, with reference to the natural surface of the ground, that the cost of construction shall be reduced to the smallest possible amount.

(e) To cross all obstacles (where structures are necessary) as nearly as possible at right angles. The cost of skew structures increases nearly as the square of the secant of the obliquity.

(f) To cross ridges through the lowest pass which occurs.

(g) To cross either under or over railroads; for grade crossings mean danger to every user of the highway.

Examples of Cases to be Treated. In laying out the line of a road, there are three cases which may have to be treated, and each of these is exemplified in the contour map, Fig. 4. First, the two places to be connected, as the towns A and B on the plan, may be both situated in the same valley, and upon the same side of it; that is, they are not separated from each other by the main stream which drains the valley. This is the simplest case. Secondly, although both in the same valley, the two places may be on opposite sides of the valley, as at A and C, being separated by the main river. Thirdly, they may be situated in different valleys, separated by an intervening ridge of ground more or less elevated, as at A and D. In laying out an extensive line of road, it frequently happens that all these cases have to be dealt with.

The most perfect road is that of which the course is perfectly straight and the surface practically level; and, all other things being the same, the best road is that which answers nearest to this description.

Now, in the first case, that of the two towns situated on the same side of the main valley, there are two methods which may be pursued in forming a communication between them. A road following the direct line between them, shown by the thick dotted line A B, may be made, or a line may be adopted which will gradually and equally incline from one town to another, supposing them to be at different levels; or, if they are on the same level, the line should keep at that level throughout its entire course, following all the sinuosities and curves which the irregular formation of the country may render

necessary for the fulfillment of these conditions. According to the first method, a level or uniformly inclined road might be made from one to the other; this line would cross all the valleys and streams which run down to the main river, thus necessitating deep cuttings, heavy embankments, and numerous bridges; or these expensive works might be avoided by following the sinuosities of the valley. When the sides of the main valley are pierced by numerous ravines with projecting spurs and ridges intervening, instead of following the sinuosities, it will be found better to make a nearly straight line cutting through the projecting points in such a way that the material excavated should be just sufficient to fill the hollows.

Of all these, the best is the straight or uniformly inclined, or level road, although at the same time it is the most expensive. If the importance of the traffic passing between the places is not sufficient to warrant so great an outlay, it will become a matter of consideration whether the course of the road should be kept straight, its surface being made to undulate with the natural face of the country; or whether, a level or equally inclined line being adopted, the course of the road should be made to deviate from the direct line, and follow the winding course which such a condition is supposed to necessitate.

In the second case, that of two places situated on opposite sides of the same valley, there is, in like manner, the choice of a perfectly straight line to connect them, which would probably require a big embankment if the road was kept level, or steep inclines if it followed the surface of the country; or by winding the road, it may be carried across the valley at a higher point, where, if the level road be taken, the embankment would not be so high, or, if kept on the surface, the inclination would be reduced.

In the third case, there is, in like manner, the alternative of carrying the road across the intervening ridge in a perfectly straight line, or of deviating it to the right and left, and crossing the ridge at a point where the elevation is less.

The proper determination of the question which of these courses is the best under certain circumstances involves a consideration of the comparative advantages and disadvantages of inclines and curves. What additional increase in the length of a road would be equivalent to a given inclined plane upon it; or conversely, what

inclination might be given to a road as an equivalent to a given decrease in its length? To satisfy this question, the comparative force required to draw different vehicles with given loads must be known, both upon level and variously inclined roads.

The route which will give the most general satisfaction consists in following the valleys as much as possible and rising afterward by gentle grades. This course traverses the cultivated lands, regions studded with farmhouses and factories. The value of such a line is much more considerable than that of a route by the ridges. The water courses which flow down to the main valley are, it is true, crossed where they are the largest and require works of large dimensions, but also they are fewer in number.

Intermediate Towns. Suppose that it is desired to form a road between two distant towns, A and B, Fig. 6, and let us for the present neglect altogether the consideration of the physical features of the intervening country, assuming that it is equally favorable whichever line we select. Now at first sight, it would appear that under such circumstances a perfectly straight line drawn from one

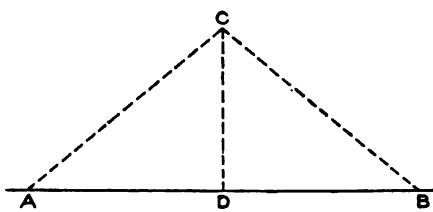


Fig. 6.

town to the other would be the best that could be chosen. On more careful examination however, of the locality, we may find that there is a third town, C, situated somewhat on one side of the straight line

which we have drawn from A to B; and although our primary object is to connect only the two latter, that it would nevertheless be of considerable service if the whole of the three towns were put into mutual connection with each other.

This may be effected in three different ways, any one of which might, under the circumstances, be the best. In the first place, we might, as originally suggested, form a straight road from A to B, and in a similar manner two other straight roads from A to C, and from B to C, and this would be the most perfect way of effecting the object in view, the distance between any of the two towns being reduced to the least possible. It would, however, be attended with

considerable expense, and it would be requisite to construct a much greater length of road than according to the second plan, which would be to form, as before, a straight road from A to B, and from C to construct a road which should join the former at a point D, so as to be perpendicular to it. The traffic between A or B and C would proceed to the point D and then turn off to C. With this arrangement, while the length of the roads would be very materially decreased, only a slight increase would be occasioned in the distance between C and the other two towns. The third method would be to form only the two roads A C and C B, in which case the distance between A and B would be somewhat increased, while that between A C or B and C would be diminished, and the total length of road to be constructed would also be lessened.

As a general rule it may be taken that the last of these methods is the best and most convenient for the public; that is to say, that if the physical character of the country does not determine the course of the road, it will generally be found best not to adopt a perfectly straight line, but to vary the line so as to pass through all the principal towns near its general course.

Mountain Roads. The location of roads in mountainous countries presents greater difficulties than in an ordinary undulating country; the same latitude in adopting undulating grades and choice of position is not permissible, for the maximum must be kept before the eye perpetually. A mountain road has to be constructed on the maximum grade or at grades closely approximating it, and but one fixed point can be obtained before commencing the survey, and that is the lowest pass in the mountain range; from this point the survey must be commenced. The reason for this is that the lower slopes of the mountain are flatter than those at their summit; they cover a larger area, and merge into the valley in diverse undulations. So that a road at a foot of a mountain may be carried at will in the desired direction by more than one route, while at the top of a mountain range any deviation from the lowest pass involves increased length of line. The engineer having less command of the ground, owing to the reduced area he has to deal with and the greater abruptness of the slopes, is liable to be frustrated in his attempt to get his line carried in the desired direction.

It is a common practice to run a mountain survey up hill, but this should be avoided. Whenever an acute-angled zigzag is met with on a mountain road near the summit, the inference to be drawn is that the line being carried up hill on reaching the summit was too low and the zigzag was necessary to reach the desired pass. The only remedy in such a case is by a resurvey beginning at the summit and running down hill. This method requires a reversal of that usually adopted. The grade line is first staked out and its horizontal location surveyed afterwards. The most appropriate instrument for this work is a transit with a vertical circle on which the telescope may be set to the angle of the maximum grade.

Loss of Height. Loss of height is to be carefully avoided in a mountain road. By loss of height is meant an intermediate rise in a descending grade. If a descending grade is interrupted by the introduction of an unnecessary ascent, the length of the road will be increased over that due to the continuous grade by the length of the portion of the road intervening between the summit of the rise and the point in the road on a level with that rise—a length which is double that due on the gradient to the height of the rise. For example, if a road descending a mountain rises at some intermediate point to cross over a ridge or spur, and the height ascended amounts to 110 feet before the descent is continued, such a road would be just one mile longer than if the descent had been uninterrupted; for 110 feet is the rise due to a half-mile length at 1: 24.

Water on Mountain Roads. Water is needed by the workmen and during the construction of the road; it is also very necessary for the traffic, especially during hot weather; and if the road exceeds 5 miles in length, provision should be made to have it either close to or within easy reach of the road. With a little ingenuity the water from springs above the road, if such exist, can be led down to drinking fountains for men, and to troughs for animals.

In a tropical country it would be a matter for serious consideration if the best line for a mountain road 10 miles in length or upwards, but without water, should not be abandoned in favor of a worse line with a water supply available.

Halting Places. On long lines of mountain roads halting places should be provided at frequent intervals.

Alignment. No rule can be laid down for the alignment of a road; it will depend both upon the character of the traffic on it and upon the "lay of the land." To promote economy of transportation it should be straight; but if straightness is obtained at the expense of easy grades that might have been obtained by deflections and increase in length, it will prove very expensive to the community that uses it.

Where curves are necessary, employ the greatest radius possible and never less than fifty feet. They may be circular or parabolic. The parabolic will be found exceedingly useful for joining tangents of unequal length, and for following contour lines; its curvature being least at its beginning and ending, makes the deviations from a straight line less strongly marked than by a circular arc.

When a curve occurs on an ascent, the grade at that place must be diminished in order to compensate for the additional resistance of the curve.

The width of the wheelway on curves must be increased. This increase should be one-quarter of the width for central angles between 90 and 120 degrees, and one-half for angles between 60 and 90 degrees. Excessive crookedness of alignment is to be avoided, for any unnecessary length causes a constant threefold waste; first, of the interest of the capital expended in making that unnecessary portion; secondly, of the ever recurring expense of repairing it; and thirdly, of the time and labor employed on travelling over it.

The curving road around a hill may be often no longer than the straight one over it, for the latter is straight only with reference to the horizontal plane, while it is curved as to the vertical plane; the former is curved as to the horizontal plane, but straight as to the vertical plane. Both lines curve, and we call the one passing over the hill straight only because its vertical curvature is less apparent to our eyes.

The difference in length between a straight road and one which is slightly curved is very small. If a road between two places ten miles apart were made to curve so that the eye could nowhere see farther than one-quarter of a mile of it at once, its length would exceed that of a straight road between the same points by only about four hundred and fifty feet.

Zigzags. The method of surmounting a height by a series of zigzags or by a series of reaches with practicable curves at the turns, is objectionable.

(1) An acute-angled zigzag obliges the traffic to reverse its direction without affording it convenient room for the purpose. The consequence is that with slow traffic a single train of vehicles is brought to a stand, while if two trains of vehicles travelling in opposite directions meet at the zigzag a block ensues.

(2) With zigzags little progress is made towardas the ultimate destination of the road; height is surmounted, but horizontal distance is increased for which there is no necessity or compensation.

(3) Zigzags are dangerous. In case of a runaway down hill the zigzag must prove fatal.

(4) If the drainage cannot be carried clear of the road at the end of each reach, it must be carried under the road in one reach only to appear again at the next, when a second bridge, culvert, or drain will be required, and so on at the other reaches. If the drainage can be carried clear at the termination of each reach, the lengths between the curves will be very short, entailing numerous zigzag curves, which are expensive to construct and maintain.

Final Location. The route being finally determined upon, it requires to be located. This consists in tracing the line, placing a stake at every 100 feet on the straight portions and at every 50 or 25 feet on the curves. At the tangent point of curves, and at points of compound and reverse curves, a larger and more permanent stake should be placed. Lest those stakes should be disturbed in the process of construction, their exact distance from several points outside of the ground to be occupied by the road should be carefully measured and recorded in the notebook, so that they may be replaced. The stakes above referred to show the position of the center line of the road, and form the base line from which all operations of construction are carried on. Levels are taken at each stake, and cross levels are taken at every change of longitudinal slope.

Construction Profile. The construction or working profile is made from the levels obtained on location. It should be drawn to a horizontal scale of 400 feet to the inch and a vertical scale of 20 feet to the inch. Fig. 7 represents a portion of such a profile. The

figures in column A represent the elevation of the ground at every 100 feet, or where a stake has been driven, above datum. The figures in column B are the elevations of the grade above datum. The figures in column C indicate the depth of cutting or height of fill; they are obtained by taking the difference between the level of the road and the level of the surface of the ground. The straight line

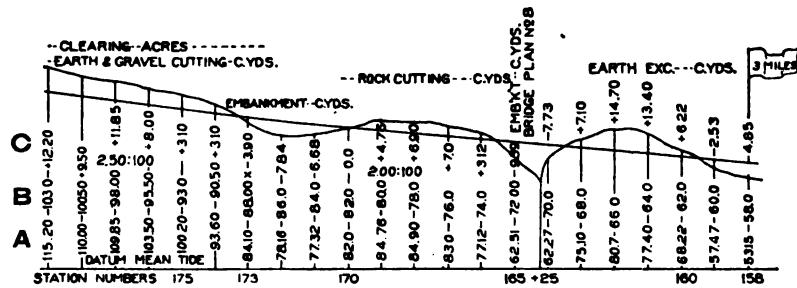


Fig. 7.

at the top represents the grade of the road; the upper surface of the road when finished would be somewhat higher than this, while the given line represents what is termed the sub-grade or formation level. All the dimensions refer to the formation level, to which the surface of the ground is to be formed to receive the road covering.

At all changes in the rate of inclination of the grade line a heavier vertical line should be drawn.

Gradient. The grade of a line is its longitudinal slope, and is designated by the proportion between its length and the difference of height of its two extremes. The ratio of these two qualities gives it its name; if the road ascends or falls one foot in every twenty feet of its length, it is said to have a grade of 1: 20 or a 5 per cent grade. Grades are of two kinds, maximum and minimum. The maximum is the steepest which is to be permitted and which on no account is to be exceeded. The minimum is the least allowable for good drainage. (For method of designating grades see Table 9).

Determination of Gradients. The maximum grade is fixed by two considerations, one relating to the power expended in ascending, the other to the acceleration in descending the incline.

There is a certain inclination, depending upon the degree of perfection given to the surface of the road, which cannot be exceeded.

without a direct loss of tractive power. This inclination is that in descending which, at a uniform speed, the traces slacken, or which causes the vehicles to press on the horses; the limiting inclination within which this effect does not take place is the angle of repose.

TABLE 9.

American method. Feet per 100 feet.	English method.	Feet per mile.	Angle with the horizon.
$\frac{1}{2}$	1 : 400	13.2	0° 8' 36"
$\frac{3}{4}$	1 : 200	26.4	0 17 11
$\frac{5}{4}$	1 : 150	39.6	0 22 55
1	1 : 100	52.8	0 34 23
$1\frac{1}{4}$	1 : 80	66	0 42 58
$1\frac{1}{2}$	1 : 66 $\frac{2}{3}$	79.2	0 51 28
$1\frac{3}{4}$	1 : 57 $\frac{1}{3}$	92.4	1 0 51
2	1 : 50	105.6	1 8 6
$2\frac{1}{4}$	1 : 44 $\frac{1}{3}$	118.8	1 17 39
$2\frac{1}{2}$	1 : 40	132	1 25 57
$2\frac{3}{4}$	1 : 36 $\frac{1}{3}$	145.2	1 34 22
3	1 : 33 $\frac{1}{3}$	158.4	1 43 08
$3\frac{1}{4}$	1 : 30 $\frac{1}{3}$	171.6	1 51 42
$3\frac{3}{4}$	1 : 28 $\frac{1}{3}$	184.8	2 0 16
$3\frac{1}{2}$	1 : 26 $\frac{1}{3}$	198	2 8 51
4	1 : 25	211.2	1 17 26
$4\frac{1}{4}$	1 : 23 $\frac{1}{3}$	224.4	2 26 10
$4\frac{1}{2}$	1 : 22 $\frac{1}{3}$	237.6	2 34 36
$4\frac{3}{4}$	1 : 21	250.8	2 43 35
5	1 : 20	264	2 51 44
6	1 : 13 $\frac{2}{3}$	316.8	3 26 12
7	1 : 14 $\frac{1}{3}$	369.6	4 0 15
8	1 : 12 $\frac{1}{3}$	422.4	4 34 26
9	1 : 11 $\frac{1}{3}$	475.2	5 8 31
10	1 : 10	528	5 42 37

The angle of repose for any given road surface can be easily ascertained from the tractive force required upon a level with the same character of surface. Thus if the force necessary on a level to overcome the resistance of the load is $\frac{1}{40}$ of its weight, then the same fraction expresses the angle of repose for that surface.

On all inclines less steep than the angle of repose a certain amount of tractive force is necessary in the descent as well as in the ascent, and the mean of the two drawing forces, ascending and descending, is equal to the force along the level of the road. Thus on such inclines, as much mechanical force is gained in the descent as is lost in the ascent. From this it might be inferred that when a vehicle passes alternately each way along the road, no real loss is

occasioned by the inclination of the road; such is not, however, practically the fact with animal power, for while it is necessary in the ascending journey to have either a less or a greater number of horses than would be requisite if the road were entirely level, no corresponding reduction can be made in the descending journey. On inclines which are more steep than the angle of repose, the load presses on the horses during their descent, so as to impede their action, and their power is expended in checking the descent of the load; or if this effect be prevented by the use of any form of drag or brake, then the power expended on such a drag or brake corresponds to an equal quantity of mechanical power expended in the ascent, for which no equivalent is obtained in the descent.

The maximum grade for a given road will depend (1) upon the class of traffic that will use it, whether fast and light, slow and heavy, or mixed, consisting of both light and heavy; (2) upon the character of the pavement adopted; and (3) upon the question of cost of construction. Economy of motive power and low cost of construction are antagonistic to each other, and the engineer will have to weigh the two in the balance.

For fast and light traffic the grades should not exceed 2 per cent; for mixed traffic 3 per cent may be adopted; while for slow traffic combined with economy 5 per cent should not be exceeded. This grade is practicable but not convenient.

Minimum Grade. From the previous considerations it would appear that an absolutely level road was the one to be sought for, but this is not so; there is a minimum or least allowable grade which the road must not fall short of, as well as a maximum one which it must not exceed. If the road was perfectly level in its longitudinal direction, its surface could not be kept free from water without giving it so great a rise in its middle as would expose vehicles to the danger of overturning. The minimum grade commonly used is 1 per cent.

Undulating Grades. From the fact that the power required to move a load at a given velocity on a level road is decreased on a descending grade to the same extent it is increased in ascending the same grade, it must not be inferred that the animal force expended in passing alternately each way over a rising and falling road will gain as much in descending the several inclines as it will lose in ascend-

ing them. Such is not the case. The animal force must be sufficient, either in power or number, to draw the load over the level portions and up the steepest inclines of the road, and in practice no reduction in the number of horses can be made to correspond with the decreased power required in descending the inclines.

The popular theory that a gentle undulating road is less fatiguing to horses than one which is perfectly level is erroneous. The assertion that the alternations of ascent, descent, and levels call into play different muscles, allowing some to rest while others are exerted, and thus relieving each in turn, is demonstrably false, and contradicted by the anatomical structure of the horse. Since this doctrine is a mere popular error, it should be utterly rejected, not only because false in itself, but still more because it encourages the building of undulating roads, and this increases the labor and cost of transportation upon them.

Level Stretches. On long ascents it is generally recommended to introduce level or nearly level stretches at frequent intervals in order to rest the animals. These are objectionable when they cause loss of height, and animals will be more rested by halting and unharnessing for half an hour than by travelling over a level portion. The only case which justifies the introduction of levels into an ascending road is where such levels will advance the road towards its objective point; where this is the case there will be no loss of either length or height, and it will simply be exchanging a level road below for a level road above.

Establishing the Grade. When the profile of a proposed route has been made, a grade line is drawn upon it (usually in red) in such a manner as to follow its general slope, but to average its irregular elevation and depressions.

If the ratio between the whole distance and the height of the line is less than the maximum grade intended to be used, this line will be satisfactory; but if it be found steeper, the cuttings or the length of the line will have to be increased; the latter is generally preferable.

The apex or meeting point of all curves should be rounded off by a vertical curve, as shown in Fig. 8, thus slightly changing the grade at and near the point of intersection. A vertical curve rarely need extend more than 200 feet each way from that point.

Let A B, B C, be two grades in profile, intersecting at station B, and let A and C be the adjacent stations. It is required to join the

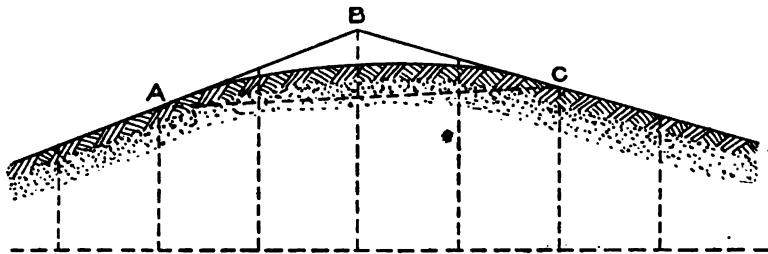


Fig. 8.

grades by a vertical curve extending from A to C. Imagine a chord drawn from A to C. The elevation of the middle point of the chord will be a mean of the elevations of the grade at A and C, and one-half of the difference between this and the elevation of the grade at B will be the middle ordinate of the curve. Hence we have

$$M = \frac{1}{2} \left(\frac{\text{grade A} + \text{grade C}}{2} - \text{grade B} \right),$$

in which M equals the correction in grade for the point B. The correction for any other point is proportional to the square of its distance from A or C. Thus the correction A + 25 is $\frac{1}{15} M$; at A + 50 it is $\frac{1}{4} M$; at A + 75 it is $\frac{9}{16} M$; and the same for corresponding points on the other side of B. The corrections in this case shown are subtractive, since M is negative. They are additive when M is positive, and the curve concave upward.

WIDTH AND TRANSVERSE CONTOUR.

A road should be wide enough to accommodate the traffic for which it is intended, and should comprise a wheelway for vehicles and a space on each side for pedestrians.

The wheelway of country highways need be no wider than is absolutely necessary to accommodate the traffic using it; in many places a track wide enough for a single team is all that is necessary. But the breadth of the land appropriated for highway purposes should be sufficient to provide for all future increase of traffic. The wheelways of roads in rural sections should be double; that is, one portion paved (preferably the center), and the other left with the

natural soil. The latter if kept in repair will for at least one-half the year be preferred by teamsters.

The minimum width of the paved portion, if intended to carry two lines of travel, is fixed by the width required to allow two vehicles to pass each other safely. This width is 16 feet. If intended for a single line of travel, 8 feet is sufficient, but suitable turnouts must be provided at frequent intervals. The most economical width for any roadway is some multiple of eight.

Wide roads are the best; they expose a larger surface to the drying action of the sun and wind, and require less supervision than narrow ones. Their first cost is greater than narrow ones, and that nearly in the ratio of the increased width.

The cost of maintaining a mile of road depends more upon the extent of the traffic than upon the extent of its surface, and unless extremes be taken, the same quantity of material will be necessary for the repair of the road whether wide or narrow, which is subjected to the same amount of traffic. The cost of spreading the materials over the wide road will be somewhat greater, but the cost of the materials will be the same. On narrow roads the traffic, being confined to one track, will wear more severely than if spread over a wider surface.

The width of land appropriated for road purposes varies in the United States from $49\frac{1}{2}$ feet to 66 feet; in England and France from 26 to 66 feet. And the width or space macadamized is also subject to variation; in the United States the average width is 16 feet; in France it varies between 16 and 22 feet; in Belgium $8\frac{1}{2}$ feet seems to be the regular width, while in Austria from $14\frac{1}{2}$ to $26\frac{1}{2}$ feet.

Transverse Contour. The center of all roadways should be higher than the sides. The object of this is to facilitate the flow of the rain water to the gutters. Where a good surface is maintained a very moderate amount of rise is sufficient for this purpose. Earth roads require the most and asphalt the least. The rise should bear a certain proportion to the width of the carriageway. The most suitable proportions for the different paving materials is shown in table 10.

Form of Transverse Contour. All authorities agree that the form should be convex, but they differ in the amount and form

of the convexity. Circular arcs, two straight lines joined by a circular arc, and ellipses, all have their advocates.

TABLE 10.

Kind of Surface.	Rise at center	Proportions of the Carriageway. Width.
Earth	" " "	$\frac{1}{6}$
Gravel	" " "	$\frac{1}{8}$
Broken Stone	" " "	$\frac{1}{10}$

For country roads a curve of suitable convexity may be obtained as follows: Give $\frac{1}{8}$ of the total rise at $\frac{1}{4}$ the width from the center to the side, and $\frac{1}{2}$ of the total rise at $\frac{1}{2}$ the width (Fig. 9).

Excessive height and convexity of cross-section contract the width of the wheelway, by concentrating the traffic at the center, that being the only part where a vehicle can run upright. The force required to haul vehicles over such cross-sections is increased, be-

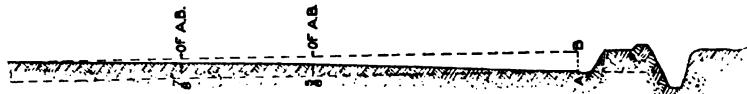


Fig. 9.

cause an undue proportion of the load is thrown upon two wheels instead of being distributed equally over the four. The continual tread of horses' feet in one track soon forms a depression which holds water, and the surface is not so dry as with a flat section, which allows the traffic to distribute itself over the whole width.

Sides formed of straight lines are also objectionable. They wear hollow, retain water, and defeat the object sought by raising the center.

The required convexity should be obtained by rounding the formation surface, and not by diminishing the thickness of the covering at the sides.

Although on hillside and mountain roads it is generally recommended that the surface should consist of a single slope inclining inwards, there is no reason for or advantage gained by this method. The form best adapted to these roads is the same as for a road under ordinary conditions.

With a roadway raised in the center and the rain water draining off to gutters on each side, the drainage will be more effectual and

speedy than if the drainage of the outer half of the road has to pass over the inner half. The inner half of such a road is usually subjected to more traffic than the outer half. If formed of a straight incline, this side will be worn hollow and retain water. The inclined flat section never can be properly repaired to withstand the traffic. Consequently it never can be kept in good order, no matter how constantly it may be mended. It is always below par and when heavy rain falls it is seriously damaged.

DRAINAGE.

In the construction of roads, drainage is of the first importance. The ability of earth to sustain a load depends in a large measure upon the amount of moisture retained by it. Most earths form a good firm foundation so long as they are kept dry, but when wet they lose their sustaining power, becoming soft and incoherent.

The drainage of roadways is of two kinds, viz., surface and sub-surface. The first provides for the speedy removal of all water falling on the surface of the road; the second provides for the removal of the underground water found in the body of the road, a thorough removal of which is of the utmost importance and essential to the life of the road. A road covering placed on a wet undrained bottom will be destroyed by both water and frost, and will always be troublesome and expensive to maintain; perfect subsoil drainage is a necessity and will be found economical in the end even if in securing it considerable expense is required.

The methods employed for securing the subsoil drainage must be varied according to the character of the natural soil, each kind of soil requiring different treatment.

The natural soil may be divided into the following classes: silicious, argillaceous, and calcareous; rock, swamps, and morasses.

The silicious and calcareous soils, the sandy loams and rock, present no great difficulty in securing a dry and solid foundation. Ordinarily they are not retentive of water and therefore require no underdrains; ditches on each side of the road will generally be found sufficient.

The argillaceous soils and softer marls require more care; they retain water and are difficult to compact, except at the surface; and they are very unstable under the action of water and frost.

The drainage of these soils may be effected by transverse drains and deep side ditches of ample width. The transverse drains are placed across the road, not at right angles but in the form of an inverted V with the point directed up hill; the depth at the angle point should not be less than 18 inches below the subgrade surface, and each branch should descend from the apex to the side ditches with a fall of not less than 1 inch in 5 feet. The distance apart of these drains will depend upon the wetness of the soil; in the case of very wet soil they should be at intervals of 15 feet, which may be increased to 25 feet as the ground becomes drier and firmer.

The transverse drains are best formed of unglazed circular tile of a diameter not less than 3 inches, jointed with loose collars. The tiles are made from terra cotta or burnt clay, are porous, and are superior to all other kinds of drains. They carry off the water with greater ease, rarely if ever get choked up, and only require a slight inclination to keep the water moving through them.

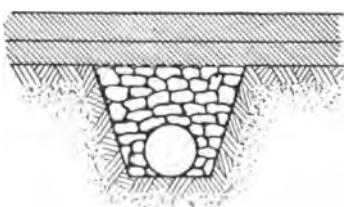


Fig. 10. Tile Drain.

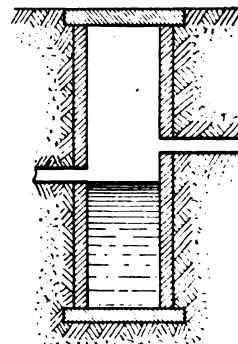


Fig. 11. Silt Basin.

The tiles are made in a variety of forms, as horseshoe, sole, double sole, and round, the name being derived from the shape of the cross-sections. Round tile is superior to all other forms. The inside diameter of these tiles varies from $1\frac{1}{2}$ to 6 inches, but they are manufactured as large as 24 inches. Pieces of the larger pipe serve as collars for the smaller ones. They are made in lengths of 12, 14 and 24 inches, and in thickness of shell from $\frac{1}{4}$ of an inch to 1 inch.

The collar which encircles the joint of the small tile allows a large opening, and at the same time prevents sand and silt from

entering the drain. Perishable material should not be used for jointing. When laid in the ditch they should be held in place by small stones. Connections should be made by proper Y-branches.

The outlets may be formed by building a dwarf wall of brick or stone, whichever is the cheapest or most convenient in the locality. The outlet should be covered with an iron grating to prevent vermin entering the drain pipes, building nests and thus choking up the waterway. (See Fig. 12.)

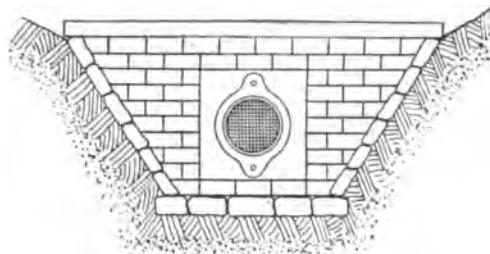


Fig. 12. Outlet.

Silt-basins should be constructed at all junctions and wherever else they may be considered necessary; they may be made from a single 6-inch pipe (Fig. 11) or constructed of brick masonry.

The trenches for the tile should be excavated at least 3 feet wide on top and 12 inches on the bottom. After the tiles are laid the trenches must be filled to subgrade level with round field or cobble stones; stones with angular edges are unsuitable for this purpose. Fine gravel, sand, or soil should not be placed over the drains. Bricks and flat stones may be substituted for the tiles, and the trenches filled as above stated.

As tile drains are more liable to injury from frost than those of either brick or stone, their ends at the side ditches should not in very cold climates be exposed directly to the weather, but may terminate in blind drains, or a few lengths of vitrified clay pipe reaching under the road a distance of about 3 to 4 feet from the inner slope of the ditch.

Another method of draining the roadbed offering security from frost is by one or more rows of longitudinal drains. These drains are placed at equal distances from the side ditches and from each other, and discharge into cross drains placed from 250 to 300 feet

apart, more or less, depending on the contour of the ground. The cross drains into which they discharge should be of ample dimensions. On these longitudinal lines of tiles the introduction of catch basins at intervals of 50 feet will facilitate the removal of the water. These catch basins may be excavated three or more feet square and as deep as the tiles are laid. After the tiles are laid the pit is filled with gravel and small stones.



Fig. 13.

Fall of Drains. It is a mistake to give too much fall to small drains, the only effect of which is to produce such a current through them as will wash away or undermine the ground around them, and ultimately cause their own destruction. When a drain is once closed by any obstruction no amount of fall which could be given it will

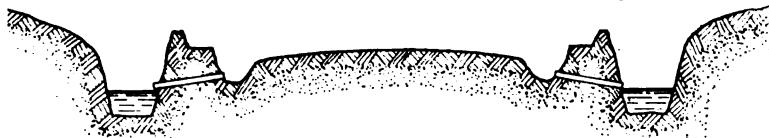


Fig. 14.

again clear the passage. A drain with a considerable current through it is much more likely to be stopped from foreign matter carried into it, which a less rapid stream could not have transported.

A fall of 1 inch in 5 feet will generally be sufficient, and 1 inch in 30 inches should never be exceeded.

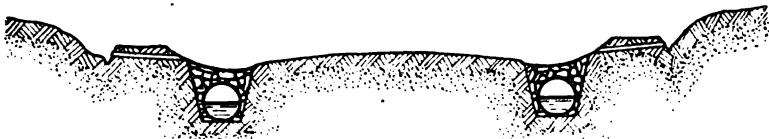


Fig. 15.

Side Ditches are provided to carry away the subsoil water from the base of the road, and the rain water which falls upon its surface; to do this speedily they must have capacity and inclination

proportionate to the amount of water reaching them. The width of the bed should not be less than 18 inches; the depth will vary with circumstances, but should be such that the water surface shall not reach the subgrade, but remain at least 12 inches below the crown of the road. The sides should slope at least $1\frac{1}{2}$ to 1.

The longitudinal inclination of the ditch follows the configuration of the general topography, that is, the lines of natural drainage. When the latter has to be aided artificially, grades from 1 in 500 to 1 in 800 will usually answer.

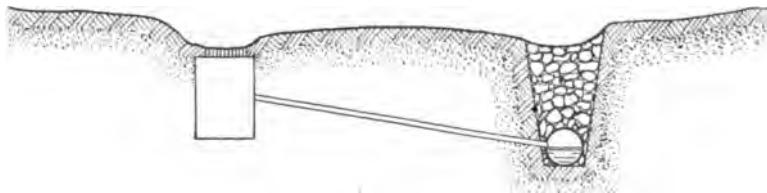


Fig. 16.

In absorbent soil less fall is sufficient, and in certain cases level ditches are permissible. The slopes of the ditches must be protected where the grade is considerable. This can be accomplished by sod revetments, ripraping, or paving.

These ditches may be placed either on the road or land side of the fence. In localities where open ditches are undesirable they may be constructed as shown in Figs. 13 to 17, and may be formed of stone

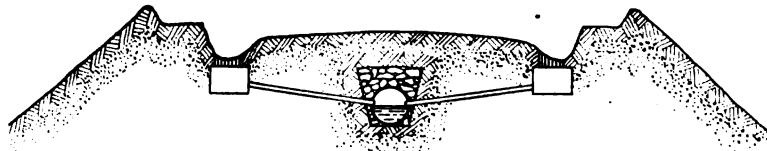


Fig. 17.

or tile pipe, according to the availability of either material. If for any reason two can not be built, build one.

Springs found in the roadbed should be tapped and led into the side ditches.

Drainage of the Surface. The drainage of the roadway surface depends upon the preservation of the cross-section, with regular and uninterrupted fall to the sides, without hollows or ruts in which the water can lie, and also upon the longitudinal fall of the

road. If this is not sufficient the road becomes flooded during heavy rainstorms and melting snow, and is considerably damaged.

The removal of surface water from country roads may be effected by the side ditches, into which, when there are no sidewalks, the water flows directly. When there are sidewalks, gutters are formed between the roadway and footpath, as shown in Figs. 13 to 17, and the water is conducted from these gutters into the side ditches by tile pipes laid under the walks at intervals of about 50 feet. The entrance to these pipes should be protected against washing by a rough stone paving. In the case of covered ditches under the footpath the water must be led into them by first passing through a catch basin. These are small masonry vaults covered with iron gratings to prevent the ingress of stones, leaves, etc. Connection from the catch basin is made by a tile pipe about 6 inches in diameter. The mouth of this pipe is placed a few feet above the bottom of the catch basin, and the space below it acts as a depository for the silt carried by the water, and is cleaned out periodically. The catch basins may be placed from 200 to 300 feet apart. They should be made of dimensions sufficient to convey the amount of water which is liable to flow into them during heavy and continuous rains.

If on inclines the velocity of the water is greater than the nature of the soil will withstand, the gutters will be roughly paved. In all cases, the slope adjoining the footpath should be covered with sod.

A velocity of 30 feet a minute will not disturb clay with sand and stone. 40 feet per minute will move coarse sand. 60 feet a minute will move gravel. 120 feet a minute should move round pebbles 1 inch in diameter, and 180 feet a minute will move angular stones $1\frac{1}{4}$ inches in diameter.

The scour in the gutters on inclines may be prevented by small weirs of stones or fascines constructed by the roadmen at a nominal cost. At junctions and crossroads the gutters and side ditches require careful arrangement so that the water from one road may not be thrown upon another; cross drains and culverts will be required at such places.

Water Breaks to turn the surface drainage into the side ditches should not be constructed on improved roads. They increase the grade and are an impediment to convenient and easy travel. Where

it is necessary that water should cross the road a culvert should be built.

On the side hill or mountain roads catch-water ditches should be cut on the mountain side above the road, to cut off and convey the drainage of the ground above them to the neighboring ravines. The size of these ditches will be determined by the amount of rainfall, extent of drainage from the mountain which they intercept, and by the distances of the ravine water courses on each side.

The inner road gutter should be of ample dimensions to carry off the water reaching it; when in soil, it should be roughly paved with stone. When paving is not absolutely necessary, but it is desirable to arrest the scouring action of running water during heavy rains, stone weirs may be erected across the gutter at convenient intervals. The outer gutter need not be more than 12 inches wide and 9 inches deep. The gutter is formed by a depression in the surface of the road close to the parapet or revetted earthen protection mound. The drainage which falls into this gutter is led off through the parapet, or other roadside protection at frequent intervals. The guard stones on the outside of the road are placed in and across this gutter, just below the drainage holes, so as to turn the current of the drainage into these holes or channels. On straight reaches, with parapet protection, drainage holes with guard stones should be placed every 20 feet apart. Where earthen mounds are used and it may not be convenient to have the drainage holes or channels every 20 feet, the guardstones are to be placed in advance of the gutter to allow the drainage to pass behind them. This drainage is either to be run off at the cross drainage of the road, or to be turned off as before by a guard stone set across the gutter.

At re-entering turns, where the outer side of the road requires particular protection, guard stones should be placed every 4 feet. As all re-entering turns should be protected by parapets, the drainage holes through them may be placed as close together as desired.

Culverts are necessary for carrying under a road the streams it crosses, and also for conveying the surface water collected in the side ditches from the upper side to that side on which the natural water courses lie.

Especial care is required to provide an ample way for the water

to be passed. If the culvert is too small, it is liable to cause a washout, entailing interruption of traffic and cost of repairs, and possibly may cause accidents that will require payment of large sums for damages. On the other hand, if the culvert is made unnecessarily large, the cost of construction is needlessly increased.

The area of waterway required depends (1) upon the rate of rainfall; (2) the kind and condition of the soil; (3) the character and inclination of the surface; (4) the condition and inclination of the bed of the stream; (5) the shape of the area to be drained, and the position of the branches of the stream; (6) the form of the mouth and the inclination of the bed of the culvert; and (7) whether it is permissible to back the water up above the culvert, thereby causing it to discharge under a head.

(1) It is the maximum rate of rainfall during the severest storms which is required in this connection. This varies greatly in different sections of the country.

The maximum rainfall as shown by statistics is about one inch per hour (except during heavy storms), equal to 3,630 cubic feet per acre. Owing to various causes, not more than 50 to 75 per cent of this amount will reach the culvert within the same hour.

Inches of rainfall \times 3,630 = cubic feet per acre.

Inches of rainfall \times 2,323,200 = cubic feet per square mile.

(2) The amount of water to be drained off will depend upon the permeability of the surface of the ground, which will vary greatly with the kind of soil, the degree of saturation, the condition of the cultivation, the amount of vegetation, etc.

(3) The rapidity with which the water will reach the water course depends upon whether the surface is rough or smooth, steep or flat, barren or covered with vegetation, etc.

(4) The rapidity with which the water will reach the culvert depends upon whether there is a well-defined and unobstructed channel, or whether the water finds its way in a broad thin sheet. If the water course is unobstructed and has a considerable inclination, the water may arrive at the culvert nearly as rapidly as it falls; but if the channel is obstructed, the water may be much longer in passing the culvert than in falling.

(5) The area of waterway depends upon the amount of the area

to be drained; but in many cases the shape of this area and the position of the branches of the stream are of more importance than the amount of the territory. For example, if the area is long and narrow, the water from the lower portion may pass through the culvert before that from the upper end arrives; or, on the other hand, if the upper end of the area is steeper than the lower, the water from the former may arrive simultaneously with that from the latter. Again, if the lower part of the area is better supplied with branches than the upper portion, the water from the former will be carried past the culvert before the arrival of that from the latter; or, on the other hand, if the upper part is better supplied with branch water courses than the lower, the water from the whole area may arrive at the culvert at nearly the same time. In large areas the shape of the area and the position of the water courses are very important considerations.

(6) The efficiency of a culvert may be very materially increased by so arranging the upper end that the water may enter into it without being retarded. The discharging capacity of a culvert can be greatly increased by increasing the inclination of its bed, provided the channel below will allow the water to flow away freely after having passed the culvert.

(7) The discharging capacity of a culvert can be greatly increased by allowing the water to dam up above it. A culvert will discharge twice as much under a head of four feet as under a head of one foot. This can be done safely only with a well constructed culvert.

The determination of the values of the different factors entering into the problem is almost wholly a matter of judgment. An estimate for any one of the above factors is liable to be in error from 100 to 200 per cent, or even more, and of course any result deduced from such data must be very uncertain. Fortunately, mathematical exactness is not required by the problem nor warranted by the data. The question is not one of 10 or 20 per cent of increase; for if a 2-foot pipe is sufficient, a 3-foot pipe will probably be the next size, an increase of 225 per cent; and if a 6-foot arch culvert is too small, an 8-foot will be used; an increase of 180 per cent. The real question is whether a 2-foot pipe or an 8-foot arch culvert is needed.

Valuable data on the proper size of any particular culvert may be obtained (1) by observing the existing openings on the same

stream; (2) by measuring, preferably at time of high water, a cross-section of the stream at some narrow place; and (3) determining the height of high water as indicated by drift and the evidence of the inhabitants of the neighborhood.

On mountain roads or roads subjected to heavy rainfall culverts of ample dimensions should be provided wherever required, and it will be more economical to construct them of masonry. In localities where boulders and other debris are likely to be washed down during wet weather, it will be a good precaution to construct catch pools at the entrance of all culverts and cross drains for the reception of such matter. In hard soil or rock these catch pools will be simple well-like excavations, with their bottom two or three feet below the entrance sill or floor of the culvert or drain. Where the soil is soft they should be lined with stone laid dry; if very soft, with masonry. The size of the catch pools will depend upon the width of the drainage works. They should be wide enough to prevent the drains from being injured by falling rocks and stones of a not inordinate size.

The use of catch pools obviates the necessity of building culverts and drains at an angle to the axis of the road. Oblique structures are objectionable, as being longer than if set at right angles and by reason of the acute- and obtuse-angled terminations to their piers, abutments, and coverings.

Materials for Culverts. Culverts may be of stone, brick, vitrified earthenware, or iron pipe. Wood should be absolutely avoided.

For small streams and a limited surface of rainfall either class of pipes, in sizes varying from 12 to 24 inches in diameter, will serve excellently. They are easily laid, and if properly bedded, with the earth tamped about them, are very permanent. Their upper surface should be at least 18 inches below the road surface, and the upper end should be protected with stone paving so arranged that the water can in no case work in around the pipe.

When the flow of water is estimated to be too great for two lines of 24-inch pipes, a culvert is required. If stone abounds, it may be built of large roughly squared stones laid either dry or in mortar. When the span required is more than 5 feet, arch culverts either of stone or brick masonry may be employed. For spans above 15 feet the structure required becomes a bridge.

Earthenware Pipe Culverts. *Construction.* In laying the pipe the bottom of the trench should be rounded out to fit the lower half of the body of the pipe with proper depressions for the sockets. If the ground is soft or sandy, the earth should be rammed carefully, but solidly in and around the lower part of the pipe. The top surface of the pipe should, as a rule, never be less than 18 inches below the surface of the roadway, but there are many cases where pipes have stood for several years under heavy loads with only 8 to 12 inches of earth over them. No danger from frost need be apprehended, provided the culverts are so constructed that the water is carried away from the level end. Ordinary soft drain tiles are not in the least affected by the expansion of frost in the earth around them.

The freezing of water in the pipe, particularly if more than half full, is liable to burst it; consequently the pipe should have a sufficient fall to drain itself, and the outside should be so low that there is no danger of back waters reaching the pipe. If properly drained, there is no danger from frost.

Jointing. In many cases, perhaps in most, the joints are not calked. If this is not done, there is liability of the water being forced out of the joints and washing away the soil from around the pipe. Even if the danger is not very imminent, the joints of the larger pipes, at least, should be calked with hydraulic cement, since the cost is very small compared with the insurance against damage

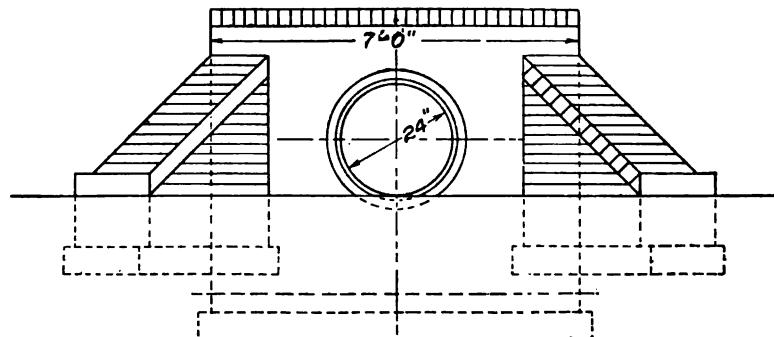


Fig. 18.

thereby secured. Sometimes the joints are calked with clay. Every culvert should be built so that it can discharge water under a head without damage to itself.

Although often omitted, the end sections should be protected with a masonry or timber bulkhead. The foundation of the bulkhead should be deep enough not to be disturbed by frost. In constructing the end wall, it is well to increase the fall near the outlet to allow for a possible settlement of the interior sections. When stone and brick abutments are too expensive, a fair substitute can be made by setting posts in the ground and spiking plank to them. When planks are used, it is best to set them with considerable inclination towards the roadbed to prevent their being crowded outward by the pressure of the embankment. The upper end of the culvert should be so protected that the water will not readily find its way

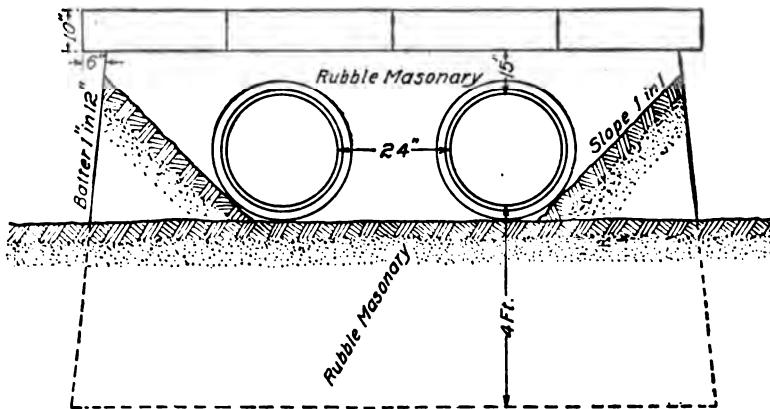


Fig. 19

along the outside of the pipes, in case the mouth of the culvert should become submerged.

When the capacity of one pipe is not sufficient, two or more may be laid side by side as shown in Fig. 19. Although the two small pipes do not have as much discharging capacity as a single large one of equal cross-section, yet there is an advantage in laying two small ones side by side, since the water need not rise so high to utilize the full capacity of the two pipes as would be necessary to discharge itself through a single one of large size.

Iron Pipe Culverts. During recent years iron pipe has been used for culverts on many prominent railroads, and may be used on roads in sections where other materials are unavailable.

In constructing a culvert with cast-iron pipe the points requiring

particular attention are (1) tamping the soil tightly around the pipe to prevent the water from forming a channel along the outside, and (2) protecting the ends by suitable head walls and, when necessary, laying riprap at the lower end. The amount of masonry required for the end walls depends upon the relative width of the embankment and the number of sections of pipe used. For example, if the embankment is, say, 40 feet wide at the base, the culvert may consist of three 12-foot lengths of pipe and a light end wall near the toe of the bank; but if the embankment is, say, 32 feet wide, the culvert may consist of two 12-foot lengths of pipe and a comparatively heavy end wall well back from the toe of the bank. The smaller sizes of pipe usually come in 12-foot lengths, but sometimes a few 6-foot

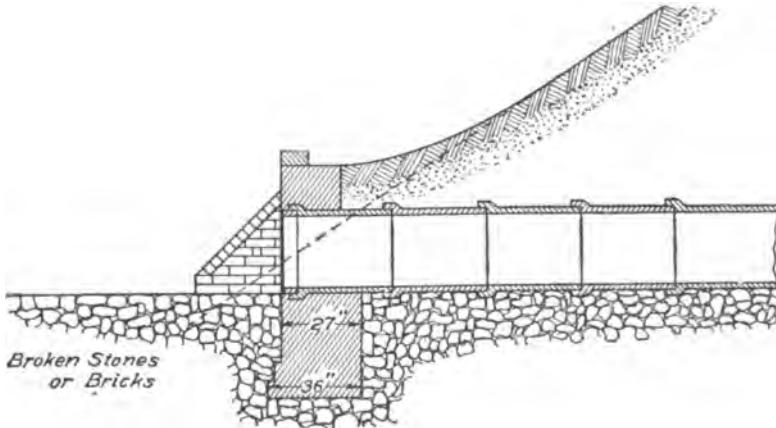


Fig. 20. Section of Pipe Culvert

lengths are included for use in adjusting the length of the culvert to the width of the bank. The larger sizes are generally 6 feet long.

EARTHWORK.

The term "earthwork" is applied to all the operations performed in the making of excavation and embankments. In its widest sense it comprehends work in rock as well as in the looser materials of the earth's crust.

Balancing Cuts and Fills. In the construction of new roads, the formation of the roadbed consists in bringing the surface of the ground to the adopted grade. This grade should be established so as

to reduce the earthwork to the least possible amount, both to render the cost of construction low, and to avoid unnecessary marring the appearance of the country in the vicinity of the road. The most desirable position of the grade line is usually that which makes the amount of cutting and filling equal to each other, for any surplus embankment over cutting must be made up by borrowing, and surplus cutting must be wasted, both of these operations involving additional cost for labor and land.

Inclination of Side Slopes. The proper inclination for the side slopes of cutting and embankments depends upon the nature of the soil, the action of the atmosphere and of internal moisture upon it. For economy the inclination should be as steep as the nature of the soil will permit.

The usual slopes in cuttings are:

Solid rock.	1 to 1
Earth and Gravel.	3½ to 1
Clay.	3 or 6 to 1
Fine sand.	2 or 3 to 1

The slopes of embankment are usually made 1½ to 1.

Form of Side Slopes. The natural, strongest, and ultimate form of earth slopes is a concave curve, in which the flattest portion is at the bottom. This form is very rarely given to the slopes in constructing them; in fact, the reverse is often the case, the slopes being made convex, thus saving excavation by the contractor and inviting slips.

In cuttings exceeding 10 feet in depth the forming of concave slopes will materially aid in preventing slips, and in any case they will



Fig. 21. Cross-Section for Embankment.

reduce the amount of material which will eventually have to be removed when cleaning up. Straight or convex slopes will continue to slip until the natural form is attained.

A revetment or retaining wall at the base of a slope will save excavation.

In excavations of considerable depth, and particularly in soils liable to slips, the slope may be formed in terraces, the horizontal offsets or benches being made a few feet in width with a ditch on the inner side to receive the surface water from the portion of the side slope above them. These benches catch and retain earth that may fall from the slopes above them. The correct forms for the slopes of embankment and excavation are shown in Figs. 21 and 22.

Covering of Slopes. It is not usual to employ any artificial means to protect the surface of the side slopes from the action of the weather; but it is a precaution which in the end will save much labor



Fig. 22. Cross-Section for Excavation.

and expense in keeping the roadways in good order. The simplest means which can be used for this purpose consists in covering the slopes with good sods, or else with a layer of vegetable mould about four inches thick, carefully laid and sown with grass seed. These means are amply sufficient to protect the side slopes from injury when they are not exposed to any other cause of deterioration than the wash of the rain and the action of frost on the ordinary moisture retained by the soil.

A covering of brushwood or a thatch of straw may also be used with good effect; but from their perishable nature they will require frequent renewal and repairs.

Where stone is abundant a small wall of stone laid dry may be constructed at the foot of the slopes to prevent any wash from them being carried into the ditches.

Shrinkage of Earthwork. All materials when excavated increase in bulk, but after being deposited in banks subside or shrink (rock excepted) until they occupy less space than in the pit from which excavated.

Rock, on the other hand, increases in volume by being broken up, and does not settle again into less than its original bulk. The increase may be taken at 50 per cent.

The shrinkage in the different materials is about as follows:

Gravel.....	8 per cent
Gravel and sand.....	9 " "
Clay and clay earths.....	10 " "
Loam and light sandy earths.....	12 " "
Loose vegetable soil.....	15 " "
Puddled clay.....	25 " "

Thus an excavation of loam measuring 1,000 cubic yards will form only about 880 cubic yards of embankment, or an embankment of 1,000 cubic yards will require about 1,120 cubic yards measured in excavation to make it. A rock excavation measuring 1,000 yards will make from 1,500 to 1,700 cubic yards of embankment, depending upon the size of the fragments.

The lineal settlement of earth embankments will be about in the ratio given above; therefore either the contractor should be instructed in setting his poles to guide him as to the height of grade on an earth embankment to add the required percentage to the fill marked on the stakes, or the percentage may be included in the fill marked on the stakes. In rock embankments this is not necessary.

Classification of Earthwork. Excavation is usually classified under the heads *earth*, *hardpan*, *loose rock*, and *solid rock*. For each of these classes a specific price is usually agreed upon, and an extra allowance is sometimes made when the haul or distance to which the excavated material is moved exceeds a given amount.

The characteristics which determine the classes to which a given material belongs are usually described with clearness in the specifications, as:

Earth will include loam, clay, sand, and loose gravel.

Hardpan will include cemented gravel, slate, cobbles, and boulders containing less than one cubic foot, and all other matters of an earthy nature, however compact they may be.

Loose rock will include shale, decomposed rock, boulders, and detached masses of rock containing not less than three cubic feet, and all other matters of a rock nature which may be loosened with a pick, although blasting may be resorted to in order to expedite the work.

Solid rock will include all rock found in place in ledges and

masses, or boulders measuring more than three cubic feet, and which can only be removed by blasting.

Prosecution of Earthwork. No general rule can be laid down for the exact method of carrying on an excavation and disposing of the excavated material. The operation in each case can only be determined by the requirements of the contract, character of the material, magnitude of the work, length of haul, etc.

Formation of Embankments. Where embankments are to be formed of less than two feet in height, all stumps, weeds, etc. should be removed from the space to be occupied by the embankment. For embankments exceeding two feet in height stumps need only be close cut. Weeds and brush, however, ought to be removed and if the surface is covered with grass sod, it is advisable to plow a furrow at the toe of the slope. Where a cutting passes into a fill all the vegetable matter should be removed from the surface before placing the fill. The site of the bank should be carefully examined and all deposits of soft, compressible matter removed. When a bank is to be made over a swamp or marsh, the site should be thoroughly drained, and if possible the fill should be started on hard bottom.

Perfect stability is the object aimed at, and all precautions necessary to this end should be taken. Embankments should be built in successive layers, banks two feet and under in layers from six inches to one foot, heavier banks in layers 2 and 3 feet thick. The horses and vehicles conveying the materials should be required to pass over the bank for the purpose of consolidating it, and care should be taken to have the layers dip towards the center. Embankments first built up in the center, and afterwards widened by dumping the earth over the sides, should not be allowed.

Embankments on Hillsides. When the axis of the road is laid out on the side slope of a hill, and the road is formed partly by excavating and partly by embanking, the usual and most simple method is to extend out the embankment gradually along the whole line of the excavation. This method is insecure; the excavated material if simply deposited on the natural slope is liable to slip, and no pains should be spared to give it a secure hold, particularly at the toe of the slope. The natural surface of the slope should be cut into steps as shown in Figs. 23 and 24. The dotted line A B

represents the natural surface of the ground, C E B the excavation, and A D C the embankment, resting on steps which have been cut between A and C. The best position for these steps is perpendicular to the axis of greatest pressure. If A D is inclined at the angle of repose of the material, the steps near A should be inclined in the

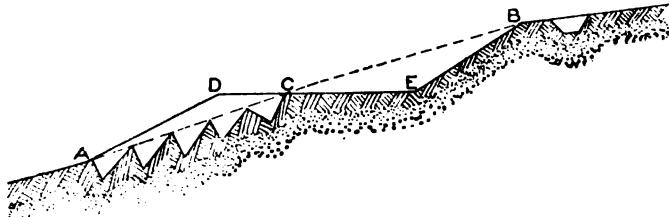


Fig. 23. Method of Construction on Hillsides.

opposite direction to A D, and at an angle of nearly 90 degrees thereto, while the steps near C may be level. If stone is abundant, the toe of the slope may be further secured by a dry wall of stone.

On hillsides of great inclination the above method of construction will not be sufficiently secure; retaining walls of stone must be substituted for the side slopes of both the excavations and embankments. These walls may be made of stone laid dry, when stone

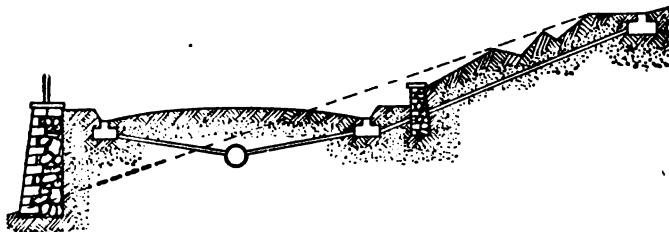


Fig. 24. Hillside Road with Retaining and Revetment Walls.

can be procured in blocks of sufficient size to render this kind of construction of sufficient stability to resist the pressure of the earth. When the stones laid dry do not offer this security, they must be laid in mortar. The wall which forms the slope of the excavation should be carried up as high as the natural surface of the ground. Unless the material is such that the slope may be safely formed into steps or benches as shown in Fig. 23, the wall that sustains the embankment should be built up to the surface of the roadway, and a parapet

wall or fence raised upon it, to protect pedestrians against accident. (See Fig. 24.)

For the formula for calculating the dimensions of retaining walls see instruction paper on Masonry Construction.

Roadways on Rock Slopes. On rock slopes when the inclination of the natural surface is not greater than one perpendicular to two base, the road may be constructed partly in excavation and partly in embankment in the usual manner, or by cutting the face of the slope into horizontal steps with vertical faces, and building up the embankment in the form of a solid stone wall in horizontal courses, laid either dry or in mortar. Care is required in proportioning the steps, as all attempts to lessen the quantity of excavation by increasing the number and diminishing the width of the steps require additional precautions against settlement in the built-up portion of the roadway.

When the rock slope has a greater inclination than 1 : 2 the whole of the roadway should be in excavation.

In some localities roads have been constructed along the face of nearly perpendicular cliffs on timber frameworks consisting of horizontal beams, firmly fixed at one end by being let into holes drilled in the rock, the other end being supported by an inclined strut resting against the rock in a shoulder cut to receive it. There are also examples of similar platforms suspended instead of being supported.

Earth Roads. The term "earth road" is applied to roads where the surface consists of the native soil; this class of road is the most common and cheapest in first cost. At certain seasons of the year earth roads when properly cared for are second to none, but during the spring and wet seasons they are very deficient in the important requisite of hardness, and are almost impassable.

For the construction of new earth roads, all the principles previously discussed relating to alignment, grades, drainage, width, etc., should be carefully followed. The crown or transverse contour should be greater than in stone roads. Twelve inches at the center in 25 feet will be sufficient.

Drainage is especially important, because the material of the road is more susceptible to the action of water, and more easily

destroyed by it than are the materials used in the construction of the better class of roads. When water is allowed to stand upon the road, the earth is softened, the wagon wheels penetrate it and the horses' feet mix and knead it until it becomes impassable mud. The action of frost is also apt to be more disastrous upon the more permeable surface of the earth road, having the effect of swelling and heaving the roadway and throwing its surface out of shape. It may

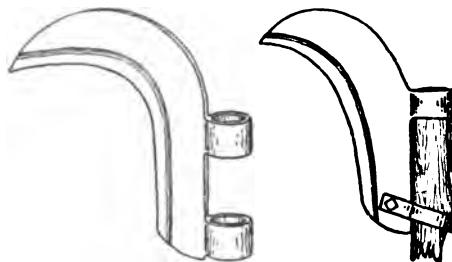


Fig. 25. Bush Hooks.

in fact be said that the whole problem of the improvement and maintenance of ordinary country roads is one of drainage.

In the preparation of the wheelway all stumps, brush, vegetable matter, rocks and boulders should be removed from the surface and the resulting holes filled in with clean earth. The roadbed having



Fig. 26. Axe Mattock.

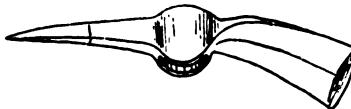


Fig. 27. Bush Mattock.

been brought to the required grade and crown should be thoroughly rolled, all inequalities appearing during the rolling should be filled up and re-rolled.

Care of Earth Roads. If the surface of the roadway is properly formed and kept smooth, the water will be shed into the side ditches and do comparatively little harm; but if it remains upon the surface, it will be absorbed and convert the road into mud. All ruts and depressions should be filled up as soon as they appear. Repairs should be attended to particularly in the spring. At this season a judicious use of a road machine and rollers will make a

smooth road. In summer when the surface gets roughed up it can be improved by running a harrow over it; if the surface is a little muddy this treatment will hasten the drying.

During the fall the surface should be repaired, with special reference to putting it in shape to withstand the ravages of winter. Saucer-like depressions and ruts should be filled up with clean earth similar to that of the roadbed and tamped into place.

The side ditches should be examined in the fall to see that they are free from dead weeds and grass, and late in winter they should be examined again to see that they are not clogged. The mouths of culverts should be cleaned of rubbish and the outlet of tile drains opened. Attention to the side ditches will prevent overflow, and washing of the roadway, and will also prevent the formation of ponds at the roadside and the consequent saturation of the roadbed.

Holes and ruts should not be filled with stone, bricks, gravel or other material harder than the earth of the roadway as the hard material will not wear uniform with the rest of the road, but produce bumps and ridges, and usually result in making two holes, each larger than the original one. It is bad practice to cut a gutter from a hole to drain it to the side of the road. Filling is the proper course, whether the hole is dry or contains mud.

In the maintenance of clay roads neither sods nor turf should be used to fill holes or ruts; for, though at first deceptively tough, they soon decay and form the softest mud. Neither should the ruts be filled with field stones; they will not wear uniformly with the rest of the road, but will produce hard ridges.

Trees and close hedges should not be allowed within 200 feet of a clay road. It requires all the sun and wind possible to keep its surface in a dry and hard condition.

Sand Roads. The aim in the improvement of sand roads is to have the wheelway as narrow and well defined as possible, so as to have all the vehicles run in the same track. An abundant growth of vegetation should be encouraged on each side of the wheelway, for by this means the shearing of the sand is, in a great measure, avoided. Ditching beyond a slight depth to carry away the rain water is not desirable, for it tends to hasten the drying of the sands, which is to be avoided. Where possible the roads should be over-

hung with trees, the leaves and twigs of which catching on the wheelway will serve still further to diminish the effect of the wheels in moving the sands about. If clay can be obtained, a coating 6 inches thick will be found a most effective and economical improvement. A coating of 4 inches of loose straw will, after a few days' travel, grind into the sand and become as hard and as firm as a dry clay road.

The maintaining of smooth surfaces on all classes of earth roads will be greatly assisted and cheapened by the frequent use of a roller (either steam or horse) and any one of the various forms of road grading and scraping machines. In repairing an earth road the plough should not be used. It breaks up the surface which has been compacted by time and travel.

TOOLS FOR GRADING.

Picks are made of various styles, according to the class of material in which they are to be used. Fig. 28 shows the form

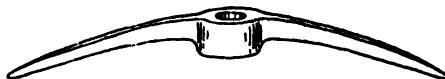


Fig. 28. Grading Pick.



Fig. 29. Clay Pick.

usually employed in street work. Fig. 29 shows the form generally used for clay or gravel excavation.

The eye of the pick is generally formed of wrought iron, pointed with steel. The weight of picks ranges from 4 to 9 lb.



Fig. 30. Shovels.

Shovels are made in two forms, square and round pointed, usually of pressed steel.

Ploughs are extensively employed in grading, special forms being manufactured for the purpose. They are known as "grading ploughs," "road ploughs," "township ploughs," etc. They vary

in form according to the kind of work they are intended for, viz.: loosening earth, gravel, hardpan, and some of the softer rocks.

These ploughs are made of great strength, selected white oak, rock elm, wrought steel and iron being generally used in their construction. The cost of operating ploughs ranges from 2 to 5 cents per cubic yard, depending upon the compactness of the soil. The quantity of material loosened will vary from 2 to 5 cubic yards per hour.

Fig. 31 shows the form usually adopted for loosening earth. This plough does not turn the soil, but cuts a furrow about 10

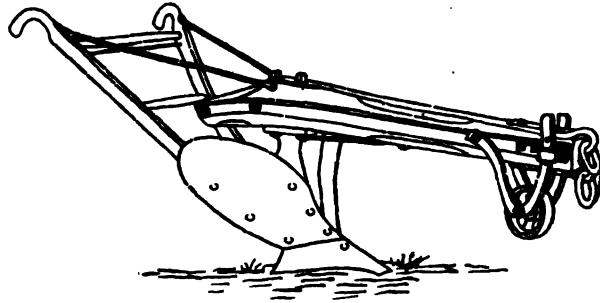


Fig. 31. Grading Plow.

inches wide and of a depth adjustable up to 11 inches.

In light soil the ploughs are operated by two or four horses; in heavy soils as many as eight are employed. Grading ploughs vary in weight from 100 to 325 lb.

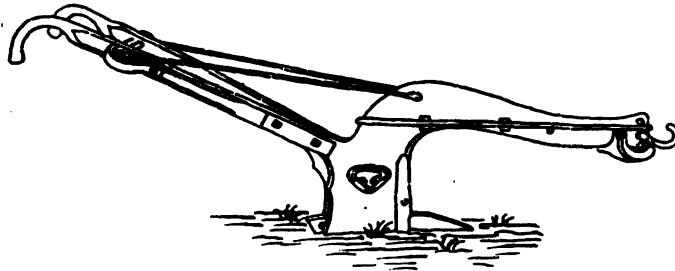


Fig. 32. Hardpan Plow.

Fig. 32 illustrates a plough specially designed for tearing up macadam, gravel, or similar material. The point is a straight bar of cast steel drawn down to a point, and can be easily repaired.

Scrapers are generally used to move the material loosened by ploughing; they are made of either iron or steel, and in a variety of form, and are known by various names, as "drag," "buck," "pole," and "wheeled". The drag scrapers are usually employed on short hauls, the wheeled on long hauls. Fig. 33 illustrates the usual form of drag scrapers.

Drag scrapers are made in three sizes. The smallest, for one horse, has a capacity of 3 cubic feet; the others, for two horses,

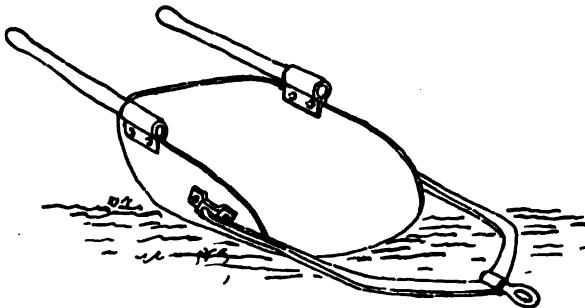


Fig. 33. Drag Scraper.

have a capacity of 5 to $7\frac{1}{2}$ cubic feet. The smallest weighs about 90 lb., and the larger ones from 94 to 102 lb.

Buck scrapers are made in two sizes—two-horses, carrying $7\frac{1}{2}$ cubic feet; four-horses, 12 cubic feet.

Pole scraper, Fig. 34, is designed for use in making and leveling earth roads and for cutting and cleaning ditches; it is also well

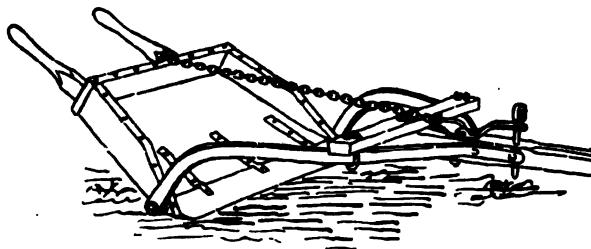


Fig. 34. Pole Scraper.

adapted for moving earth short distances at a minimum cost.

Wheeled scrapers consist of a metal box, usually steel, mounted on wheels, and furnished with levers for raising, lowering, and

dumping. They are operated in the same manner as drag scrapers, except that all the movements are made by means of the levers, and without stepping the team. By their use the excessive resistance to

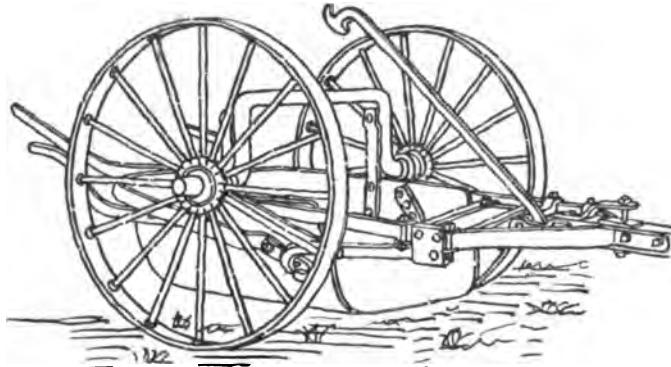


Fig. 35. Wheeled Scraper.

traction of the drag scraper is avoided. Various sizes are made, ranging in capacity from 10 to 17 cubic feet. In weight they range from 350 to 700 lb.

Wheelbarrows. The wheelbarrow shown in Fig. 36 is constructed of wood and is the most commonly employed for earth-work. Its capacity ranges from 2 to $2\frac{1}{2}$ cubic feet. Weight about 50 lb.

The barrow, Fig. 37, has a pressed-steel tray, oak frame, and steel wheel, and will be found more durable in the maintenance



Fig. 36. Wooden Barrow.

department than the all wood barrow. Capacity from $3\frac{1}{2}$ to 5 cubic feet, depending on size of tray.

The barrow, Fig. 38, is constructed with tubular iron frames and steel tray, and is adaptable to the heaviest work, such as

moving heavy broken stone, etc., or it may be employed with advantage in the cleaning department. Capacity from 3 to 4 cubic feet. Weight from 70 to 82 lb.

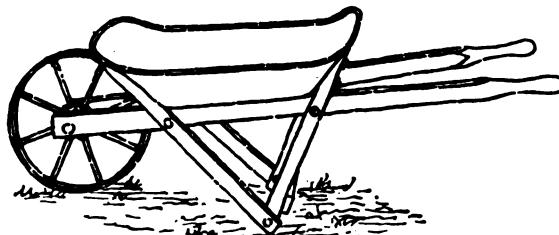


Fig. 37. Steel Tray Barrow.

The maximum distance to which earth can be moved economically in barrows is about 200 feet. The wheeling should be performed upon planks, whose steepest inclination should not exceed 1 in 12. The force required to move a barrow on a plank is about $\frac{1}{6}$ part of the weight; on hard dry earth, about $\frac{1}{4}$ part of the weight.

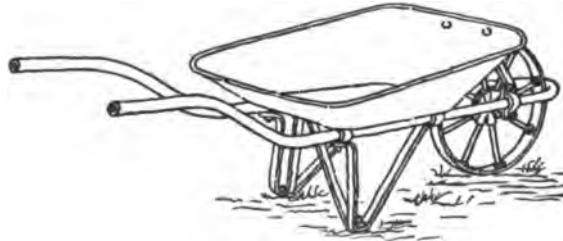


Fig. 38. Metal Barrow.

The time occupied in loading a barrow will vary with the character of the material and the proportion of wheelers to shovellers. Approximately, a shoveller takes about as long to fill a barrow with earth as a wheeler takes to wheel a full barrow a distance of about 100 or 120 feet on a horizontal plank and return with the empty barrow.

Carts. The cart usually employed for hauling earth, etc., is shown in Fig. 39. The average capacity is 22 cubic feet, and the average weight is 800 lb. These carts are usually furnished with broad tires, and the body is so balanced that the load is evenly divided about the axle.

The time required to load a cart varies with the material. One shoveller will require about as follows: Clay, seven minutes; loam, six minutes; sand, five minutes.



Fig. 39. Earth Wagon.

Dump Cars. These cars are made to dump in several different ways, viz., single or double side, single or double end, and rotary or universal dumpers.

Dump cars may be operated singly or in trains, as the magnitude of the work may demand. They may be moved by horses or

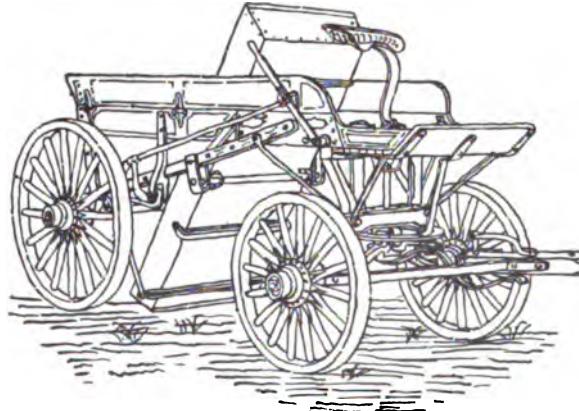


Fig. 40. Dump Cart.

small locomotives. They are made in various sizes, depending upon the gauge of the track on which they are run. A common gauge is

20 inches, but it varies from that up to the standard railroad gauge of $56\frac{1}{2}$ inches.

Dump Wagons. (Fig. 40.) The use of these wagons for moving excavated earth, etc., and for transporting materials such as sand, gravel, etc., materially shortens the time required for unloading the ordinary form of contractor's wagon; having no reach or pole connecting the rear axle with the center bearing of the front axle, they may be cramped short and the load deposited just where required. They are operated by the driver, and the capacity ranges from 35 to 45 cubic feet.

Mechanical Graders are used extensively in the making and maintaining of earth roads. They excavate and move earth more expeditiously and economically than can be done by hand; they are called by various names, such as "road machines," "graders," "road hones," etc. Their general form is shown in Fig. 41.

Briefly described, they consist of a large blade made entirely of steel or of iron, or wood shod with steel, which is so arranged by mechanism attached to the frame from which it is suspended that it can be adjusted and fixed in any direction by the operator. In their action they combine the work of excavating and transporting the

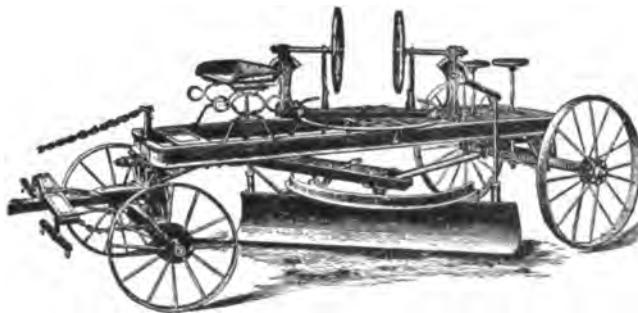


Fig. 41. Mechanical Grader.

earth. They have been chiefly employed in the forming and maintenance of earth roads, but may be also advantageously used in preparing the subgrade surface of roads for the reception of broken stone or other improved covering.

A large variety of such machines are on the market. The "New Era" grader excavates the material from side ditches, and

automatically loads the material into carts or wagons. Briefly described, the machine consists of a plough which loosens and raises the earth, depositing it upon a transverse carrying-belt, which conveys it from excavation to embankment. This carrier is built in four sections, bolted together, so it can be used to deliver earth at 14, 17, 19, or 22 feet from the plough. The carrier belt is of heavy 3-ply rubber 3 feet wide.

The plough and carrier are supported by a strong trussed framework resting on heavy steel axles and broad wheels. The large rear wheels are ratcheted upon the axle, and connected with strong gearing which propels the carrying-belt at right angles to the direction in which the machine is moving.

The wheels and trusses are low and broad, occupying a space 8 feet wide and 14 feet long, exclusive of the side carrier. This enables it to work on hillsides where any wheeled implements can be used. Notwithstanding its large size it is so flexible that it may be turned around on a 16-foot embankment. Pilot wheels and levers enable the operator to raise or lower the plough or carrier at pleasure.

As a motive power 12 horses—8 driven in front, 4 abreast, and 4 in the rear on a push cart—are usually employed.

When the teams are started, the operator lowers the plough and throws the belting into gear, and as the plough raises and turns the earth to the side the belt receives and delivers it at the distance for which the carrier is adjusted, forming either excavation or embankment.

When it becomes necessary to deliver the excavated earth beyond the capacity of the machine (22 feet or $7\frac{1}{2}$ feet above the plough), the earth is loaded upon wagons, then conveyed to any distance. Arranging the carrier at 19 feet, wagons are driven under the carrier and loaded with $1\frac{1}{2}$ to $1\frac{1}{2}$ yards of earth in from 20 to 30 seconds. When one wagon turns out with its load, another drives under the carrier, and the machine thus loads 600 to 800 wagons per day. It is claimed that with six teams and three men it is capable of excavating and placing in embankment from 1000 to 1500 cubic yards of earth in ten hours, or of loading from 600 to 800

wagons in the same time, and that the cost of this handling is from $1\frac{1}{2}$ to $2\frac{1}{2}$ cents per cubic yard.

Points to be Considered in Selecting a Road Machine. In the selection of a road machine the following points should be carefully considered:

- (1) Thoroughness and simplicity of its mechanical construction.
- (2) Material and workmanship used in its construction.
- (3) Ease of operation.
- (4) Lightness of draft.
- (5) Adaptability for doing general road-work, ditching, etc.
- (6) Safety to the operator.

Care of Road Machines. The road machine when not in use should be stored in a dry house and thoroughly cleaned, its blade brushed clean from all accumulations of mud, wiped thoroughly dry, and well covered with grease or crude oil. The axles, journals, and wearing parts should be kept well oiled when in use, and an extra blade should be kept on hand to avoid stopping the machine while the dulled one is being sharpened.

Surface Graders. The surface grader, Fig. 42, is used for removing earth previously loosened by a plough. It is operated by one horse. The load may be retained and carried a considerable



Fig. 42. Surface Grader.

distance, or it may be spread gradually as the operator desires. It is also employed to level off and trim the surface after scrapers.

The blade is of steel, $\frac{1}{4}$ -inch thick, 15 inches wide, and 30 inches long. The beam and other parts are of oak and iron. Weight about 60 lb.

The road leveller, Fig. 43, is used for trimming and smoothing the surface of earth roads. It is largely employed in the Spring when the frost leaves the ground.



Fig. 43. Road Leveller.

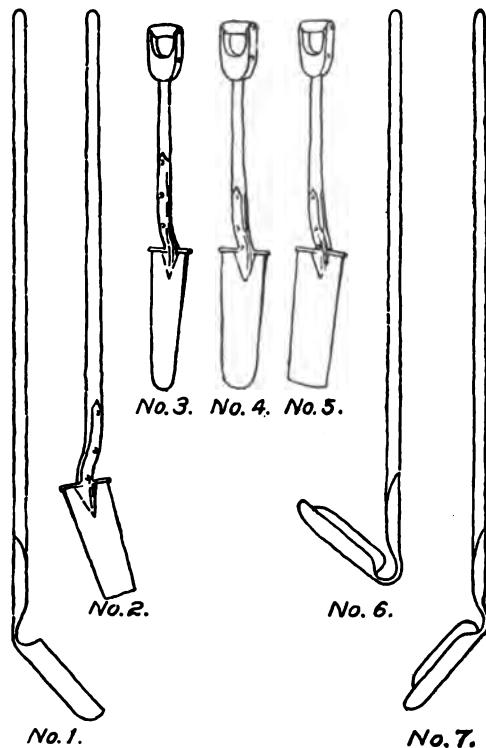


Fig. 44. Draining Tools.

The blade is of steel, $\frac{1}{4}$ -inch thick by 4 inches by 72 inches, and is provided with a seat for the driver. It is operated by a team of horses. Weight about 150 lb.

Draining-tools. The tools employed for digging the ditches and shaping the bottom to fit the drain tiles are shown in Fig. 44. They are convenient to use, and expedite the work by avoiding unnecessary excavation.

The tools are used as follows: Nos. 3, 4 and 5 are used for digging the ditches; Nos. 6 and 7 for cleaning and rounding the

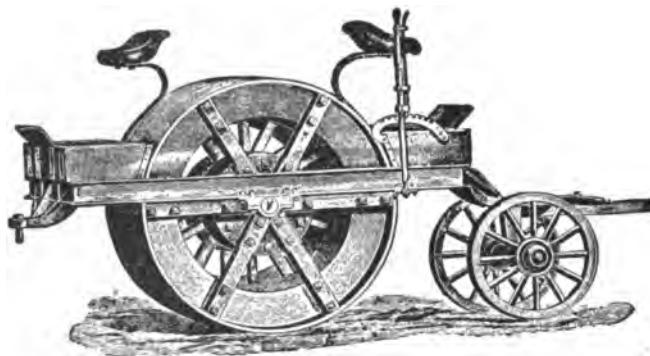


Fig. 45. Reversible Roller.

bottom of the ditch for round tile. No. 2 is used for shoveling out loose earth and levelling the bottom of the ditch; No. 1 is used for the same purpose when the ditch is intended for "sole" tile.

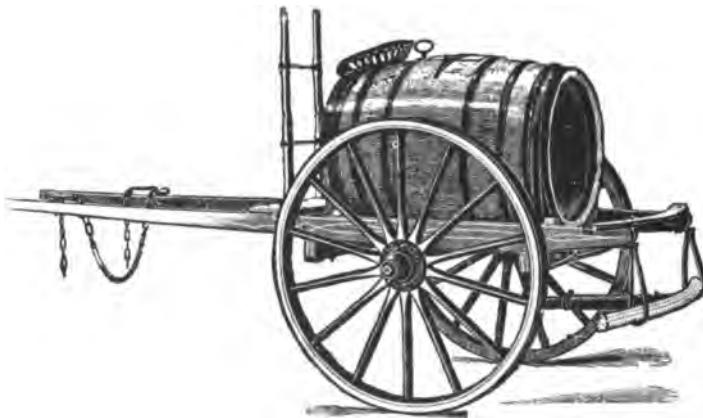


Fig. 46. Watering Cart.

Horse Rollers. There is a variety of horse rollers on the market. Fig. 45 shows the general form. Each consists essentially of a hollow cast-iron cylinder 4 to 5 feet long, 5 to 6 feet in

diameter, and weighing from 3 to 6 tons. Some forms are provided with boxes in which stone or iron may be placed to increase the weight, and some have closed ends and may be filled with water or sand.

Sprinkling-carts. Fig. 46 shows a convenient form of sprinkling cart for suburban streets and country roads. Capacity about 150 gallons.

ROAD COVERINGS.

Road coverings consist of some foreign material as gravel, broken stone, clay, etc., placed on the surface of the earth road. The object of this covering, whatever its nature, is (1) to protect the natural soil from the effect of weather and travel, and (2) to furnish a smooth surface on which the resistance to traction will be reduced to the least possible amount, and over which vehicles may pass with safety and expedition at all seasons of the year. Where an artificial covering is employed, the wheel loads coming upon its surface are distributed over a greater area of the roadbed than if the loads come directly upon the earth itself. The loads are not sustained by the covering as a rigid structure, but are transferred through it to the roadbed, which must support both the weight of the covering and the load coming upon it.

Gravel Roads. Gravel is an accumulation of small more or less rounded stones which usually vary from the size of a small pea to a walnut. It is often intermixed with other substances, such as sand, clay, loam, etc., from each of which it derives a distinctive name. In selecting gravel for road purposes the chief quality to be sought for is the property of binding.

Gravel in general is unserviceable for roadmaking. This is due mainly to the fact that the surface of the pebbles is smooth, so that they will not bind together in the manner of broken stone. There is also an absence of dust or other material to serve as a binder, and even if such binding material is furnished it is difficult to effectively hold the rounded and polished surface of the pebbles together.

In certain deposits of gravel, particularly where the pebbly matter is to a greater or less extent composed of limestone, a considerable amount of iron oxide has been gathered in the mass.

This effect is due to the tendency of water which contains iron to lay down that substance and to take lime in its place when the opportunity for so doing occurs. Such gravels are termed ferruginous. They are commonly found in a somewhat cemented state, and when broken up and placed upon roads they again cement, even more firmly than in the original state, often forming a roadway of very good quality.

When no gravel but that found in rivers or on the seashore can be obtained, one-half of the stone should be broken and mixed with the other half; to the stone so mixed a small quantity of clay or loam, about one-eighth of the bulk of the gravel, must be added: an excess is injurious. Sand is unsuitable. It prevents packing in proportion to the amount added.

Preparing the Gravel. Pit gravel usually contains too much earth, and should be screened before being used. Two sieves should be provided, one with meshes of one and one-half inches, so that all pebbles above that size may be rejected, the other with meshes of three quarters of an inch, and the material which passes through it should be thrown away. The expense of screening will be more than repaid by the superior condition of the road formed by the cleaned material, and by the diminution of labor in keeping it in order. The pebbles larger than one and a half inches may be broken to that size and mixed with clean material.

Laying the Gravel. On the roadbed properly prepared a layer of the prepared gravel four inches thick is uniformly spread over the whole width, then compacted with a roller weighing not less than two tons, and having a length of not less than thirty inches. The rolling must be continued until the pebbles cease to rise or creep in front of the roller. The surface must be moistened by sprinkling in advance of the roller, but too much water must not be used. Successive layers follow, each being treated in the above described manner until the requisite depth and form has been attained.

The gravel in the bottom layer must be no larger than that in the top layer; it must be uniformly mixed, large and small together, for if not, the vibration of the traffic and the action of frost will cause the larger pebbles to rise to the surface and the smaller ones to descend, and the road will never be smooth or firm.

The pebbles in a gravel road are simply imbedded in a paste and can be easily displaced. It is for this reason, among others, that such roads are subject to internal destruction.

The binding power of clay depends in a large measure upon the state of the weather. During rainy periods a gravel road becomes soft and muddy, while in very dry weather the clay will contract and crack, thus releasing the pebbles, and giving a loose surface. The most favorable conditions are obtained in moderately damp or dry weather, during which a gravel road offers several advantages for light traffic, the character of the drainage, etc., largely determining durability, cost, maintenance, etc.

Repair. Gravel roads constructed as above described will need but little repairs for some years, but daily attention is required to make these. A garden rake should be kept at hand to draw any loose gravel into the wheel tracks, and for filling any depressions that may occur.

In making repairs, it is best to apply a small quantity of gravel at a time, unless it is a spot which has actually cut through. Two inches of gravel at once is more profitable than a larger amount. Where a thick coating is applied at once it does not all pack, and if, after the surface is solid, a cut be made, loose gravel will be found; this holds water and makes the road heave and become spouty under the action of frost. It will cost no more to apply six inches of gravel at three different times than to do it at once.

At every one-eighth of a mile a few cubic yards of gravel should be stored to be used in filling depressions and ruts as fast as they appear, and there should be at least one laborer to every five miles of road.

Broken Stone Roads. Broken stone roads are formed by placing small angular fragments of stone on the surface of the earth roadbed and compacting into a solid mass by rolling. This class of road covering is generally called a Macadam or Telford road from the name of the two men who first introduced this type into England.

The name of Telford is associated with a rough stone foundation, which he did not always use, but which closely resembled that which had been previously used in France. Macadam disregarded

this foundation, contending that the subsoil, however bad, would carry any weight if made dry by drainage and kept dry by an impervious covering. The names of both have ever since been associated with the class of road which each favored, as well as with roads on which all their precepts have been disregarded.

Quality of Stones. The materials used for broken-stone pavements must of necessity vary very much according to the locality. Owing to the cost of haulage, local stone must generally be used, especially if the traffic be only moderate. If, however, the traffic is heavy, it will sometimes be found better and more economical to obtain a superior material, even at a higher cost, than the local stone; and in cases where the traffic is very great, the best material that can be obtained is the most economical.

The qualities required in a good road stone are hardness and toughness and ability to resist the disintegrating action of the weather. These qualities are seldom found together in the same stone. Igneous and siliceous rocks, although frequently hard and tough, do not consolidate so well nor so quick as limestone, owing to the sandy detritus formed by the two first having no cohesion, whilst the limestone has a detritus which acts like mortar in binding the stones together.

A stone of good binding nature will frequently wear much better than one without, although it is not so hard. A limestone road well made and of good cross-section will be more impervious than any other, owing to this cause, and will not disintegrate so soon in dry weather, owing partly to this and partly to the well-known quality which all limestone has of absorbing moisture from the atmosphere. Mere hardness without toughness is not of much use, as a stone may be very hard but so brittle as to be crushed to powder under a heavy load, while a stone not so hard but having a greater degree of toughness will be uninjured.

By a stone of good binding quality is meant one that, when moistened by water and subjected to the pressure of loaded wheels or rollers, will bind or cement together. This quality is possessed to a greater or less extent by nearly all rocks when in a state of disintegration. The binding is caused by the action of water upon the chemical constituents of the stone contained in the detritus produced

by crushing the stone, and by the friction of the fragments on each other while being compacted; its strength varies with the different species of rock, but it exists in some measure with them all, being greatest with limestone and least with gneiss.

The essential condition of the stone to produce this binding effect is that it be sound. No decayed stone retains the property of binding, though in some few cases, where the material contains iron oxides, it may, by the cementing property of the oxide, undergo a certain binding.

A stone for a road surface should be as little absorptive of moisture as possible in order that it may not suffer injury from the action of frost. Many limestones are objectionable on this account.

The stone used should be uniform in quality, otherwise it will wear unevenly, and depressions will appear where the softer material has been used.

As the under parts of the road covering are not subject to the wear of traffic, and have only the weight of loads to sustain, it is not necessary that the stone of the lower layer be so hard or so tough as the stone for the surface, hence it is frequently possible by using an inferior stone for that portion of the work, to greatly reduce the cost of construction.

Size of Stones. The stone should be broken into fragments as nearly cubical as possible. The size of the cubes will depend upon the character of the rock. If it be granite or trap, they should not exceed $1\frac{1}{2}$ inches in their greatest dimensions; if limestone, they should not exceed 2 inches.

The smaller the stones the less the percentage of voids. Small stones compact sooner, require less binding, and make a smoother surface than large ones, but the size of the stone for any particular section of a road must be determined to a certain extent by the amount of traffic which it will have to bear and the character of the rock used.

It is not necessary nor is it advisable that the stone should be all of the same size; they may be of all sizes under the maximum. In this condition the smaller stones fill the voids between the larger and less binding is required.

Thickness of the Broken Stone. The offices of the broken

stone are to endure friction and to shed water; its thickness must be regulated by the quality of the stone, the amount of traffic, and nature of the natural soil bed. Under heavy traffic it is advisable to make the thickness greater than for light traffic, in order to provide for wear and lessen the cost of renewals.

When the roadbed is firm, well drained, and not likely to be affected by ground water, it will always afford a firm foundation for the broken stone, the thickness of which may be made the minimum for good construction. This thickness is four inches. When this thickness is employed the stone must be of exceptionally fine quality and the road must be maintained by the "continuous" method. With heavy traffic the thickness should be increased over the minimum a certain amount, say 2 inches, to provide for wear. Where the foundation is unstable and there is a tendency on the part of the loads to break through the covering, the thickness of the stone must be made the maximum, which is 12 inches. In such a case it may be advisable to employ a Telford foundation. Where the covering exceeds six inches in thickness, the excess may be composed of gravel, sand or ledge stone, the choice depending entirely on the cost, for all are equally effective.

Foundation. The preparation of the natural soil over which the road is to be constructed, to enable it to sustain the superstructure and the weights brought upon it, requires the observance of certain precautions the neglect of which will sooner or later result in the deterioration or possible destruction of the road covering. These precautions vary with the character of the soil.

Soils of a siliceous and calcareous nature do not present any great difficulty, as their porous nature generally affords good natural drainage which secures a dry foundation. Their surface, however, requires to be compacted; this is effected by rolling.

The rolling should be carried out in dry weather, and any depressions caused by the passage of the roller should be filled with the same class of material as the surrounding soil. The rolling must be repeated until a uniform and solid bed is obtained.

The argillaceous and allied soils, owing to their retentive nature, are very unstable under the action of water and frost, and in their natural condition afford a poor foundation. The prepara-

tion of such soil is effected by drainage and by the application of a layer of suitable material to entirely separate the surface from the road material. This material may be sand, furnace ashes, or other material of a similar nature, spread in a layer from 3 to 6 inches thick over the surface of the natural soil.

When the road is formed in rock cuttings it is advisable to spread a layer of sand or other material of light nature, so as to fill up the irregularities of the surface as well as to form a cushion for the road material to rest on.

Spreading the Stone. The stone should be hauled upon the roadbed in broad-tire two-wheeled carts and dumped in heaps and be spread evenly with a rake in a layer which should be of a depth of $4\frac{1}{2}$ inches.

Watering. Wetting the stone expedites the consolidation, decreases crushing under the roller, and assists the filling of the voids with the binder. It should be applied by a sprinkler and should not be thrown on in quantity or from the plain nozzle of a hose.

Excessive watering, especially in the earlier stages, tends to soften the foundation, and care should be exercised in its application.

Binding. As the voids in loosely spread broken stone range from 35 to 50 per cent of the volume, and as no amount of rolling will reduce the voids more than one-half, it is necessary, in order to form an impervious and compact mass, to add some fine material which is called the binder. It may consist of the fragments and detritus obtained in crushing the stone. When this is insufficient, as will be the case with the harder rocks, the deficiency may be made up of clean sand or gravel. The proportion of binder should slightly exceed the voids in the aggregate; it must not be mixed with the stones, but should be spread uniformly in small quantities over the surface and rolled into the interstices with the aid of water and brooms.

As the quality of the binding used is of vital importance, the employment of inferior material, such as road scrapings or material of a clayey nature, should be avoided, even if the initial cost of the work should be greater when a good binding material is used.

Stone consolidated with improper binding material may present a good appearance immediately after being rolled and be otherwise an apparently good piece of work, still in damp weather a considerable amount of "licking up" by the wheels of the vehicles will take place, which reduces the strength of the coating and causes the surface to wear unequally.

By the application of an immoderate quantity of binding of any description the stone coating will become unsound or rotten in condition, and if the binding be of an argillaceous nature, it will expand during frost, owing to its absorbent properties, and cause the displacement of the stones. The surface will become sticky, which seriously affects the tractive power of horses, while the road itself will suffer by the irregular deterioration of the surface.

The use of such material as mentioned for binding enables rolling to be accomplished in much less time than when proper binding is used, and the cost of consolidating the stone may be reduced by 25 per cent; but, on the other hand, the stone coating which will probably contain under these circumstances from 30 to 40 per cent of soft and soluble matter, and possibly present a smooth surface immediately after being rolled, will quickly become "cupped" by the wheel traffic, a bumpy surface being the result. This is caused by the irregular wear, while the lasting qualities or "life" of the coating will be shortened, giving unsatisfactory results to those traveling over the road, and the work of renewing the surface of the road in this manner may prove a failure on economical grounds. There can be no doubt, and it is now being more generally recognized, that sand as a material for binding in connection with rolling operations, when applied in a limited but sufficient quantity, promotes the durability of the stone coating, while the general results are equally satisfactory; a firm, compact, and smooth surface is obtained, and the subsequent maintenance of the road is minimized.

A great amount of rolling is necessary when sand is employed as a binding material, but economy is promoted, and the results are more satisfactory when sand is used than by the use of the material which gives to the stone an appearance only of having been properly consolidated. If clean sand be used in combination with the screenings from the crusher a very satisfactory surface will be obtained.

If the use of motor vehicles equipped with pneumatic tires becomes general, it is possible that some other description of binding material will be necessary. The pumping action of suction created by pneumatic tires, especially when propelled at a high speed, causes a considerable movement of the fine particles of the binding material, which on being displaced will convert the covering into a mass of stones. This objection can probably be overcome by watering.

Compacting the Broken Stone. Three methods of compacting the broken stone are practiced: (1) by the traffic passing over the road; (2) by rollers drawn by horses; (3) by rollers propelled by steam.

The first method is both defective and objectionable. (1) It is destructive to the horses and vehicles using the road. (2) It is wasteful of material; about one-third of the stone is worn away in the operation. (3) Dung and dust are ground up with the stone, and the road is more readily affected by wet and frost.

Steam-rollers were first successfully introduced in France in 1860, since which time they have been almost universally adopted on account of the superiority and economy of the work done. Their use shortens the time required for construction or repair, and effects an indirect saving by the reduced wear and tear of horses and vehicles. They are made in different weights ranging from 3 to 30 tons. For the compacting of broken stone roads the weights in favor are from ten to fifteen tons; the heavier weights are considered unwieldy and their use is liable to cause damage to the underground structures that may be in the roadway.

The advantage of steam rolling may be summed up as follows:

- (1) They shorten the time of construction.
- (2) A saving of road material, (a) because there are no loose stones to be kicked about and worn; (b) because there is no abrasion of the stone, only one surface of the stone being exposed to wear; (c) because a thinner coating of stone can be employed; (d) because no ruts can be formed in which water can lie to rot the stone.
- (3) Steam-rolled roads are easier to travel on account of their even surface and superior hardness and they have a better appearance.
- (4) The roads can be repaired at any season of the year.
- (5) Saving both in materials and manual labor.

HIGHWAY CONSTRUCTION

PART II

STREETS AND HIGHWAYS

CITY STREETS

The first work requiring the skill of the engineer is to lay out town sites properly, especially with reference to the future requirements of a large city where any such possibility exists. Few if any of our large cities were so planned. The same principles, to a limited extent, are applicable to all towns or cities. The topography of the site should be carefully studied, and the street lines adapted to it. These lines should be laid out systematically, with a view to convenience and comfort, and also with reference to economy of construction, future sanitary improvements, grades, and drainage.

Arrangement of City Streets. Generally, the best method of laying out streets is in straight lines, with frequent and regular intersecting streets, especially for the business parts of a city. When there is some centrally located structure, such as a courthouse, city hall, market, or other prominent building, it is very desirable to have several diagonal streets leading thereto. In the residence portions of cities, especially if on hilly ground, curves may with advantage replace straight lines, by affording better grades at less cost of grading, and by improving property through avoiding heavy embankments or cuttings.

Width of Streets. The width of streets should be proportioned to the character of the traffic that will use them. No rule can be laid down by which to determine the best width of streets; but it may safely be said that a street which is likely to become a commercial thoroughfare should have a width of not less than 120 feet between the building lines—the carriage-way 80 feet wide, and the sidewalks each 20 feet wide.

In streets occupied entirely by residences a carriage-way 32 feet wide will be ample, but the width between the building lines may be as great as desired. The sidewalks may be any amount over 10 feet

which fancy dictates. Whatever width is adopted for them, not more of it than 8 feet need be paved, the remainder being occupied with grass and trees.

Street Grades. The grades of city streets depend upon the topography of the site. The necessity of avoiding deep cuttings or high embankments which would seriously affect the value of adjoining property for building purposes, often demands steeper grades than are permissible on country roads. Many cities have paved streets on 20 per cent grades. In establishing grades through unimproved property, they may usually be laid with reference to securing the most desirable percentage within a proper limit of cost. But when improvements have already been made and have been located with reference to the natural surface of the ground, giving a desirable grade is frequently a matter of extreme difficulty without injury to adjoining property. In such cases it becomes a question of how far individual

interests shall be sacrificed to the general good. There are, however, certain conditions which it is important to bear in mind:

- (1) That the longitudinal crown level should be uniformly sustained from street to street intersection, whenever practicable.
- (2) That the grade should be sufficient to drain the surface.
- (3) That the crown levels at all intersections should be extended transversely, to avoid forming a depression at the junction.


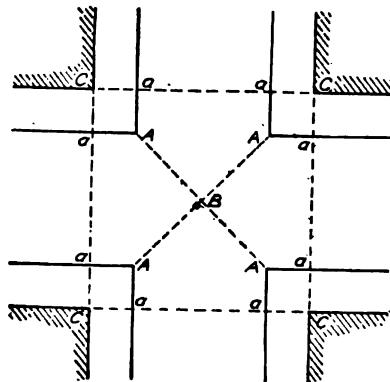


Fig. 47.

Arrangements of Grades at Street Intersections. The best arrangement for intersections of streets when either or both have much inclination, is a matter requiring much consideration, and is one upon which much diversity of opinion exists. No hard or fast rule can be laid down; each will require special adjustment. The best and simplest method is to make the rectangular space *aaaaaaa*, Fig. 47, level, with a rise of one-half inch in 10 feet from *AAAA* to *B*, placing gulleys at *AAAA* and the catch basins at *cccc*. When this method is not practicable, adopt such a grade (but one not exceeding $2\frac{1}{2}$ per cent)

that the rectangle AAAA shall appear to be nearly level; but to secure this it must actually have a considerable dip in the direction of the slope of the street. If steep grades are continued across intersections, they introduce side slopes in the streets thus crossed, which are troublesome, if not dangerous, to vehicles turning the corners, especially the upper ones. Such intersections are especially objectionable in rainy

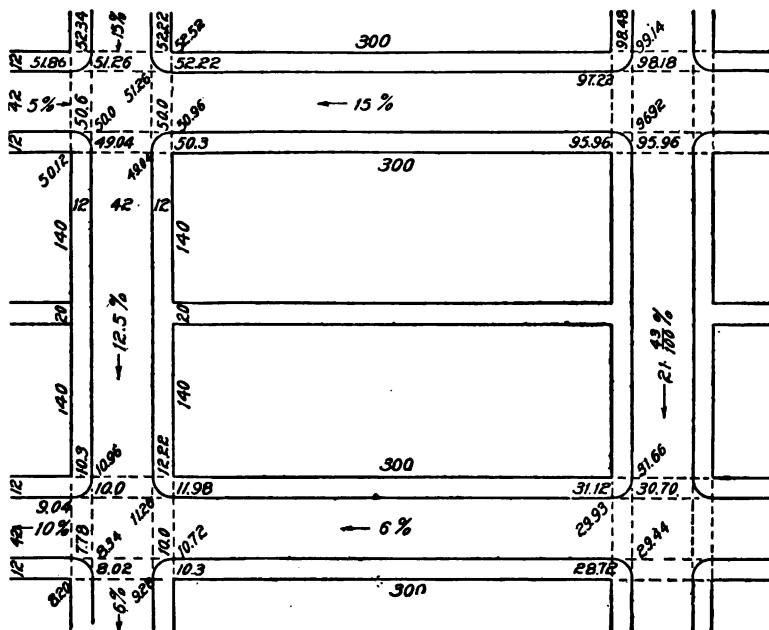

the sum of the widths of the two sidewalks at the corner, and dividing the whole by two. This gives an elevation equal to the average elevation of the curbs at the corners, plus an average rise of two and one-half per cent across the width of the sidewalk.

Accommodation summits have to be introduced between street intersections—first, in hilly localities, to avoid excessive excavation; and second, when the intersecting streets are level or nearly so, for the purpose of obtaining the fall necessary for surface drainage.

The elevation and location of these summits may be calculated as follows: Let A be the elevation of the highest corner; B, the elevation of the lowest corner; D, the distance from corner to corner; and R, the rate of the accommodation grade. The elevation of the summit is equal to

$$\frac{D \cdot R + A + B}{2}$$

The distance from A or B is found by subtracting the elevation of either A or B from this quotient, and dividing the result by the rate of grade. Or the summits may be located mechanically by specially prepared scales. Prepare two scales divided to correspond to the rate of grade; that is, if the rate of grade be 1 foot per 100 feet, then one division of the scale should equal 100 feet on the map scale. These divisions may be subdivided into tenths. One scale should read from right to left, and one from left to right.

To use the scales, place them on the map so that their figures correspond with the corner elevations; then, as the scales read in op-

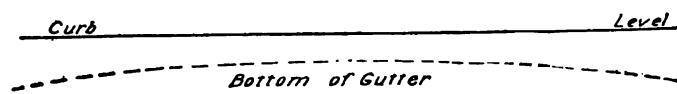


Fig. 49.

posite directions, there is of course some point at which the opposite readings will be the same: this point is the location of the summits; and the figures read off the scale its elevation. If the difference in elevation of the corners is such as not to require an intermediate summit for drainage, it will be apparent as soon as the scales are placed in position.

When an accommodation summit is employed, it should be formed by joining the two straight grade lines by a vertical curve, as

described in Part I. The curve should be used both in the crown of the street and in the curb and footpath.

Where the grade is level between intersections, sufficient fall for surface drainage may be secured without the aid of accommodation summits, by arranging the grades as shown in Fig. 49. The curb is set level between the corners; a summit is formed in the gutter; and receiving basins are placed at each corner.

Transverse Grade. In transverse grade the street should be level; that is, the curbs on opposite sides should be at the same level, and the street crown rise equally from each side to the center. But in hillside streets this condition cannot always be fulfilled, and opposite



Fig. 50.

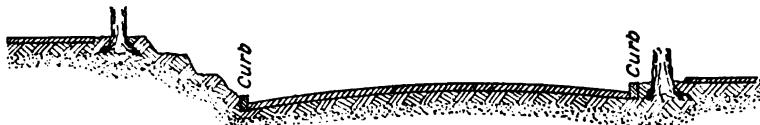


Fig. 51.



Fig. 52.

sides of the street may differ as much as five feet; in such cases the engineer will have to use his discretion as to whether he shall adopt a straight slope inclining to the lower side, thus draining the whole street by the lower gutter, or adopt the three-curb method and sod the slope of the higher side.

In the improvement of old streets with the sides at different levels, much difficulty will be met, especially where shade trees have to be spared. In such cases, recognized methods have to be abandoned, and the engineer will have to adopt methods of overcoming the difficulties in accordance with the conditions and necessities of each particular case. Figs. 50, 51, and 52 illustrate several typical arrangements in

the case of streets in which the opposite sides are at different levels.

Transverse Contour or Crown. The reason for crowning a pavement—*i. e.*, making the center higher than the sides—is to provide for the rapid drainage of the surface. The most suitable form for the crown is the parabolic curve, which may be started at the curb line, or at the edge of the gutter adjoining the carriage-way about one foot

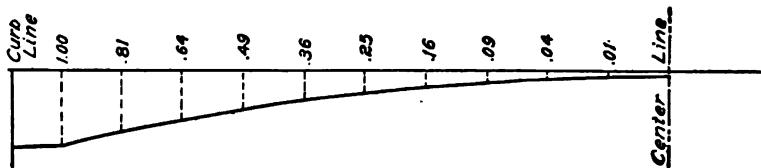


Fig. 53.

from the curb. Fig. 53 shows this form, which is obtained by dividing the ordinate or width from the gutter to the center of the street into ten equal parts, and raising perpendiculars the length of which will be determined by multiplying the rise at the center by the respective number of each perpendicular in the diagram. The amounts thus obtained can be added to the rod readings; and the stakes, set at the proper distance across the street, with their tops at this level, will give the required curve.

The amount of transverse rise, or the height of the center above the gutters, varies with the different paving materials, smooth pavements requiring the least, and rough ones and earth the greatest. The rise is generally stated in a proportion of the width of the carriage-way. The most suitable proportions are:

Stone blocks,	rise at center,	$\frac{1}{80}$	width of carriage-way.
Wood	"	$\frac{1}{100}$	"
Brick	"	$\frac{1}{50}$	"
Asphalt	"	$\frac{1}{30}$	"

Sub-Foundation Drainage of Streets. The sub-foundation drainage of streets cannot be effected by transverse drains, because of their liability to disturbance by the introduction of gas, water, and other pipes.

Longitudinal drains must be depended upon entirely; they may be constructed of the same materials and in the same manner as road drains. The number of these longitudinal drains must depend upon

the character of the soil. If the soil is moderately retentive, a single row of tiles or a hollow invert placed under the sewer in the center of the street will generally be sufficient; or two rows of tiles may be employed, one placed outside each curb line; if, on the other hand, the soil is exceedingly wet and the street very wide, four or more lines may be employed. These drains may be permitted to discharge into the sewers of the transverse streets.

Surface Drainage. The removal of water falling on the street surface is provided for by collecting it in the gutters, from which it is discharged into the sewers or other channels by means of catch-basins placed at all street intersections and dips in the street grades.

Gutters. The gutters must be of sufficient depth to retain all the water which reaches them and prevent its overflowing on the footpath. The depth should never be less than 6 inches, and very rarely need be more than 10 inches.

Catch-basins are of various forms, usually circular or rectangular, built of brick masonry coated with a plaster of Portland cement. Whichever form is adopted, they should fulfil the following conditions:

(1) The inlet and outlet should have sufficient capacity to receive and discharge all water reaching the basin.

(2) The basins should have sufficient capacity below the outlet to retain all sand and road detritus, and prevent it being carried into the sewer.

(3) They should be trapped so as to prevent the escape of sewer gas. (This requirement is frequently omitted, to the detriment of the health of the people.)

(4) They should be constructed so that the pit can easily be cleaned out.

(5) The inlet should be so constructed as not easily to be choked by leaves or debris.

(6) They must offer the least possible obstruction to traffic.

(7) The pipe connecting the basin to the sewer should be easily freed of any obstruction.

The bottom of the basins should be 6 or 8 feet below the street level; and the water level in them should be from 3 to 4 feet lower than the street surface, as a protection against freezing.

The capacity and number of basins will depend upon the area of surface which they drain.

In streets having level or light longitudinal grades, gullies may be formed along the line of the gutter at such intervals as may be found necessary.

Catch-basins are usually placed at the curb line. In several cities, the basin is placed in the center of the street, and connects to inlets placed at the curb line. This reduces the cost of construction and cleaning, and removes from the sidewalk the dirty operations of cleaning the basins.

Catch-basins and gully-pits require to be cleaned out at frequent intervals; otherwise the odor arising from the decomposing matter contained in them will be very offensive. No rule can be laid down for the intervals at which the cleaning should be done, but they must be cleaned often enough to prevent the matter in them from putrefying. There is no uniformity of practice observed by cities in this matter; in some, the cleaning is done but once a year; in others, after every rain-storm; in still others, at intervals of three or four months; while in a few cities the basins are cleaned out once a month.

FOUNDATIONS

The stability, permanence, and maintenance of any pavement depend upon its foundation. If the foundation is weak, the surface will soon settle unequally, forming depressions and ruts. With a good foundation, the condition of the surface will depend upon the material employed for the pavement and upon the manner of laying it.

The essentials necessary to the forming of a good foundation are:

- (1) The entire removal of all vegetable, perishable, and yielding matter. It is of no use to lay good material on a bad substratum.
- (2) The drainage of the subsoil wherever necessary. A permanent foundation can be secured only by keeping the subsoil dry; for, where water is allowed to pass into and through it, its weak spots will be quickly discovered and settlement will take place.
- (3) The thorough compacting of the natural soil by rolling with a roller of proper weight and shape until it forms a uniform and unyielding surface.
- (4) The placing on the natural soil so compacted, a sufficient thickness of an impervious and incompressible material to cut off all communication between the soil and the bottom of the pavement.

The character of the natural soil over which the roadway is to be built has an important bearing upon the kind of foundation and the manner of forming it; each class of soil will require its own special

treatment. Whatever its character, it must be brought to a dry and tolerably hard condition by draining and rolling. Sand and gravels which do not hold water, present no difficulty in securing a solid and secure foundation; clays and soils retentive of water are the most difficult. Clay should be excavated to a depth of at least 18 inches below the surface of the finished covering; and the space so excavated should be filled in with sand, furnace slag, ashes, coal dust, oyster shells, broken brick, or other materials which are not excessively absorbent of water. A clay soil or one retaining water may be cheaply and effectually improved by laying cross-drains with open joints at intervals of 50 or 100 feet. These drains should be not less than 18 inches below the surface, and the trenches filled with gravel. They should be 4 inches in internal diameter, and should empty into longitudinal drains.

Sand and planks, gravel, and broken stone have been successively used to form the foundation for pavements; but, although eminently useful materials, their application to this purpose has always been a failure. Being inherently weak and possessing no cohesion, the main reliance for both strength and wear must be placed upon the surface-covering. This covering—usually (except in case of sheet asphalt) composed of small units, with joints between them varying from one-half an inch to one and a-half inches—possesses no elements of cohesion; and under the blows and vibrations of traffic the independent units or blocks will settle and be jarred loose. On account of their porous nature, the subsoil quickly becomes saturated with urine and surface waters, which percolate through the joints; winter frosts upheave them; and the surface of the street becomes blistered and broken up in dozens of places.

Concrete. As a foundation for all classes of pavement (broken stone excepted), hydraulic-cement concrete is superior to any other. When properly constituted and laid, it becomes a solid, coherent mass capable of bearing great weight without crushing. If it fail at all, it must fail altogether. The concrete foundation is the most costly, but this is balanced by its permanence and by the saving in the cost of repairs to the pavement which it supports. It admits of access to subterranean pipes with less injury to the neighboring pavement than any other, for the concrete may be broken through at any point without unsettling the foundation for a considerable distance around it, as is the case with

sand or other incoherent material; and when the concrete is replaced and set, the covering may be reset at its proper level, without the uncertain allowance for settlement which is necessary in other cases.

Thickness of Concrete. The thickness of the concrete bed must be proportioned by the engineer; it should be sufficient to provide against breaking under transverse strain caused by the settlement of the subsoil. On a well-drained soil, six inches will be found sufficient; but in moist and clayey soils, twelve inches will not be excessive. On such soils a layer of sand or gravel, spread and compacted before placing the concrete, will be found very beneficial.

The proportions of the ingredients for concrete used for pavement foundations are usually:

1 part Portland cement
3 parts Sand
7 parts Broken Stone.

Or,

1 part Natural Hydraulic Cement
2 parts Sand
5 parts Broken Stone.

The question is sometimes raised as to whether Natural or Portland cement should be used. Natural cement is more extensively employed on account of its being cheaper in price than Portland. There is no advantage gained in using Portland cement. Concrete should not be laid when the temperature falls below 32° F.

The concrete foundation, after completion, should be allowed to remain several days before the pavement is placed upon it, in order that the mortar may become entirely set. During setting, the concrete should be protected from the drying action of the sun and wind, and should be kept damp to prevent the formation of drying cracks.

STONE BLOCK PAVEMENTS

Stone blocks are commonly employed for pavements where traffic is heavy. The material of which the blocks are made should possess sufficient hardness to resist the abrasive action of traffic, and sufficient toughness to prevent them from being broken by the impact of loaded wheels. The hardest stones will not necessarily give the best results in the pavement, since a very hard stone usually wears smooth and becomes slippery. The edges of the block chip off, and the

upper face becomes rounded, thus making the pavement very rough.

The stone is sometimes tested to determine its strength, resistance to abrasion, etc.; but, as the conditions of use are quite different from those under which it may be tested, such tests are seldom satisfactory. However, examination of a stone as to its structure, the closeness of its grain, its homogeneity, porosity, etc., may assist in forming an idea of its value for use in a pavement. A low degree of permeability usually indicates that the material will not be greatly affected by frost.

Materials.—Granite. Granite is more extensively employed for stone block paving than any other variety of stone; and because of this fact, the term "granite paving" is generally used as being synonymous with stone block paving. The granite employed should be of a tough, homogeneous nature. The hard, quartz granites are usually brittle, and do not wear well under the blows of horses' feet or the impact of vehicles; granite containing a high percentage of feldspar will be injuriously affected by atmospheric changes; and granite in which mica predominates will wear rapidly on account of its laminated structure. Granite possesses the very important property of splitting in three planes at right angles to one another, so that paving blocks may readily be formed with nearly plane faces and square corners. This property is called the *rift* or *cleavage*.

Sandstones of a close-grained, compact nature often give very satisfactory results under heavy traffic. They are less hard than granite, and wear more rapidly, but do not become smooth and slippery. Sandstones are generally known in the market by the name of the quarry or place where produced as "Medina," "Berea," etc.

Trap rock, while answering well the requirements as to durability and resistance to wear, is objectionable on account of its tendency to wear smooth and become slippery; it is also difficult to break into regular shapes.

Limestone has not usually been successful in use for the construction of block pavements, on account of its lack of durability against atmospheric influences. The action of frost commonly splits the blocks; and traffic shivers them, owing to the lamination being vertical.

TABLE 12.
Specific Gravity, Weight, Resistance to Crushing, and
Absorption Power of Stones.

MATERIAL	SPECIFIC GRAVITY	WEIGHT Pounds per cu. ft.	RESISTANCE TO CRUSHING Pounds per sq. in.	PERCENTAGE OF WATER ABSORBED
Granite— Maximum	2.80	176	35,000	0.155
Minimum.....	2.60	168	12,000	0.066
Trap— Maximum	3.03	178	24,000	0.019
Minimum	2.86	189	19,000	0.000
Sandstone— Maximum	2.75	170	18,000	5.480
Minimum	2.23	187	5,000	0.410
Limestone— Maximum	2.75	175	20,000	5.000
Minimum.....	1.90	118	7,000	0.200
Brick Paving— Maximum	1.95		20,000	
Minimum.....	2.55		10,000	

Cobblestone Pavement. Cobblestones bedded in sand possess the merit of cheapness, and afford an excellent foothold for horses; but the roughness of such pavements requires the expenditure of a large amount of tractive energy to move a load over them. Aside from this, cobblestones are entirely wanting in the essential requisites of a good pavement. The stones being of irregular size, it is almost impossible to form a bond or to hold them in place. Under the action of the traffic and frost, the roadway soon becomes a mass of loose stones. Moreover, cobblestone pavements are difficult to keep clean, and very unpleasant to travel over.

Belgian Block Pavement. Cobblestones were displaced by pavements formed of small cubical blocks of stone. This type of pavement was first laid in Brussels, thence imported to Paris, and from there taken to the United States, where it has been widely known as the "Belgian block" pavement. It has been largely used in New York City, Brooklyn, and neighboring towns, the material being trap-rock obtained from the Palisades on the Hudson River.

The stones, being of regular shape, remain in place better than cobblestones; but the cubical form (usually five inches in each dimension) is a mistake. The foothold is bad; the stones wear round; and the number of joints is so great that ruts and hollows are quickly formed. This pavement offers less resistance to traction than cobblestones, but it is almost equally rough and noisy.

Granite Block Pavement. The Belgian block has been gradually

displaced by the introduction of rectangular blocks of granite. Blocks of comparatively large dimensions were at first employed. They were from 6 to 8 inches in width on the surface, from 10 to 20 inches in length, with a depth of 9 inches. They were merely placed in rows on the subsoil, perfunctorily rammed, the joints filled with sand, and the street thrown open to traffic. The unequal settlement of the blocks, the insufficiency of the foothold, and the difficulty of cleansing the street, led to the gradual development of the latest type of stone-block pavement, which consists of narrow, rectangular blocks of granite, properly proportioned, laid on an unyielding and impervious foundation, with the joints between the blocks filled with an impermeable cement.

Experience has proved beyond doubt that this latter type of pavement is the most enduring and economical for roadways subjected to heavy and constant traffic. Its advantages are many, while its defects are few.

Advantages.

- (1) Adaptability to all grades.
- (2) Suits all classes of traffic.
- (3) Exceedingly durable.
- (4) Foothold, fair.
- (5) Requires but little repair.
- (6) Yields but little dust or mud.
- (7) Facility for cleansing, fair.

Defects.

(1) Under certain conditions of the atmosphere, the surface of the pavement becomes greasy and slippery.

(2) The incessant din and clatter occasioned by the movement of traffic is an intolerable nuisance; it is claimed by many physicians that the noise injuriously affects the nerves and health of persons who are obliged to live or do business in the vicinity of streets so paved.

(3) Horses constantly employed upon it soon suffer from the continual jarring produced in their legs and hoofs, and quickly wear out.

(4) The discomfort of persons riding over the pavement is very great, because of the continual jolting to which they are subjected.

(5) If stones of an unsuitable quality are used—for example,

those that polish—the surface quickly becomes slippery and exceedingly unsafe for travel.

Size and Shape of Blocks. The proper size of blocks for paving purposes has been a subject of much discussion, and a great variety of forms and dimensions are to be found in all cities.

For stability, a certain proportion must exist between the depth, the length, and the breadth. The depth must be such that when the wheel of a loaded vehicle passes over one edge of the upper surface of a block, the block will not tend to tip up. The resultant direction of the pressure of the load and adjoining blocks should always tend to depress the whole block vertically; where this does not happen, the maintenance of a uniform surface is impossible. To fulfil this requirement, it is not necessary to make the block more than six inches deep.

Width of Blocks. The maximum width of blocks is controlled by the size of horses' hoofs. To afford good foothold to horses drawing heavy loads, it is necessary that the width of each block, measured along the street, shall be the least possible consistent with stability.

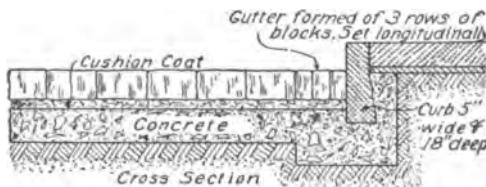


Fig. 54.

If the width be great, a horse drawing a heavy load, attempting to find a joint, slips back, and requires an exceptionally wide joint to pull him up. It is therefore desirable that the width of a block shall not exceed 3 inches; or that four blocks, taken at random and placed side by side, shall not measure more than 14 inches.

Length of Blocks. The length, measured across the street, must be sufficient to break joints properly, for two or more joints in line lead to the formation of grooves. For this purpose the length of the block should be not less than 9 inches nor more than 12 inches.

Form of Blocks. The blocks should be well squared, and must not taper in any direction; sides and ends should be free from irregular projections. Blocks that taper from the surface downwards (wedge-shaped) should not be permitted in the work; but if any are allowed, they should be set with the widest side down.

Manner of Laying Blocks. The blocks should be laid in parallel courses, with their longest side at right angles to the axis of the street, and the longitudinal joints broken by a lap of at least two inches (see Figs. 54 and 55). The reason for this is to prevent the formation of longitudinal ruts, which would happen if the blocks were laid lengthwise. Laying blocks obliquely and "herring-bone" fashion has been

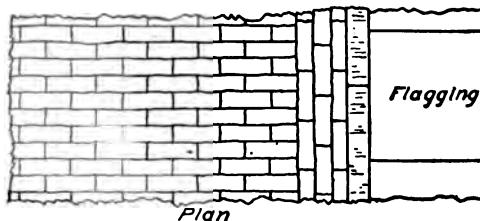


Fig. 55.

tried in several cities, with the idea that the wear and formation of ruts would be reduced by having the vehicle cross the blocks diagonally. The method has failed to give satisfactory results; the wear was irregular and the foothold defective; the difficulty of construction was increased by reason of labor required to form the triangular joints; and the method was wasteful of material.

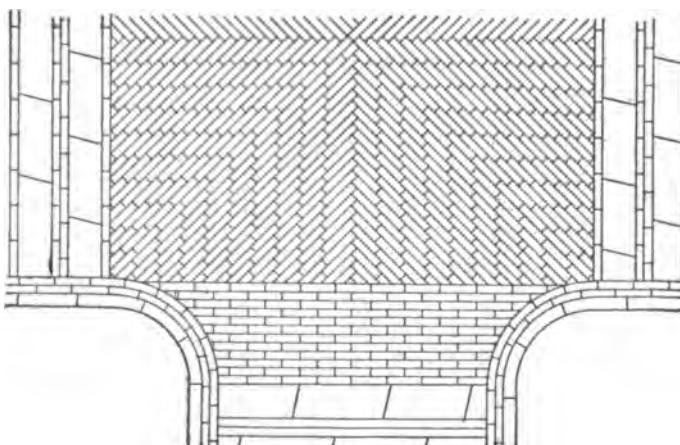


Fig. 56.

The gutters should be formed by three or more courses of block, laid with their length parallel to the curb.

At junctions or intersections of streets, the blocks should be laid diagonally from the center, as shown in Fig. 56. The reasons for

this are: (1) To prevent the traffic crossing the intersection from following the longitudinal joints and thus forming depressions and ruts; (2) Laid in this manner, the blocks afford a more secure foot-hold for horses turning the corners. The ends of the diagonal blocks where they abut against the straight blocks, must be cut to the required bevel.

The blocks forming each course must be of the same depth, and no deviation greater than one-quarter of an inch should be permitted. The blocks should be assorted as they are delivered, and only those corresponding in depth and width should be used in the same course. The better method would be to gauge the blocks at the quarry. This would lessen the cost considerably; it would also avoid the inconvenience to the public due to the stopping of travel because of the rejection of defective material on the ground. This method would undoubtedly be preferable to the contractor, who would be saved the expense of handling unsatisfactory material; and it would also leave the inspectors free to pay more attention to the manner in which the work of paving is performed.

The accurate gauging of the blocks is a matter of much importance. If good work is to be executed, the blocks, when laid, must be in parallel and even courses; and if the blocks be not accurately gauged to one uniform size, the result will be a badly paved street, with the courses running unevenly. The cost of assorting blocks into lots of uniform width, after delivery on the street, is far in excess of any additional price which would have to be paid for accurate gauging at the quarry.

Foundation. The foundation of the blocks must be solid and unyielding. A bed of hydraulic-cement concrete is the most suitable, the thickness of which must be regulated according to the traffic; the thickness, however, should not be less than 4 inches, and need not be more than 9 inches. A thickness of 6 inches will sustain traffic of 600 tons per foot of width.

Cushion Coat. Between the surface of the concrete and the base of the blocks, there must be placed a cushion-coat formed of an incompressible but mobile material, the particles of which will readily adjust themselves to the irregularities of the bases of the blocks and transfer the pressure of the traffic uniformly to the concrete below. A layer of dry, clean sand 1 to 2 inches thick forms an excellent cushion-coat.

Its particles must be of such fineness as to pass through a No. 8 screen; if coarse and containing pebbles, they will not adapt themselves to the irregularities of the bases of the blocks; hence the blocks will be supported at only a few points, and unequal settlement will take place when the pavement is subjected to the action of traffic. The sand must also be perfectly free from moisture, and artificial heat must be used to dry it if necessary. This requirement is an absolute necessity. There should be no moisture below the blocks when laid; nor should water be allowed to penetrate below the blocks; if such happens, the effect of frost will be to upheave the pavement and crack the concrete.

Where the best is desired without regard to cost, a layer half an inch thick of asphaltic cement may be substituted for the sand, with superior and very satisfactory results.

Laying Blocks. The blocks should be laid stone to stone, so that the joint may be of the least possible width; wide joints cause increased wear and noise, and do not increase the foothold. The courses should be commenced on each side and worked toward the middle; and the last stone should fit tightly.

Ramming. After the blocks have been set, they should be well rammed down; and the stones which sink below the general level should be taken up and replaced with a deeper stone or brought to level by increasing the sand bedding.

The practice of workmen is invariably to use the rammer so as to secure a fair surface. This is not the result intended to be secured, but to bring each block to an unyielding bearing. The result of such a surfacing process is to produce an unsightly and uneven roadway when the pressure of traffic is brought upon it. The rammer used should weigh not less than 50 pounds and have a diameter of not less than 3 inches.

Joint Filling. All stone block pavements depend for their waterproof qualities upon the character of the joint filling. Joints filled with sand and gravel are of course pervious. A grout of lime or cement mortar does not make a permanently waterproof joint; it becomes disintegrated under the vibration of traffic. An impervious joint can be made only by employing a filling made from bituminous or asphaltic material; this renders the pavement more impervious to moisture, makes it less noisy, and adds considerably to its strength.

Bituminous Cement for Joint Filling. The bituminous materials

employed are: (1) The tar produced in the manufacture of gas, which, when redistilled, is called *distillate*, and is numbered 1, 2, 3, 4, etc., according to its density; this material under the name of paving-pitch is extensively used, both alone and in combination with other bituminous substances; (2) Combinations of gas tar or coal tar with refined asphaltum; (3) Mixtures of refined asphaltum, creosote, and coal tar.

The formula for the bituminous joint filling used in New York City, is:

Refined Trinidad asphaltum	20 parts.
No. 4 coal-tar distillate.....	100 parts.
Residuum of petroleum.....	3 parts.

In Washington, D. C., coal tar distillate No. 6 is used alone.

In Europe a bituminous cement much used is composed of coal-tar, asphaltum, gas tar, and creosote oil, in the proportion of 100 pounds of asphaltum to 4 gallons of tar and 1 gallon of creosote. These proportions are varied somewhat, according to the quality of the asphaltum employed. The mixture is melted, and is boiled from one to two hours in a suitable boiler, being then poured into the joints in a boiling state. This mixture is impervious to moisture, and possesses a degree of elasticity sufficient to prevent it from cracking.

The mode of applying the bituminous cement is as follows: After the blocks are rammed, the joints are filled to a depth of about two inches with clean gravel heated to a temperature of about 250° F.; then the hot cement is poured in until it forms a layer of about one inch on top of the gravel; then more gravel is filled in to a depth of about two inches; then cement is poured in until it appears on top of the gravel, more gravel being next added until it reaches to within half an inch of the top of the blocks; this remaining half-inch is filled with cement, and then fine gravel or sand is sprinkled over the joints.

In some cases the joints are first filled with heated gravel; the cement is poured in until the sand beneath and the gravel between the blocks will absorb no more, and the joints are filled flush with the top of the pavement. This method is open to objection; for, if the gravel is not sufficiently hot, the cement will be chilled and will not flow to the bottom of the joint, but, instead, will form a thin layer near the surface, which under the action of frost and the vibration of traffic, will be quickly cracked and broken up; the gravel will settle, and the

blocks will be jarred loose, the surface of the pavement becoming a series of ridges and hollows.

The quantity of cement required per square yard of pavement will vary according to the shape of the blocks, the width of the joints, and the depth of the sand bed. With well-shaped blocks, close joints, and a half-inch sand bed, the quantity will vary from $3\frac{1}{2}$ to 5 gallons; with ill-shaped blocks, wide joints, and a heavy sand bed, 10 to 12 gallons

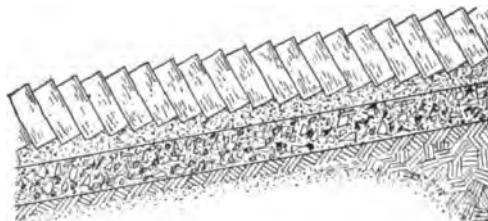


Fig. 57.

would not be an excessive amount to use to secure the result obtained by employing well-shaped blocks and close joints.

Stone Pavement on Steep Grades. Stone blocks may be employed on all practicable grades; but on grades exceeding 10 per cent, cobblestones afford a better foothold than blocks. The cobblestones should be of uniform length, the length being at least twice the breadth—say stones 6 inches long and $2\frac{1}{2}$ to 3 inches in diameter. These should be set on a concrete foundation, laid stone to stone, and the

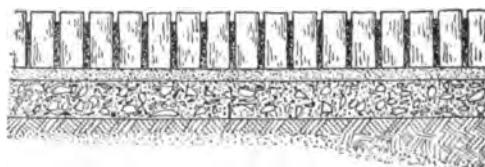


Fig. 58.

interstices filled with cement grout or bituminous cement; or a bituminous concrete foundation may be employed and the interstices between the stones filled with asphaltic paving cement. Should stone blocks be preferred, they must be laid, when the grade exceeds 5 per cent, with a serrated surface, by either of the methods shown in Figs. 57 and 58. The method shown in Fig. 57 consists in slightly tilting the blocks on their bed so as to form a series of ledges or steps, against which the horses' feet being planted, a secure foothold is obtained. The method shown in Fig. 58 consists in placing between the rows of

stones a course of slate, or strips of creosoted wood, rather less than one inch in thickness and about an inch less in depth than the blocks; or the blocks may be spaced about one inch apart, and the joints filled with a grout composed of gravel and cement. The pebbles of the gravel should vary in size between one-quarter and three-quarters of an inch.

BRICK PAVEMENTS

Characteristics of Brick Suitable for Paving. These are:

- (1) Not to be acted upon by acids.
- (2) Not to absorb more than 1-600 of its weight of water in 48 hours.
- (3) Not susceptible to polish.
- (4) Rough to the touch, resembling fine sandpaper.
- (5) To give a clear, ringing sound when struck together.
- (6) When broken, to show a compact, uniform, close-grained, structure, free from air-holes and pebbles.
- (7) Not to scale, spall, or chip when quickly struck on the edges.
- (8) Hard but not brittle.

Tests of Paving Brick. To ascertain the quality of paving brick, they are generally subjected to four tests, namely: (1) Abrasion by impact (commonly called the "Rattler" test); (2) absorption; (3) transverse or cross-breaking; (4) crushing. With a view to securing uniformity in the methods of making the above tests, the National Brick Manufacturers' Association has adopted and recommends the following:

Rattler Test

1. *Dimensions of the Machine.* The standard machine shall be 28 inches in diameter and 20 inches in length, measured inside the chamber.

Other machines may be used, varying in diameter between 26 and 30 inches, and in length between 18 and 24 inches; but if this is done, a record of it must be attached to the official report. Long rattlers may be cut up into sections of suitable length by the insertion of an iron diaphragm at the proper point.

2. *Construction of the Machine.* The barrel shall be supported on trunnions at either end; in no case shall a shaft pass through the rattling chamber. The cross-section of the barrel shall be a regular polygon having 14 sides. The heads shall be composed of gray cast-

iron, not chilled or case-hardened. The staves shall preferably be composed of steel plates, since cast-iron peans and ultimately breaks under the wearing action on the inside. There shall be a space of one-fourth of an inch between the staves, for the escape of dust and small pieces of waste. Other machines may be used, having from twelve to sixteen staves; but if this is done, a record of it must be attached to the official report of the test.

3. *Composition of the Charge.* All tests must be executed on charges containing but one make of brick or block at a time. The charge shall consist of 9 paving blocks or 12 paving bricks, together with 300 pounds of shot made of ordinary machinery cast-iron. This shot shall be of two sizes, as described below; and the shot charge shall be composed one-fourth (75 pounds) of the larger size, and three-fourths (225 pounds) of the smaller size.

4. *Size of the Shot.* The larger size shall weigh about $7\frac{1}{2}$ pounds and be about $2\frac{1}{2}$ inches square and $4\frac{1}{2}$ inches long, with slightly rounded edges. The smaller size shall be cubes of $1\frac{1}{2}$ inches on a side, with rounded edges. The individual shot shall be replaced by new ones when they have lost one-tenth of their original weight.

5. *Revolutions of the Charge.* The number of revolutions of a standard test shall be 1,800; and the speed of rotation shall not fall below 28 nor exceed 30 revolutions per minute. The belt-power shall be sufficient to rotate the rattler at the same speed, whether charged or empty.

6. *Condition of the Charge.* The bricks composing a charge shall be thoroughly dried before making the test.

7. *Calculation of the Results.* The loss shall be calculated in per cents of the weight of the dry brick composing the charge; and no result shall be considered as official unless it is the average of two distinct and complete tests made on separate charges of brick.

Absorption Test

1. The number of bricks for a standard test shall be five.
2. The test must be conducted on rattled brick. If none such are available, the whole brick must be broken in halves before treatment.
3. Dry the bricks for 48 hours at a temperature ranging from 230° to 250° F. before weighing for the official dry weight.
4. Soak for 48 hours completely immersed in pure water.

5. After soaking, and before weighing, the bricks must be wiped dry from surplus water.
6. The difference in the weight must be determined on scales sensitive to one gram.
7. The increase in weight due to water absorbed shall be calculated in per cents of the initial dry weight.

Cross-Breaking Test

1. Support the brick on edge, or as laid in the pavement, on hardened steel knife-edges, rounded longitudinally to a radius of twelve inches and transversely to a radius of one-eighth inch, and bolted in position so as to secure a span of six inches.
2. Apply the load to the middle of the top face through a hardened steel knife-edge, straight longitudinally and rounded transversely to a radius of one-sixteenth inch.
3. Apply the load at a uniform rate of increase till fracture ensues.
4. Compute the modulus of rupture by the formula

$$f = \frac{3wl}{2bd^2}$$

in which f - modulus of rupture, in pounds per square inch;
 w - total breaking load, in pounds;
 l - length of span, in inches - 6;
 b - breadth of brick, in inches;
 d - depth of brick, in inches.

5. Samples for test must be free from all visible irregularities of surface or deformities of shape, and their upper and lower faces must be practically parallel.
6. Not less than ten brick shall be broken, and the average of all shall be taken for a standard test.

Crushing Test

1. The crushing test should be made on half-bricks, loaded edgewise, or as they are laid in the street. If the machine used is unable to crush a full half-brick, the area may be reduced by chipping off, keeping the form of the piece to be tested as nearly prismatic as possible. A machine of at least 100,000 pounds' capacity should be used; and the specimen should not be reduced below four square inches of area in cross-section at right angles to direction of load.
2. The upper and lower surfaces should preferably be ground to

true and parallel planes. If this is not done, they should be bedded, while in the testing machine, in plaster of Paris, which should be allowed to harden ten minutes under weight of the crushing planes only, before the load is applied.

3. The load should be applied at a uniform rate of increase to the point of rupture.

4. Not less than an average obtained from five tests on five different bricks shall constitute a standard test.

Properties of Paving Bricks. Paving bricks range in weight from $5\frac{1}{2}$ to $7\frac{1}{2}$ pounds; in specific gravity, from 1.91 to 2.70; in resistance to crushing, from 7,000 to 18,000 pounds per square inch; in resistance to cross-breaking, $R = 1,400$ to 2,000 pounds; in absorption, from 0.15 to 3 per cent in 24 hours. The dimensions vary according to locality and the requirements of the specifications. The "standard" bricks are $2\frac{1}{2} \times 4 \times 8$ inches, requiring 58 bricks to the square yard, and weighing 7 pounds each; "repressed", $2\frac{1}{2} \times 4 \times 8\frac{1}{2}$ inches, requiring 61 to the square yard, and weighing $6\frac{1}{2}$ pounds each; "Metropolitan", $3 \times 4 \times 9$ inches, requiring 45 to the square yard, and weighing $9\frac{1}{2}$ pounds each.

Advantages of Brick Pavements. These may be stated as follows:

- (1) Ease of traction.
- (2) Good foothold for horses.
- (3) Not disagreeably noisy.
- (4) Yields but little dust and mud.
- (5) Adapted to all grades.
- (6) Easily repaired.
- (7) Easily cleaned.
- (8) But slightly absorbent.
- (9) Pleasing to the eye.
- (10) Expeditiously laid.
- (11) Durable under moderate traffic.

Defects of Brick Pavements. The principal defects of brick pavements arise from lack of uniformity in the quality of the bricks, and from the liability of incorporating in the pavement bricks of too soft or porous a structure, which crumbles under the action of traffic or frost.

Foundation. A brick pavement should have a firm foundation. As the surface is made up of small, independent blocks, each one must

be adequately supported, or the load coming upon it may force it downwards and cause unevenness, a condition which conduces to the rapid destruction of the pavement. Several forms of foundation have been used—such as gravel, plank, sand, broken stone, and concrete. The last mentioned is doubtless the best.

Sand Cushion. The sand cushion is a layer of sand placed on top of the concrete to form a bed for the brick. Practice regarding the depth of this layer of sand varies considerably. In some cases it is only half an inch deep, varying from this up to three inches. The sand cushion is very desirable, as it not only forms a perfectly true and even surface upon which to place brick, but also makes the pavement less hard and rigid than would be the case were the brick laid directly on the concrete.

The sand is spread evenly, sprinkled with water, smoothed, and brought to the proper contour by screeds or wooden templets, properly trussed, mounted on wheels or shoes which bear upon the upper surface of the curb. Moving the templet forward levels and forms the sand to a uniform surface and proper shape.

The sand used for the cushion-coat should be clean and free from loam, moderately coarse, and free from pebbles exceeding one-quarter inch in size.

Manner of Laying. The bricks should be laid on edge, as closely and compactly as possible, in straight courses across the street, with the length of the bricks at right angles to the axis of the street. Joints should be broken by at least 3 inches. None but whole bricks should be used, except in starting a course or making a closure. To provide for the expansion of the pavement, both longitudinal and transverse expansion-joints are used, the former being made by placing a board templet seven-eighths of an inch thick against the curb and abutting the brick thereto. The transverse joints are formed at intervals varying between 25 and 50 feet, by placing a templet or building-lath three-eighths of an inch thick between two or three rows of brick. After the bricks are rammed and ready for grouting, these templets are removed, and the spaces so left are filled with coal-tar pitch or asphaltic paving cement. The amount of pitch or cement required will vary between one and one and a-half pounds per square yard of pavement, depending upon the width of the joints. After 25 or 30 feet of the pavement is laid, every part of it should be rammed with a rammer

weighing not less than 50 pounds; and the bricks which sink below the general level should be removed, sufficient sand being added to raise the brick to the required level. After all objectionable brick have been removed, the surface should be swept clean, then rolled with a steam roller weighing from 3 to 6 tons. The object of rolling is to bring the bricks to an unyielding bearing with a plane surface; if this is not done, the pavement will be rough and noisy and will lack durability.

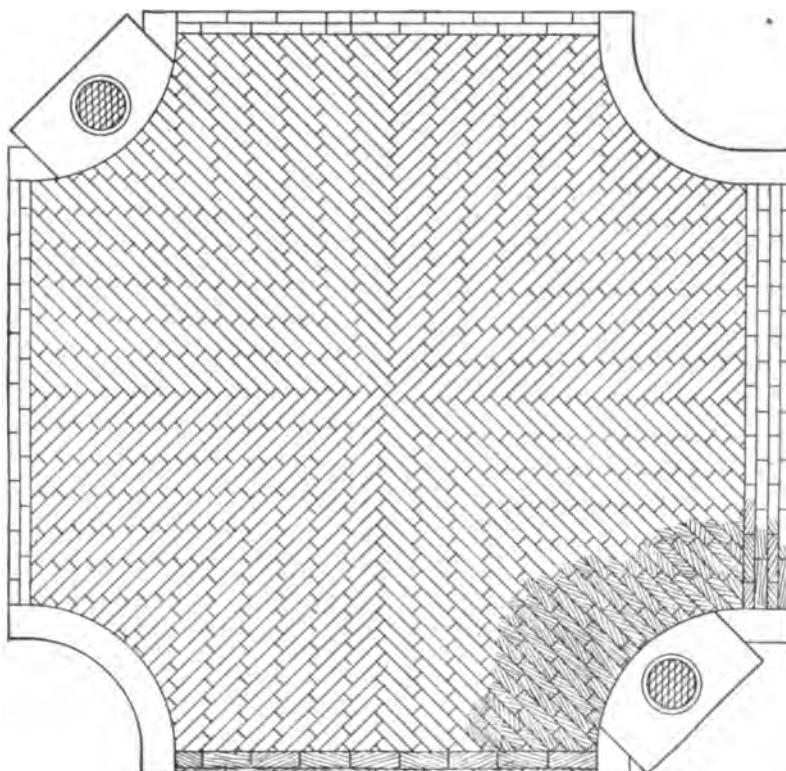


Fig. 59.

The rolling should be first executed longitudinally, beginning at the crown and working toward the gutter, taking care that each return trip of the roller covers exactly the same area as the preceding trip, so that the second passage may neutralize any careening of the brick due to the first passage.

The manner of laying brick at street intersections is shown in Fig. 59.

Joint Filling. The character of the material used in filling the joints between the brick has considerable influence on the success and durability of the pavement. Various materials have been used—such as sand, coal-tar pitch, asphalt, mixtures of coal-tar and asphalt, and Portland cement, besides various patented fillers, as "Murphy's grout", which is made from ground slag and cement. Each material has its advocates, and there is much difference of opinion as to which gives the best results.

The best results seem to be obtained by using a high grade of Portland cement containing the smallest amount of lime in its composition, the presence of the lime increasing the tendency of the filler to swell through absorption of moisture, causing the pavement to rise or to be lifted away from its foundation, and thus producing the roaring or rumbling noise so frequently complained of.

The Portland cement grout, when uniformly mixed and carefully placed, resists the impact of traffic and wears well with brick. When a failure occurs, repairs can be made quickly; and, if made early, the pavement will be restored to a good condition. If, however, repairs are neglected, the brick soon loosens and the pavement fails.

The office of a filler is to prevent water from reaching the foundation, and to protect the edges of the brick from spalling under traffic. In order to meet both of these requirements, every joint must be filled to the top, and must remain so, wearing down with the brick. Sand does not meet these requirements. Although at first making a good filler, being inexpensive and reducing the liability of the pavement to be noisy, it soon washes out, leaving the edges of the brick unprotected and consequently liable to be chipped. Coal-tar and the mixtures of coal-tar and asphalt have an advantage in rendering a pavement less noisy and in cementing together any breaks that may occur through upheavals from frost or other causes; but, unless made very hard, they have the disadvantage of becoming soft in hot weather and flowing to the gutters and low places in the pavement, there forming a black and unsightly scale and leaving the high parts unprotected. The joints, thus deprived of their filling, become receptacles for water, mud, and ice in turn; and the edges of the brick are quickly broken down. Some of these mixtures become so brittle in winter that they crack and fly out of the joints under the action of traffic.

The Portland cement filler is prepared by mixing two parts of

cement and one part of fine sand with sufficient water to make a thin grout. The most convenient arrangement for preparing and distributing the grout is a water-tight wooden box carried on four wooden wheels about 12 inches in diameter. The box may be about 4 feet wide, 7 feet long, and 12 inches deep, furnished with a gate about 8 inches wide, in the rear end. The box should be mounted on the wheels with an inclination, so that the rear end is about 4 inches lower than the front end.

The operation of placing the filler is as follows: The cement and sand are placed in the box, and sufficient water is added to make a thin grout. The box is located about 12 feet from the gutter, the end gate opened, and about 2 cubic feet of the grout allowed to flow out and run over the top of the brick (care being taken to stir the grout while it is being discharged). If the brick are very dry, the entire surface of the pavement should be thoroughly wet with a hose before applying the grout; if not, absorption of the water from the grout by the bricks will prevent adhesion between the bricks and the cement grout. The grout is swept into the joints by ordinary bass brooms. After about 100 feet in length of the pavement has been covered the box is returned to the starting-point, and the operation is repeated with a grout somewhat thicker than the first. If this second application is not sufficient to fill the joints, the operation is repeated as often as may be necessary to fill them. If the grout has been made too thin, or the grade of the street is so great that the grout will not remain long enough in place to set, dry cement may be sprinkled over the joints and swept in. After the joints are completely filled and inspected, allowing three or four hours to intervene, the completed pavement should be covered with sand to a depth of about half an inch, and the roadway barricaded, and no traffic allowed on it for at least ten days.

The object of covering the pavement with sand is to prevent the grout from drying or settling too rapidly; hence, in dry and windy weather, it should be sprinkled from time to time. If coarse sand is employed in the grout, it will separate from the cement during the operation of filling the joints, with the result that many joints will be filled with sand and very little cement, while others will be filled with cement and little or no sand; thus there will be many spots in the pavement in which no bond is formed between the bricks, and under the action of traffic these portions will quickly become defective.

The coal-tar filler is best applied by pouring the material from buckets, and brooming it into the joints with wire brooms. In order to fill the joints effectually, it must be used only when very hot. To secure this condition, a heating tank on wheels is necessary. It should have a capacity of at least five barrels, and be kept at a uniform temperature all day. One man is necessary to feed the fire and draw the material into the buckets; another, to carry the buckets from the heating-tank to a third, who pours the material over the street. The latter starts to pour in the center of the street, working backward toward the curb, and pouring a strip about two feet in width. A fourth man, with a wire broom, follows immediately after him, sweeping the surplus material toward the pourer and in the direction of the curb. This method leaves the entire surface of the pavement covered with a thin coating of pitch, which should immediately be covered with a light coating of sand; the sand becomes imbedded in the pitch. Under the action of traffic, this thin coating is quickly worn away, leaving the surface of the bricks clean and smooth.

Tools Employed in Construction of Block Pavements. The principal tools required in constructing block pavements comprise *hammers* and *rammers* of varying sizes and shapes, depending on the material and size of the blocks to be laid; also *crowbars*, *sand screens*, and *rattan* and *wire brooms*. Cobblestones, square blocks, and brick require different types of both hammers and ramblers for adjusting them to place and forcing them to their seat. A cobblestone rammer, for example, is usually made of wood (generally locust) in the shape of a long truncated cone, banded with iron at top and bottom, weighing about 40 pounds, and having two handles, one at the top and another on one side. A Belgian block rammer is slightly heavier, consisting of an upper part of wood set in a steel base; while a rammer for granite blocks is still heavier, comprising an iron base with cast-steel face, into which is set a locust plug with hickory handles. For laying brick, a wooden rammer shod with cast iron or steel and weighing about 27 pounds is used. A light rammer of about 20 pounds' weight, consisting of a metallic base attached to a long, slim wooden handle, is used for miscellaneous work, such as tamping in trenches, next to curbs, etc.

Concrete-Mixing Machine. Where large quantities of concrete are required, as in the foundations of improved pavements, concrete can be prepared more expeditiously and economically by the use of

mechanical mixers, and the ingredients will be more thoroughly mixed, than by hand. Thorough incorporation of the ingredients is an essential element in the quality of a concrete. When mixed by hand, however, the incorporation is rarely complete, because it depends upon the proper manipulation of the hoe and shovel. The manipulation, although extremely simple, is rarely performed by the ordinary laborer unless he is constantly watched by the overseer.

Several varieties of concrete-mixing machines are in the market. A convenient portable type is illustrated in Fig. 60. The capacity of

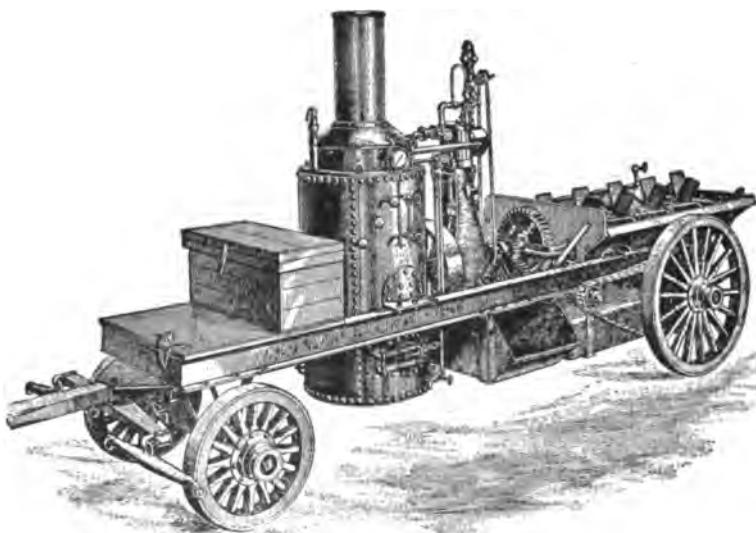


Fig. 60. Concrete Mixing Machine.

the mixers ranges from five to twenty cubic yards per hour, depending upon size, regularity with which the materials are supplied, speed, etc.

Gravel Heaters. Fig. 61 illustrates a device commonly employed for heating the gravel used for joint filling in stone-block pavements. These heaters are made in various sizes, a common size being 9 feet long, 5 feet wide, and 3 feet 9 inches high.

Melting Furnaces, for heating the pitch or tar for joint filling, are illustrated by Fig. 62. Various sizes are on the market.

WOOD PAVEMENTS

Wood pavements are formed of either rectangular or cylindrical blocks of wood. The rectangular blocks are generally 3 inches wide,

9 inches long, and 6 inches deep; the round blocks are commonly 6 inches in diameter and 6 inches long.

The kinds of wood most commonly used are cedar, cypress, juniper, yellow pine, and mesquite; and recently *jarrah* from Australia, and *pyingado* from India, have been used.

The wood is used in its natural condition, or impregnated with creosote or other chemical preservative.

The blocks of wood are laid either on the natural soil, on a bed of sand and gravel, on a layer of broken stone, on a layer of concrete,

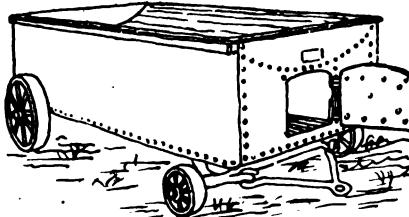


Fig. 61. Gravel Heater.

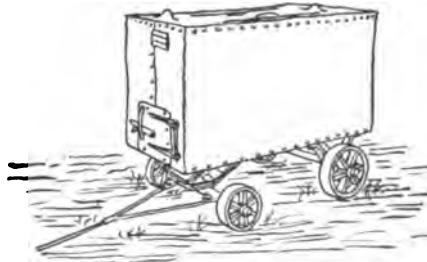


Fig. 62. Melting Furnace.

or, sometimes, on a double layer of plank. The joints are filled either with sand, paving-pitch, or Portland-cement grout.

Advantages. The advantages of wood pavement may be stated as follows:

- (1) It affords good foothold for horses.
- (2) It offers less resistance to traction than stone, and slightly more than asphalt.
- (3) It suits all classes of traffic.
- (4) It may be used on grades up to five per cent.
- (5) It is moderately durable.
- (6) It yields no mud when laid upon an impervious foundation.
- (7) It yields but little dust.

- (8) It is moderate in first cost.
- (9) It is not disagreeably noisy.

Defects. The principal objections to wood pavement are:

- (1) It is difficult to cleanse.

(2) Under certain conditions of the atmosphere it becomes greasy and very unsafe for horses.

(3) It is not easy to open for the purpose of gaining access to underground pipes, it being necessary to remove rather a large surface for this purpose, which has to be left a little time after being repaired before traffic is again allowed upon it.

- (4) It is absorbent of moisture.

- (5) It is claimed by many that wood pavements are unhealthy.

Quality of Wood. The question as to which of the various kinds of wood available is the most durable and economical, has not been satisfactorily determined. Many varieties have been tried. In England, preference is given to Baltic fir, yellow pine, and Swedish yellow deal. In the United States the variety most used (on account of its abundance and cheapness) is cedar; but yellow pine, tamarack, and mesquite have also been used to a limited extent, and cypress and juniper are being largely used in some of the Southern States.

Hardwoods, such as oak, etc., do not make the best pavements, as such woods become slippery. The softer, close-grained woods, such as cedar and pine, wear better and give good foothold.

The wood employed should be sound and seasoned, free from sap, shakes, and knots. Defective blocks laid in the pavement will quickly cause holes in the surface, and the adjoining blocks will suffer under wear, the whole surface becoming bumpy.

Chemical Treatment of Wood. The great enemy of all wood pavements is decay, induced by the action of the air and water. Wood is porous, absorbs moisture, and thus hastens its own destruction. Many processes have been invented to overcome this defect. The most popular processes at present are *creosoting* and modifications of the same, known as the "creo-resinate" and "kredine" processes. These consist of creosote mixed with various chemicals which are supposed to add to the preserving qualities of the creosote.

Creosoting. This process consists in impregnating the wood with the oil of tar, called *creosote*, from which the ammonia has been expelled, the effect being to coagulate the albumen and thereby prevent

its decomposition, also to fill the pores of the wood with a bituminous substance which excludes both air and moisture, and which is noxious to the lower forms of animal and vegetable life. In adopting this process, all moisture should be dried out of the pores of the timber. The softer woods, while warm from the drying-house, may be immersed at once in an open tank containing hot creosote oil, when they will absorb about 8 or 9 pounds per cubic foot. For hardwoods, and woods which are required to absorb more than 8 or 9 pounds of creosote per cubic foot, the timber should be placed in an iron cylinder with closed ends, and the creosote, which should be heated to a temperature of about 120° F., forced in with a pressure of 170 pounds to the square inch. The heat must be kept up until the process is complete, to prevent the creosote from crystallizing in the pores of the wood. By this means the softer woods will easily absorb from 10 to 12 pounds of oil per cubic foot.

The most effective method, however, is to exhaust the air from the cylinder after the timber is inserted; then to allow the oil to flow in; and when the cylinder is full, to use a force pump with a pressure of 150 to 200 pounds per square inch, until the wood has absorbed the requisite quantity of oil, as indicated by a gauge, which should be fitted to the reservoir tank.

The oil is usually heated by coils of pipe placed in the reservoir, through which a current of steam is passed.

The quantity of creosote oil recommended to be forced into the wood is from 8 to 12 pounds per cubic foot. Into oak and other hard woods it is difficult to force, even with the greatest pressure, more than 2 or 3 pounds of oil.

The advantages of this process are: The chemical constituents of the oil preserve the fibers of the wood by coagulating the albumen of the sap; the fatty matters act mechanically by filling the pores and thus exclude water; while the carbolic acid contained in the oil is a powerful disinfectant.

The life of the wood is extended by any of the above processes, by preserving it from decay; but such processes have little or no effect on the wear of the blocks under traffic.

The process of dipping the blocks in coal tar or creosote oil is injurious. Besides affording a cover for the use of defective or sappy wood, it hastens decay, especially of green wood; it closes up the ex-

terior of the cells of the wood so that moisture cannot escape, thus causing fermentation to take place in the interior of the block, which quickly destroys the strength of the fibers and reduces them to punk.

Expansion of Blocks. Wood blocks expand on exposure to moisture; and, when they are laid end to end across the street, the curbstones are liable to be displaced, or the courses of the blocks will be bent into reserve curves. To avoid this, the joints of the courses near the curb may be left open until expansion has ceased, the space being temporarily filled with sand. The rate of expansion is about 1 inch in 8 feet, but varies for different woods. The time required for the wood to become fully expanded varies from 12 to 18 months. By employing blocks impregnated with the oil of creosote, this trouble will be avoided. Blocks so treated do not contract or expand to any appreciable extent.

The comparative expansion of creosoted and plain wood blocks after immersion in water for forty-eight hours, in percentage on original dimensions, was:

Expansion of Wood Paving Blocks

DIMENSION	CREOSOTED	PLAIN
On length of block.....	.000	.6
On width " "	.57	.83
On depth " "	.15	.31

Manner of Laying. The blocks are set with the fiber vertical, and the long dimension crosswise of the street, the longitudinal joints being broken by a lap of at least one-third the length of the block; the

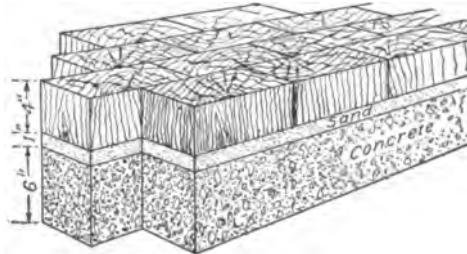


Fig. 63.

blocks should be laid so as to have the least possible width of joint. Wide joints hasten the destruction of the wood by permitting the fibers to wear under traffic, which also causes the surface of the pavement

to wear in small ridges. The most recent practice for laying blocks on 3 per cent grades, has been to remove from the top of one side of each block a strip $\frac{1}{4}$ inch thick and $1\frac{1}{2}$ inches deep, extending the length of the block. When the blocks are laid and driven closely together, there is a quarter-inch opening or joint extending clear across the street in each course. These joints are filled with Portland cement grout. Fig. 63 shows a section of pavement having this form of joint.

Filling for Joints. The best materials for filling the joints are bitumen for the lower two or three inches, and hydraulic cement grout for the remainder of the depth. The cement grout protects the pitch from the action of the sun, and does not wear down very much below the surface of the wood.

ASPHALT PAVEMENTS.

Asphaltic Paving Materials. All asphaltic or bituminous pavements are composed of two essential parts—namely, the cementing material (*matrix*) and the resisting material (*aggregate*). Each has a distinct function to perform; the first furnishes and preserves the coherency of the mass; the second resists the wear of traffic.

Two classes of asphaltic paving compounds are in use,—namely, *natural* and *artificial*. The “natural” variety is composed of either limestone or sandstone naturally cemented with bitumen. To this class belong the bituminous limestones of Europe, Texas, Utah, etc., and the bituminous sandstones of California, Kentucky, Texas, Indian Territory, etc. The “artificial” consists of mixtures of asphaltic cement with sand and stone dust. To this class belong the pavements made from Trinidad, Bermudez, Cuban, and similar asphaltums. For the artificial variety, most hard bitumens are, when properly prepared, equally suitable. For the aggregate, the most suitable materials are stone-dust from the harder rocks, such as granite, trap, etc., and sharp angular sand. These materials should be entirely free from loam and vegetable impurities. The strength and enduring qualities of the mixture will depend upon the quality, strength, and proportion of each ingredient, as well as upon the cohesion of the matrix and its adhesion to the aggregate.

Bituminous limestone consists of carbonate of lime naturally cemented with bitumen in proportions varying from 80 to 93 per cent of carbonate of lime and from 7 to 20 per cent of bitumen. Its color, when freshly broken, is a dark (almost black) chocolate brown, the

darker color being due to a large percentage of bitumen. At a temperature of from 55° to 70° F., the material is hard and sonorous, and breaks easily with an irregular fracture; at temperatures between 70° and 140° F. it softens, passing with the rise in temperature through various degrees of plasticity, until, at between 140° and 160° F., it begins to crumble; at 212° it commences to melt; and at 280° F. it is completely disintegrated. Its specific gravity is about 2.235.

Bituminous limestone is the material employed for paving purposes throughout Europe. It is obtained principally from deposits at Val-de-Travers, canton of Neufchatel, Switzerland; at Seysell, in the Department of Ain, France; at Ragusa, Sicily; at Limmer, near Hanover; and at Vorwohle, Germany.

Bituminous limestone is found in several parts of the United States. Two of these deposits are at present being worked—one in Texas, the material from which is called "lithocarbon"; and one on the Wasatch Indian Reservation. These deposits contain from 10 to 30 per cent of bitumen.

The bituminous limestones which contain about 10 per cent of bitumen are used for paving in their natural condition, being simply reduced to powder, heated until thoroughly softened, then spread while hot upon the foundation, and tamped and rammed until compacted.

Bituminous sandstones are composed of sandstone rock impregnated with bitumen in amounts varying from a trace to 70 per cent. They are found in both Europe and America. In Europe, they are chiefly used for the production of pure bitumen, which is extracted by boiling or macerating them with water. In the United States, extensive deposits are found in the Western States; and since 1880 they have been gradually coming into use as a paving material, so that now upwards of 150 miles of streets in Western cities are paved with them. They are prepared for use as paving material by crushing to powder, which is heated to about 250° F. or until it becomes plastic, then spread upon the street and compressed by rolling; sometimes sand or gravel is added, and it is stated that a mixture of about 80 per cent of gravel makes a durable pavement.

Trinidad Asphaltum. The deposits of asphaltum in the island of Trinidad, W. I., have been the main source of supply for the asphaltum used in street paving in the United States. Three kinds are found there, which have been named, according to the source, *lake-pitch*,

land or *overflow pitch*, and *iron pitch*. The first and most valuable kind is obtained from the so-called Pitch Lake.

The term *land* or *overflow* pitch is applied to the deposits of asphaltum found outside the lake. These deposits form extensive beds of variable thickness, and are covered with from a few to several feet of earth; they are considered by some authorities to be formed from pitch which has overflowed from the lake; by others to be of entirely different origin. The name *cheese pitch* is given to such portions of the land pitch as more nearly resemble that obtained from the lake.

The term *iron pitch* is used to designate large and isolated masses of extremely hard asphaltum found both within and without the borders of the lake. It is supposed to have been formed by the action of heat caused by forest fires, which, sweeping over the softer pitch, removed its more volatile constituents.

The name *épuree* is given to asphaltum refined on the island of Trinidad. The process is conducted in a very crude manner, in large, open, cast-iron sugar boilers.

The characteristics of crude Trinidad asphaltum, both *lake* and *land*, are as follows: It is composed of bitumen mixed with fine sand, clay, and vegetable matter. Its specific gravity varies according to the impurities present, but is usually about 1.28. Its color, when freshly excavated, is a brown, which changes to black on exposure to the atmosphere. When freshly broken, it emits the usual bituminous odor. It is porous, containing gas cavities, and in consistency resembles cheese. If left long enough in the sun, the surface will soften and melt, and will finally flow into a more or less compact mass.

Refined Trinidad Asphaltum. The crude asphaltum is refined or purified by melting it in iron kettles or stills by the application of indirect heat.

The operation of refining proceeds as follows: During the heating, the water and lighter oils are evaporated; the asphaltum is liquefied; the vegetable matter rises to the surface, and is skimmed off; the earthy and siliceous matters settle to the bottom; and the liquid asphaltum is drawn off into old cement or flour barrels.

When the asphaltum is refined without agitation, the residue remaining in the still forms a considerable percentage of the crude material, frequently amounting to 12 per cent; and it was at one time considered that the greater the amount of this residue the better the

quality of the refined asphaltum. Since agitation has been adopted, however, the greater part of the earthy and siliceous matters is retained in suspension; and it has come to be considered just as desirable for a part of the surface mixture as the sand which is subsequently added. The refined asphaltum, if for local use, is generally converted into cement in the same still in which it was refined.

The average composition of both the land and lake varieties is shown by the following analyses:

Average Composition of Trinidad Asphaltum

CONSTITUENTS	LAKE		LAND
	Hard	Soft	
Water	Per Cent	Per Cent	Per Cent
27.85	84.10	26.69	
Inorganic matter	26.38	25.05	27.57
26.38	25.05	27.57	
Organic non-bituminous matter	7.63	6.35	8.05
7.63	6.35	8.05	
Bitumen	38.14	34.50	37.76
	100.00	100.00	100.00
When the analyses are calculated to a basis of dry substances, the composition is: Inorganic matter			
36.56	38.00	37.74	
Organic matter not bitumen	10.57	9.64	10.68
10.57	9.64	10.68	
Bitumen	52.87	52.36	51.58
	100.00	100.00	100.00
The substances volatilized in 10 hours at 400° F.	3.66	12.24	0.86 to 1.37
The substances soften at	190° F.	170° F.	200° to 250° F.
" " flow at	200° F.	185° F.	210° to 320° F.

The characteristics of refined Trinidad asphaltum are as follows: The color is black, with a homogeneous appearance. At a temperature of about 70° F., it is very brittle, and breaks with a conchoidal fracture. It burns with a yellowish-white flame, and in burning emits an empyreumatic odor, and possesses little cementitious quality. To give it the required plasticity and tenacity, it is mixed while liquid with from 16 to 21 pounds of residuum oil to 100 pounds of asphaltum.

The product resulting from the combination is called *asphalt paving-cement*. Its consistency should be such that, at a temperature of from 70° to 80° F., it can be easily indented with the fingers, and on slight warming be drawn out in strings or threads.

Artificial Asphalt Pavements. The pavements made from Trinidad, Bermudez, California, and similar asphaltums, are composed of mechanical mixtures of asphaltic cement, sand, and stone-dust.

The sand should be equal in quality to that used for hydraulic cement mortar; it must be entirely free from clay, loam, and vegetable

impurities; its grains should be angular and range from coarse to fine.

The stone-dust is used to aid in filling the voids in the sand and thus reduce the amount of cement. The amount used varies with the coarseness of the sand and the quality of the cement, and ranges from 5 to 15 per cent. (The voids in sand vary from .3 to .5 per cent.)

As to the quality of the stone-dust, that from any durable stone is equally suitable. Limestone-dust was originally used, and has never been entirely discarded.

The paving composition is prepared by heating the mixed sand and stone-dust and the asphalt cement separately to a temperature of about 300° F. The heated ingredients are measured into a pug-mill and thoroughly incorporated. When this is accomplished, the mixture is ready for use. It is hauled to the street and spread with iron rakes to such depth as will give the required thickness when compacted (the finished thickness varies between 1½ and 2½ inches). The reduction of thickness by compression is generally about 40 per cent.

The mixture is sometimes laid in two layers. The first is called the **binder** or **cushion-coat**; it contains from 2 to 5 per cent more cement than the surface-coat; its thickness is usually $\frac{1}{2}$ inch. The object of the binder course is to unite the surface mixture with the foundation, which it does through the larger percentage of cement that it contains, which, if put in the surface mixture, would render it too soft.

The paving composition is compressed by means of rollers and tamping irons, the latter being heated in a fire contained in an iron basket mounted on wheels. These irons are used for tamping such portions as are inaccessible to the roller—namely, gutters, around man-hole heads, etc.

Two rollers are sometimes employed; one, weighing 5 to 6 tons and of narrow tread, is used to give the first compression; and the other, weighing about 10 tons and of broad tread, is used for finishing. The amount of rolling varies; the average is about 1 hour per 1,000 square yards of surface. After the primary compression, natural hydraulic or any impalpable mineral matter is sprinkled over the surface, to prevent the adhesion of the material to the roller and to give the surface a more pleasing appearance. When the asphalt is laid up to the curb, the surface of the portion forming the gutter is painted with a coat of hot cement.

Although asphaltum is a bad conductor of heat, and the cement

retains its plasticity for several hours, occasions may and do arise through which the composition before it is spread has cooled; its condition when this happens is analogous to hydraulic cement which has taken a "set," and the same rules which apply to hydraulic cement in this condition should be respected in regard to asphaltic cement.

The proportions of the ingredients in the paving mixture are not constant, but vary with the climate of the place where the pavement is to be used, the character of the sand, and the amount and character of the traffic that will use the pavement. The range in the proportion is as follows:

Formula for Asphaltic Paving Mixture

Asphalt cement 12 to 15 per cent.

Sand 70 to 83 " "

Stone-dust 5 to 15 " "

A cubic yard of the prepared material weighs about 4,500 pounds, and will lay the following amount of wearing-surface:

2½ inches thick 12 square yards.

2 " " 18 " "

1½ " " 27 " "

One ton of refined asphaltum makes about 2,300 pounds of asphalt cement, equal to about 3.4 cubic yards of surface material.

Foundation. A solid, unyielding foundation is indispensable with all asphaltic pavements, because asphalt of itself has no power of offering resistance to the action of traffic, consequently it is nearly always placed upon a bed of hydraulic cement concrete. The concrete must be thoroughly set and its surface dry before the asphalt is laid upon it; if not, the water will be sucked up and converted into steam, with the result that coherence of the asphaltic mixture is prevented, and, although its surface may be smooth, the mass is really honey-combed, so that as soon as the pavement is subjected to the action of traffic, the voids or fissures formed by the steam appear on the surface, and the whole pavement is quickly broken up.

Advantages of Asphalt Pavement. These may be summed up as follows:

- (1) Ease of traction.
- (2) It is comparatively noiseless under traffic.
- (3) It is impervious.
- (4) It is easily cleansed.
- (5) It produces neither mud nor dust.
- (6) It is pleasing to the eye.

- (7) It suits all classes of traffic.
- (8) There is neither vibration nor concussion in traveling over it.
- (9) It is expeditiously laid, thereby causing little inconvenience to traffic.
- (10) Openings to gain access to underground pipes are easily made.

- (11) It is durable.
- (12) It is easily repaired.

Defects of Asphalt Pavement. These are as follows:

(1) It is slippery under certain conditions of the atmosphere. The American asphalts are much less so than the European, on account of their granular texture derived from the sand. The difference is very noticeable; the European are as smooth as glass, while the American resemble fine sandpaper.

(2) It will not stand constant moisture, and will disintegrate if excessively sprinkled.

(3) Under extreme heat it is liable to become so soft that it will roll or creep under traffic and present a wavy surface; and under extreme cold there is danger that the surface will crack and become friable.

(4) It is not adapted to grades steeper than $2\frac{1}{2}$ per cent, although it is in use on grades up to 7.30 per cent.

(5) Repairs must be quickly made, for the material has little coherence, and if, from irregular settlement of foundation or local violence, a break occurs, the passing wheels rapidly shear off the sides of the hole, and it soon assumes formidable dimensions.

The strewing of sand upon asphalt renders it less slippery; but in addition to the interference of the traffic while this is being done, there are further objections—namely, the possible injury by the sand cutting into the asphalt, the expense of labor and materials, and the mud formed, which has afterwards to be removed.

Although pure asphaltum is absolutely impervious and insoluble in either fresh or salt water, yet asphalt pavements in the continued presence of water are quickly disintegrated. Ordinary rain or daily sprinkling does not injure them when they are allowed to become perfectly dry again. The damage is most apparent in gutters and adjacent to overflowing drinking fountains. This defect has long been recognized; and various measures have been taken to overcome it, or

at least to reduce it to a minimum. In some cities, ordinances have been passed, seeking to regulate the sprinkling of the streets; and in many places the gutters are laid with stone or vitrified brick (see Figs.

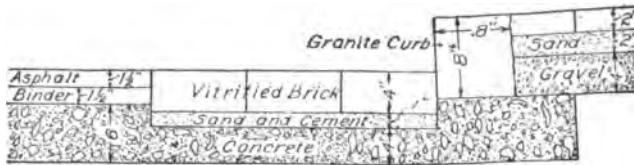


Fig. 64.

64 and 65), while in others the asphalt is laid to the curb, a space of 12 to 15 inches along the curb being covered with a thin coating of asphalt cement.

Asphalt laid adjoining center-bearing street-car rails is quickly broken down and destroyed. This defect is not peculiar to asphalt. All other materials when placed in similar positions are quickly worn. Granite blocks laid along such tracks have been cut into at a rate of more than half an inch a year. The frequent entering and turning off of vehicles from car tracks is one of the severest tests that can be

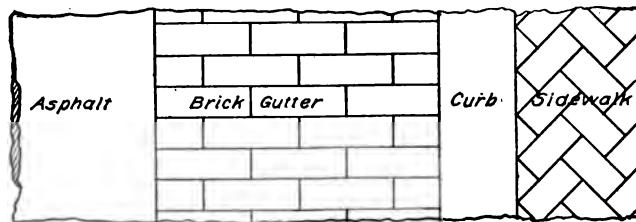


Fig. 65.

applied to any paving material; moreover, the gauge of trucks and vehicles is frequently greater than that of the rails, so one wheel runs on the rail and the other outside. The number of wheels thus traveling in one line must quickly wear a rut in any material adjoining the center-bearing rail.

To obviate the destruction of asphalt in such situations, it is usual to lay a strip of granite block or brick paving along the rail. This pavement should be of sufficient width to support the wheels of the widest gauge using the street.

The burning of leaves or making of fires on asphalt pavements should not be permitted, as it injures the asphalt, and the paving companies cannot be compelled to repair the damaged places without compensation.

Asphalt Blocks. Asphalt paving blocks are formed from a mixture of asphaltic cement and crushed stone in the proportion of 8 to 12 per cent of cement to 88 and 92 per cent of stone. The materials are heated to a temperature of about 300° F., and mixed while hot in a suitable vessel. When the mixing is complete, the material is placed in moulds and subjected to heavy pressure, after which the blocks are cooled suddenly by plunging into cold water.

The usual dimensions of the blocks are 4 inches wide, 3 inches deep, and 12 inches long.

Foundation. The blocks are usually laid upon a concrete foundation with a cushion-coat of sand about $\frac{1}{2}$ inch thick. They are laid with their length at right angles to the axis of the street, and the longitudinal joints should be broken by a lap of at least 4 inches. The blocks are then either rammed with hand rammers or rolled with a light steam roller, the surface being covered with clean, fine sand; no joint filling is used, as, under the action of the sun and traffic, the blocks soon become cemented.

The advantages claimed for a pavement of asphalt blocks over a continuous sheet of asphalt are: (1) That they can be made at a factory located near the materials, whence they can be transported to the place where they are to be used and can be laid by ordinary paviors, whereas sheet pavements require special machinery and skilled labor; (2) that they are less slippery, owing to the joints and the rougher surface due to the use of crushed stone.

Asphalt Macadam—Bituminous Macadam. Recently it has been proposed to use asphalt as a binding material for broken stone. There are two patented processes—the Whinney and the Warren—which differ slightly in details.

The advantages claimed for these methods are: (1) The first coat will be materially less; (2) it will offer a better foothold for horses; (3) it will be at least as durable as the ordinary sheet asphalt; (4) it will not shift under traffic and roll into waves; (5) it will not crack; (6) it

can be repaired more cheaply and with less skilled labor than can the ordinary sheet asphalt.

Tools Employed in Construction of Asphalt Pavements. The

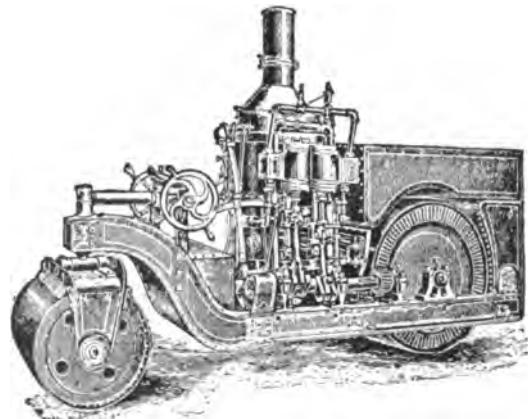


Fig. 66. Steam Roller.

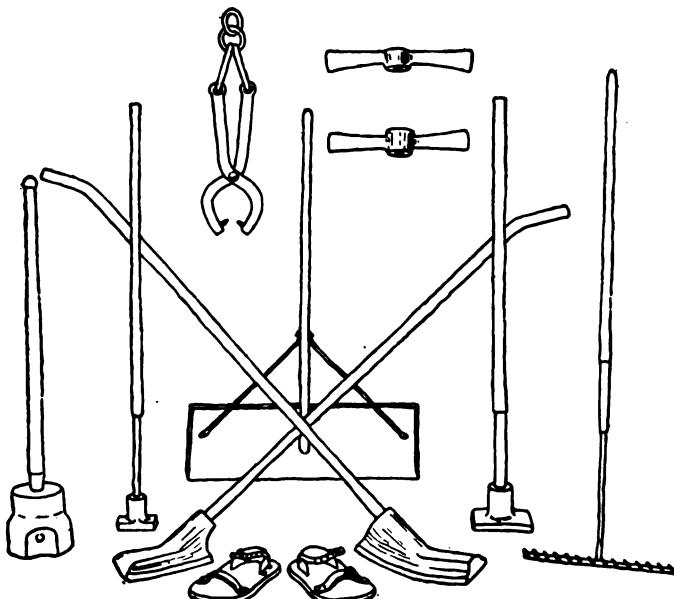


Fig. 67. Asphalt Tools.

tools used in laying sheet asphalt pavements comprise iron rakes; hand rammers; smoothing irons (Fig. 67); pouring pots (Fig. 69);

hand rollers, either with or without a fire-pot (Fig. 68); and steam rollers, with or without provision for heating the front roll (Fig. 66). These rollers are different in construction, appearance, and weight

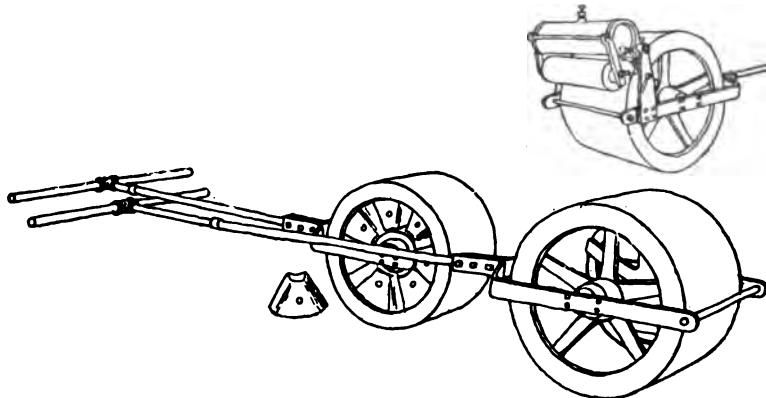


Fig. 68. Hand Rollers.

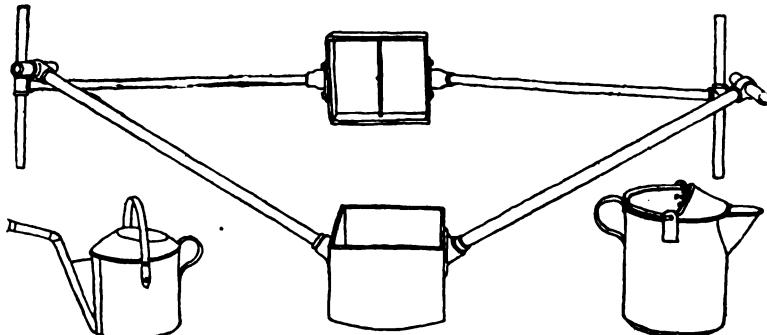


Fig. 69. Pouring Pots.

from those employed for compacting broken stone. The difference is due to the different character of the work required.

The principal dimensions of a five-ton roller are as follows:

Front roll or steering-wheel.....	30 to 32 inches diameter.
Rear roll or driving-wheel.....	48 " "
Width of front roll	40 " "
" rear "	40 " "
Extreme length	14 feet.
" height.....	7 to 8 feet.
Water capacity.....	80 to 100 gallons.
Coal "	200 pounds.

FOOTPATHS—CURBS—GUTTERS.

A footpath or walk is simply a road under another name—a road for pedestrians instead of one for horses and vehicles. The only difference that exists is in the degree of service required; but the conditions of construction that render a road well adapted to its object are very much the same as those required for a walk.

The effects of heavy loads such as use carriageways are not felt upon footpaths; but the destructive action of water and frost is the same in either case, and the treatment to counteract or resist these elements as far as practicable, and to produce permanency, must be the controlling idea in each case, and should be carried out upon a common principle. It is not less essential that a walk should be well adapted to its object than that a road should be; and it is annoying to find it impassable or insecure and in want of repair when it is needed for convenience or pleasure. In point of economy, there is the same advantage in constructing a footway skilfully and durably as there is in the case of a road.

Width. The width of footwalks (exclusive of the space occupied by projections and shade trees) should be ample to accommodate comfortably the number of people using them. In streets devoted entirely to commercial purposes, the clear width should be at least one-third the width of the carriageway; in residential and suburban streets, a very pleasing result can be obtained by making the walk one-half the width of the roadway, and devoting the greater part to grass and shade trees.

Cross Slope. The surface of footpaths must be sloped so that the surface water will readily flow to the gutters. This slope need not be very great; $\frac{1}{8}$ inch per foot will be sufficient. A greater slope with a thin coating of ice upon it, becomes dangerous to pedestrians.

Foundation. As in the case of roadways, so with footpaths, the foundation is of primary importance. Whatever material may be used for the surface, if the foundation is weak and yielding, the surface will settle irregularly and become extremely objectionable, if not dangerous, to pedestrians.

Surface. The requirements of a good covering for sidewalks are:

- (1) It must be smooth but not slippery.
- (2) It must absorb the minimum amount of water, so that it may dry rapidly after rain.

- (3) It must not be easily abraded.
- (4) It must be of uniform quality throughout, so that it may wear evenly.
- (5) It must neither scale nor flake.
- (6) Its texture must be such that dust will not adhere to it.
- (7) It must be durable.

Materials. The materials used for footpaths are as follows: Stone, natural and artificial; wood; asphalt; brick; tar concrete; and gravel.

Of the natural stones, sandstone (bluestone) and granite are extensively employed.

The bluestone, when well laid, forms an excellent paving material. It is of compact texture, absorbs water to a very limited extent, and hence soon dries after rain; it has sufficient hardness to resist abrasion, and wears well without becoming excessively slippery.

Granite, although exceedingly durable, wears very slippery, and its surface has to be frequently roughened.

Slabs, of whatever stone, must be of equal thickness throughout their entire area; the edges must be dressed true to the square for the whole thickness (edges must not be left feathered as shown in Fig. 70); and the slabs must be solidly bedded on the foundation and the joints filled with cement-mortar.

Badly set or faultily dressed flagstones are very unpleasant to walk over, especially in rainy weather; the unevenness causes pedestrians to stumble, and rocking stones squirt dirty water over their clothes.

Wood has been largely used in the form of planks; it is cheap in first cost, but proves very expensive from the fact that it lasts but a comparatively short time and requires constant repair to keep it from becoming dangerous.

Asphalt forms an excellent footway pavement; it is durable and does not wear slippery.

Brick. Brick of suitable quality, well and carefully laid on a concrete foundation, makes an excellent footway pavement for resi-



Fig. 70.

dential and suburban streets of large cities, and also for the main streets of smaller towns. The bricks should be a good quality of paving brick (ordinary building brick are unsuitable, as they soon wear out and are easily broken). The bricks should be laid in parallel rows on their edges, with their length at right angles to the axis of the path.

Curbstones. Curbstones are employed for the outer side of footways, to sustain the coverings and form the gutter. Their upper edges are set flush with the footwalk pavement, so that the water can flow over them into the gutters.

The disturbing forces which the curb has to resist, are : (1) The pressure of the earth behind it, which is frequently augmented by piles of merchandise, building materials, etc. This pressure tends to overturn it, break it transversely, or move it bodily on its base. (2) The pressure due to the expansion of freezing earth behind and beneath it. This force is most frequent where the sidewalk is partly sodded and the ground is accordingly moist. Successive freezing and thawing of the earth behind the curb will occasion a succession of thrusts forward, which, if the curb be of faulty design, will cause it to incline several degrees from the vertical. (3) The concussions and abrasions caused by traffic. To withstand the destructive effect of wheels, curbs are faced with iron; and a concrete curb with a rounded edge of steel has been patented and used to some extent. Fires built in the gutters deface and seriously injure the curb. Posts and trees set too near the curb, tend to break, displace, and destroy it.

The use of drain tiles under the curb is a subject of much difference of opinion among engineers. Where the subsoil contains water naturally, or is likely to receive it from outside the curb-lines, the use of drains is of decided benefit; but great care must be exercised in jointing the drain-tiles, lest the soil shall be loosened and removed, causing the curb to drop out of alignment.

The materials employed for curbing are the natural stones, as granite, sandstone (bluestone), etc., artificial stone, fire-clay, and cast iron.

The dimensions of curbstones vary considerably in different localities and according to the width of the footpaths; the wider the path, the wider should be the curb. It should, however, never be less than 8 inches deep, nor narrower than 4 inches. Depth is necessary

to prevent the curb turning over toward the gutter. It should never be in smaller lengths than 3 feet. The top surface should be beveled off to conform to the slope of the footpath. The front face should be hammer-dressed for a depth of about 6 inches, in order that there may be a smooth surface visible against the gutter. The back for 3 inches

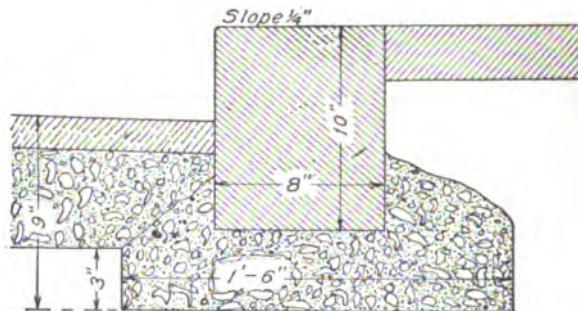


Fig. 71.

from the top should also be dressed, so that the flagging or other paving may butt fair against it. The end joints should be cut truly square, the full thickness of the stone at the top, and so much below the top as will be exposed, the remaining portion of the depth and bottom should be roughly squared, and the bottom should be fairly parallel to the top. (See Figs. 71 and 72).

Artificial Stone. Artificial stone is being extensively used as a

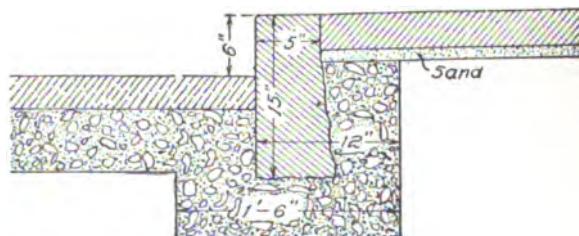


Fig. 72.

footway paving material. Its manufacture is the subject of several patents, and numerous kinds are to be had in the market. When manufactured of first-class materials and laid in a substantial manner, with proper provision against the action of frost, artificial stone forms a durable, agreeable, and inexpensive pavement.

The varieties most extensively used in the United States are known by the names of *granolithic*, *monolithic*, *ferrolithic*, *kosmocrete*, *metalithic*, etc.

The process of manufacture is practically the same for all kinds, the difference being in the materials employed. The usual ingredients are Portland cement, sand, gravel, and crushed stone.

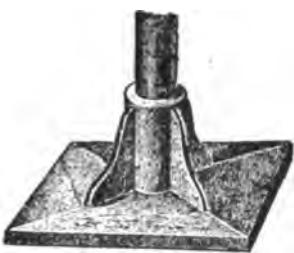


Fig. 73. Tamper.

Artificial stone for footway pavements is formed in two ways—namely, in blocks manufactured at a factory, brought on the ground, and laid in the same manner as natural stone; or the raw materials are brought upon the work, prepared, and laid in place, blocks being formed by the use of board moulds.

The manner of laying is practically the same for all kinds. The area to be paved is excavated to a minimum depth of 8 inches, and to such greater depths as the nature of the ground may require to secure a solid foundation. The surface of the ground so exposed is well compacted by ramming; and a layer of gravel, ashes, clinker, or other suitable material is spread and consolidated; on this is placed the concrete wearing surface, usually 4 inches thick. As a protection against the lifting effects of frost, the concrete is laid in squares, rectangles, or other forms having areas ranging from 6 to 30 square feet, strips of wood being employed to form moulds in which the concrete is placed. After the concrete is set, these strips are removed, leaving joints about half an inch wide between the blocks. Under some patents these joints are filled with cement; under others, with tarred paper; and in some cases they are left open.

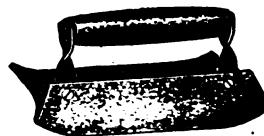


Fig. 74. Quarter-Round.

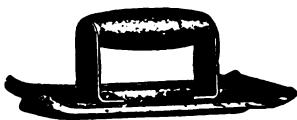


Fig. 75. Jointer.

Tools Employed in Construction of Artificial Stone Pavements.
Tampers (Fig. 73). Cast iron, with hickory handle; range from 6 by 8 inches to 8 by 10 inches.

Quarter-Round, (Fig. 74). Made of any desired radius. Used for forming corners and edges.

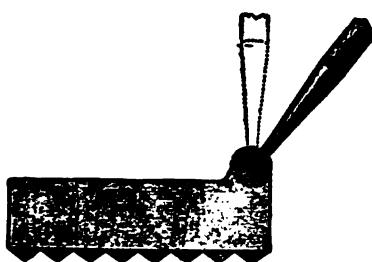


Fig. 76. Cutter.

Jointer (Fig. 75). Used for trimming and finishing the joints.

Cutter (Fig. 76). Used for cutting the concrete into blocks.

Gutter Tool (Fig. 77). Used for forming and finishing gutters.

Imprint Rollers (Figs. 78 and 79). Here are shown two designs of rollers for imprinting the surface of artificial stone pavements with grooves, etc.

SELECTING THE PAVEMENT

The problem of selecting the best pavement for any particular case is a local one, not only for each city, but also for each of the various parts into which the city is imperceptibly divided; and it involves so many elements that the nicest balancing of the relative values for each kind of pavement is required, to arrive at a correct conclusion.

In some localities, the proximity of one or more paving materials determines the character of the pavement; while in other cases a careful investigation may be required in order to select the most suitable material. Local conditions should always be considered; hence it is not possible to lay down any fixed rule as to what material makes the best pavement.

The qualities essential to a good pavement may be stated as follows:

- (1) It should be impervious.
- (2) It should afford good foothold for horses.
- (3) It should be hard and durable, so as to resist wear and disintegration.
- (4) It should be adapted to every grade.
- (5) It should suit every class of traffic.
- (6) It should offer the minimum resistance to traction.
- (7) It should be noiseless.
- (8) It should yield neither dust nor mud.



Fig. 77. Gutter Tool.

(9) It should be easily cleaned.

(10) It should be cheap.

Interests Affected in Selection. Of the above requirements, numbers 2, 4, 5, and 6 affect the traffic and determine the cost of haulage by the limitations of loads, speed, and wear and tear of horses and vehicles.

If the surface is rough or the foothold bad, the weight of the load a horse can draw is decreased, thus necessitating the making of more trips or the employment of more horses and vehicles to move a given weight. A defective surface necessitates a reduction in the speed of movement and consequent loss of time; it increases the wear of horses, thus decreasing their life service and lessening the value of

their current services; it also increases the cost of maintaining vehicles and harness.

Numbers 7, 8, and 9 affect the occupiers of adjacent premises, who suffer from the effect of dust and noise; they also affect the owners of said premises, whose income from rents is diminished where these disadvantages exist. Numbers 3 and 10 affect the taxpayers alone—first, as to the length of time during which the covering remains serviceable; and second, as to the amount of the annual repairs. Number 1 affects the adjacent occupiers principally on hygienic grounds. Numbers 7 and 8 affect both traffic and occupiers.

Problem Involved in Selection. The problem involved in the selection of the most suitable pavement consists of the following factors: (1) adaptability; (2) desirability; (3) serviceability; (4) durability; (5) cost.

Adaptability. The best pavement for any given roadway will



Fig. 78. Imprint Roller.

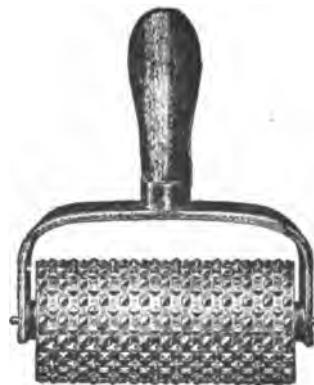


Fig. 79. Imprint Roller.

depend altogether on local circumstances. Pavements must be adapted to the class of traffic that will use them. The pavement suitable for a road through an agricultural district will not be suitable for the streets of a manufacturing center; nor will the covering suitable for heavy traffic be suitable for a pleasure drive or for a residential district.

General experience indicates the relative fitness of the several materials as follows:

For country roads, suburban streets, and pleasure drives—broken stone. For streets having heavy and constant traffic—rectangular blocks of stone, laid on a concrete foundation, with the joints filled with bituminous or Portland cement grout. For streets devoted to retail trade, and where comparative noiselessness is essential—asphalt, wood, or brick.

Desirability. The desirability of a pavement is its possession of qualities which make it satisfactory to the people using and seeing it. Between two pavements alike in cost and durability, people will have preferences arising from the condition of their health, personal prejudices, and various other intangible influences, causing them to select one rather than the other in their respective streets. Such selections are often made against the demonstrated economies of the case, and usually in ignorance of them. Whenever one kind of pavement is more economical and satisfactory to use than is any other, there should not be any difference of opinion about securing it, either as a new pavement or in the replacement of an old one.

The economic desirability of pavements is governed by the ease of movement over them, and is measured by the number of horses or pounds of tractive force required to move a given weight—usually one ton—over them. The resistance offered to traction by different pavements is shown in the following table:

Resistance to Traction on Different Pavements

KIND OF PAVEMENT	TRACTIVE RESISTANCE	
	Pounds per ton	In terms of the load
Asphalt (sheet).....	30 to 70	$\frac{1}{8} \frac{1}{7}$ to $\frac{1}{3} \frac{1}{0}$
Brick	15 " 40	$\frac{1}{1} \frac{3}{3}$ " $\frac{1}{8} \frac{1}{0}$
Cobblestones	50 " 100	$\frac{1}{4} \frac{1}{0}$ " $\frac{1}{2} \frac{1}{0}$
Stone-block.....	30 " 80	$\frac{1}{8} \frac{1}{7}$ " $\frac{1}{2} \frac{1}{5}$
Wood-block rectangular	30 " 50	$\frac{1}{8} \frac{1}{7}$ " $\frac{1}{4} \frac{1}{0}$
Wood-block round	40 " 80	$\frac{1}{8} \frac{1}{0}$ " $\frac{1}{2} \frac{1}{5}$

Serviceability. The serviceability of a pavement is its quality of fitness for use. This quality is measured by the expense caused to the traffic using it—namely, the wear and tear of horses and vehicles, loss of time, etc. No statistics are available from which to deduce the actual cost of wear and tear.

The serviceability of any pavement depends in great measure upon the amount of foothold afforded by it to the horses—provided, however, that its surface be not so rough as to absorb too large a percentage of the tractive energy required to move a given load over it. Cobblestones afford excellent foothold, and for this reason are largely employed by horse-car companies for paving between the rails; but the resistance of their surface to motion requires the expenditure of about 40 pounds of tractive energy to move a load of 1 ton. Asphalt affords the least foothold; but the tractive force required to overcome the resistance it offers to motion is only about 30 pounds per ton.

Comparative Safety. The comparison of pavements in respect of safety, is the average distance traveled before a horse falls. The materials affording the best foothold for horses are as follows, stated in the order of their merit:

- (1) Earth, dry and compact.
- (2) Gravel.
- (3) Broken stone (macadam).
- (4) Wood.
- (5) Sandstone and brick.
- (6) Asphalt.
- (7) Granite blocks.

Durability. The durability of pavement is that quality which determines the length of time during which it is serviceable, and does not relate to the length of time it has been down. The only measure of durability of a pavement is *the amount of traffic tonnage it will bear before it becomes so worn that the cost of replacing it is less than the expense incurred by its use.*

As a pavement is a construction, it necessarily follows that there is a vast difference between the durability of the pavement and the durability of the materials of which it is made. Iron is eminently durable; but, as a paving material, it is a failure.

Durability and Dirt. The durability of a paving material will vary considerably with the condition of cleanliness observed. One

inch of overlying dirt will most effectually protect the pavement from abrasion, and indefinitely prolong its life. But the dirt is expensive, it injures apparel and merchandise, and is the cause of sickness and discomfort. In the comparison of different pavements, no traffic should be credited to the dirty one.

Life of Pavements. The life or durability of different pavements under like conditions of traffic and maintenance, may be taken as follows:

Life Terms of Various Pavements

MATERIAL	LIFE TERM
Granite block	12 to 30 years
Sandstone	6 " 12 "
Asphalt	10 " 14 "
Wood	3 " 7 "
Limestone	1 " 3 "
Brick	5 " 9 "
Macadam	5 " ? "

Cost. The question of cost is the one which usually interests taxpayers, and is probably the greatest stumbling-block in the attainment of good roadways. The first cost is usually charged against the property abutting on the highway to be improved. The result is that the average property owner is always anxious for a pavement that costs little, because he must pay for it, not caring for the fact that cheap pavements soon wear out and become a source of endless annoyance and expense. Thus false ideas of economy always have stood, and undoubtedly to some extent always will stand, in the way of realizing that the best is the cheapest.

The pavement which has cost the most is not always the best; nor is that which cost the least the cheapest; *the one which is truly the cheapest is the one which makes the most profitable returns in proportion to the amount expended upon it.* No doubt there is a limit of cost to go beyond which would produce no practical benefit; but it will always be found more economical to spend enough to secure the best results, and this will always cost less in the long run. One dollar well spent is many times more effective than one-half the amount injudiciously expended in the hopeless effort to reach sufficiently good results. The cheaper work may look as well as the more expensive for the time, but may very soon have to be done over again.

Economical Benefit. The economic benefit of a good roadway is

comprised in its cheaper maintenance; the greater facility it offers for traveling, thus reducing the cost of transportation; the lower cost of repairs to vehicles, and less wear of horses, thus increasing their term of serviceability and enhancing the value of their present service; the saving of time; and the ease and comfort afforded to those using the roadway.

First Cost. The cost of construction is largely controlled by the locality of the place, its proximity to the particular material used, and the character of the foundation.

The Relative Economies of Pavements—whether of the same kind in different condition, or of different kinds in like good condition—are sufficiently determined by summing their cost under the following headings of account:

- (1) Annual interest upon first cost.
- (2) Annual expense for maintenance.
- (3) Annual cost for cleaning and sprinkling.
- (4) Annual cost for service and use.
- (5) Annual cost for consequential damages.

Interest on First Cost. The first cost of a pavement, like any other permanent investment, is measurable for purposes of comparison by the amount of annual interest on the sum expended. Thus, assuming the worth of money to be 4%, a pavement costing \$4 per square yard entails an annual interest loss or tax of \$0.16 per square yard.

Cost of Maintenance. Under this head must be included all outlays for repairs and renewals which are made from the time when the pavement is new and at its best to a time subsequent, when, by any treatment, it is again put in equally good condition. The gross sum so derived, divided by the number of years which elapse between the two dates, gives an average annual cost for maintenance.

Maintenance means the keeping of the pavement in a condition practically as good as when first laid. The cost will vary considerably depending not only upon the material and the manner in which it is constructed, but upon the condition of cleanliness observed, and the quantity and quality of the traffic using the pavement.

The prevailing opinion that no pavement is a good one unless, when once laid, it will take care of itself, is erroneous; *there is no such pavement.* All pavements are being constantly worn by traffic and by the action of the atmosphere; and if any defects which appear are

not quickly repaired, the pavements soon become unsatisfactory and are destroyed. To keep them in good repair, incessant attention is necessary, and is consistent with economy. Yet claims are made that particular pavements cost little or nothing for repairs, simply because repairs in these cases are not made, while any one can see the need of them.

Cost of Cleaning and Sprinkling. Any pavement, to be considered as properly cared for, must be kept dustless and clean. While circumstances legitimately determine in many cases that streets must be cleaned at daily, weekly, or semi-weekly intervals, the only admissible condition for the purpose of analysis of street expenses must be that of like requirements in both or all cases subjected to comparison.

The cleaning of pavements, as regards both efficiency and cost, depends (1) upon the character of the surface; (2) upon the nature of the materials of which the pavements are composed. Block pavements present the greatest difficulty; the joints can never be perfectly cleaned. The order of merit as regards facility of cleansing, is: (1) asphalt, (2) brick, (3) stone, (4) wood, (5) macadam.

Cost of Service and Use. The annual cost for service is made up by combining several items of cost incidental to the use of the pavement for traffic—for instance, the limitation of the speed of movement, as in cases where a bad pavement causes slow driving and consequent loss of time; or cases where the condition of a pavement limits the weight of the load which a horse can haul, and so compels the making of more trips or the employment of more horses and vehicles; or cases where conditions are such as to cause greater wear and tear of vehicles, of equipage, and of horses. If a vehicle is run 1,500 miles in a year, and its maintenance costs \$30 a year, then the cost of its maintenance per mile traveled is two cents. If the value of a team's time is, say, \$1 for the legitimate time taken in going one mile with a load, and in consequence of bad roads it takes double that time, then the cost to traffic from having to use that one mile of bad roadway is \$1 for each load. The same reasoning applies to circumstances where the weight of the load has to be reduced so as to necessitate the making of more than one trip. Again, bad pavements lessen not only the life-service of horses, but also the value of their current service.

Cost for Consequential Damages. The determination of consequential damages arising from the use of defective or unsuitable pave-

ments, involves the consideration of a wide array of diverse circumstances. Rough-surfaced pavements, when in their best condition, afford a lodgment for organic matter composed largely of the urine and excrement of the animals employed upon the roadway. In warm and damp weather, these matters undergo putrefactive fermentation, and become the most efficient agency for generating and disseminating noxious vapors and disease germs, now recognized as the cause of a large part of the ills afflicting mankind. Pavements formed of porous materials are objectionable on the same, if not even stronger, grounds.

Pavements productive of dust and mud are objectionable, and especially so on streets devoted to retail trade. If this particular disadvantage be appraised at so small a sum per lineal foot of frontage as \$1.50 per month, or six cents per day, it exceeds the cost of the best quality of pavement free from these disadvantages.

Rough-surfaced pavements are noisy under traffic and insufferable to nervous invalids, and much nervous sickness is attributable to them. To all persons interested in nervous invalids, this damage from noisy pavements is rated as being far greater than would be the cost of substituting the best quality of noiseless pavement; but there are, under many circumstances, specific financial losses, measurable in dollars and cents, dependent upon the use of rough, noisy pavements. They reduce the rental value of buildings and offices situated upon streets so paved—offices devoted to pursuits wherein exhausting brain work is required. In such locations, quietness is almost indispensable, and no question about the cost of a noiseless pavement weighs against its possession. When an investigator has done the best he can to determine such a summary of costs of a pavement, he may divide the amount of annual tonnage of the street traffic by the amount of annual costs, and know what number of tons of traffic are borne for each cent of the average annual cost, which is the crucial test for any comparison, as follows:

(1) Annual interest upon first cost.....	8
(2) Average annual expense for maintenance and renewal...	
(3) Annual cost for custody (sprinkling and cleaning).....	
(4) Annual cost for service and use.....	
(5) Annual cost for consequential damages.....	
Amount of average annual cost.....	
Annual tonnage of traffic.....	
Tons of traffic for each cent of cost.....	

Gross Cost of Pavements. Since the cost of a pavement depends

upon the material of which it is formed, the width of the roadway, the extent and nature of the traffic, and the condition of repair and cleanliness in which it is maintained, it follows that in no two streets is the endurance or the cost the same, and the difference between the highest and lowest periods of endurance and amount of cost is very considerable.

The comparative cost of the various street pavements, including interest on first cost, sinking fund, maintenance, and cleaning, when reduced to a uniform standard traffic of 100,000 tons per annum for each yard in width of the carriageway, is about as follows:

Comparative Cost of Various Pavements

MATERIAL	ANNUAL COST PER SQ. YD.
Granite blocks.....	\$0.25
Asphalt street.....	0.40
Brick.....	0.35
Wood.....	0.50

INDEX

	Page
Absorption test for paving brick.....	93
Alignment of a road.....	23
Artificial asphalt pavements.....	109
Artificial stone.....	120
Asphalt blocks.....	114
Asphalt macadam.....	114
Asphalt pavements.....	106
advantages of.....	111
artificial.....	109
defects of.....	112
foundation for.....	111
tools employed in construction of.....	115
Asphaltic paving materials.....	106
bituminous limestone.....	106
bituminous sandstones.....	107
Trinidad asphaltum.....	107
Asphaltic paving mixture, formula for.....	111
Axle friction.....	10
Belgian block pavement.....	84
Bituminous cement for joint filling.....	89
Bituminous limetsone.....	106
Bituminous sandstones.....	107
Brick pavements.....	92
advantages of.....	95
defects of.....	95
foundation for.....	95
joint filling.....	98
manner of laying.....	96
sand cushion.....	96
Bridge sites.....	17
Broken stone roads.....	66
binding.....	70
compacting the broken stone.....	72
foundation for.....	69
size of stones.....	68
spreading the stone.....	70
thickness of broken stone.....	68
watering.....	70
Carts.....	57
Catch-basins.....	79

	Page
City streets	73
arrangement of.....	73
catch-basins.....	79
drainage of.....	78
grades.....	74
gutters.....	79
width of.....	73
Cobblestone pavement	84
Concrete foundation	81
Concrete-mixing machine	100
Construction profile	24
Country roads	1
location of.....	12
Covering of slopes	46
Creosoting	103
Cross-breaking test for paving brick	94
Cross levels	17
Crushing test for paving brick	94
Culverts	38
materials for.....	41
Curbstones	119
Determination of gradients	25
Drainage	32, 36
Draining tools	63
Drains, fall of	35
Dump cars	58
Dump wagons	59
Earth	47
Earth roads	50
Earthenware pipe culverts	42
Earthwork	44
balancing cuts and fills.....	44
classification of.....	47
prosecution of.....	48
shrinkage of.....	46
side slopes.....	45
Embankments	48
Épurée	108
Fall of drains	35
Footpaths	
cross slope.....	117
foundation for.....	117
materials used for.....	118
surface.....	117
width of.....	117
Formation of embankments	48
Formula for asphaltic paving mixture	111
Foundations	80

	Page
Foundations	
concrete.....	81
Friction.	1
Grade, establishing.	28
Gradient.....	6, 25
Granite.....	83
Granite block pavement.....	84
advantages.....	85
blocks.....	86
cushion coat.....	88
defects.....	85
foundation for.....	88
joint filling.....	89
ramming.....	89
Gravel.....	65
Gravel heaters.....	101
Gravel roads.....	64
repair of.....	66
Gutters.....	79
Halting places on mountain roads.....	22
Hardpan.....	47
Horse rollers.....	63
Inclination of side slopes.....	45
Iron pipe culverts.....	43
Level stretches.....	28
Levels.....	16
Location of country roads.....	12
bridge sites.....	17
cases to be treated.....	18
construction profile.....	24
cross levels.....	17
final location.....	24
final selection.....	17
gradient.....	25
intermediate towns.....	20
level stretches.....	28
levels.....	16
map.....	16
memoir.....	16
mountain roads.....	21
profile.....	17
reconnaissance.....	12
topography.....	15
Loose rock.....	47
Loss of height on mountain road.....	22
Loss of tractive power on inclines.....	8
Map.....	16
Maximum grade.....	25

	Page
Mechanical graders.....	59
Melting furnaces.....	101
Memoir.....	16
Minimum grade.....	27
Mountain roads.....	21
halting places on.....	22
loss of height.....	22
water on.....	22
Pavements.....	
adaptability.....	123
comparative safety.....	125
cost.....	126
desirability.....	124
durability.....	125
economical benefit.....	126
life of.....	126
selecting.....	122
serviceability.....	125
Paving bricks.....	
properties of.....	95
tests of.....	92
absorption.....	93
cross-breaking.....	94
crushing.....	94
rattler.....	92
Picks.....	53
Ploughs.....	53
Profile.....	17
Rattler test for paving brick.....	92
Reconnaissance.....	12
Refined Trinidad asphaltum.....	108
Resistance of the air.....	11
Resistance due to gravity on different inclinations.....	5
Resistance offered by roadway.....	1
friction.....	1
grade resistance.....	6
resistance to rolling.....	2
Road coverings.....	64
Road machines.....	61
Roads.....	
country.....	1
object of.....	1
width of.....	29
Roadways on rock slopes.....	50
Sand roads.....	52
Sandstones.....	83
Scrapers.....	55
Shovels.....	53

	Page
Shrinkage of earthwork	46
Side ditches	35
Side slopes	45
Solid rock	47
Springs, effect of on vehicles	11
Sprinkling carts	64
Steam rollers	72
Stone block pavements	82
Stone pavement on steep grades	91
Street grades	74
Sub-foundation drainage of streets	78
Surface drainage	79
Surface graders	61
Tables	
force required to draw loaded vehicles over inclined roads	10
grades, effects of upon load horse can draw on different pavements	8
grades, method of designating	25
pavements, cost of various	130
pavements, life terms of various	126
paving materials, proportions for	31
resistance to traction on different pavements	124
resistance to traction on different road surfaces	2
specific gravity, weight, resistance to crushing, and absorptive power of stones	84
traction power of horses at different velocities	7
Trinidad asphaltum, average composition of	109
wood paving blocks, expansion of	105
Tests of paving brick	92
Tools employed in construction of artificial stone pavements	121
Tools employed in construction of block pavements	100
Tools for grading	53
carts	57
draining tools	63
dump cars	58
dump wagons	59
horse rollers	63
mechanical graders	59
picks	53
ploughs	53
road machines	61
scrapers	55
shovels	53
sprinkling carts	64
surface graders	61
wheelbarrows	56
Topography	15
Tractive power	6
Tractive power on inclines, loss of	8

INDEX

	Page
Transverse contour.....	30, 78
Transverse grade.....	77
Trap rock.....	83
Trinidad asphaltum.....	107
Undulating grades.....	27
Vehicles, effect of springs on.....	11
Water on mountain roads.....	22
Water breaks.....	37
Wheelbarrows.....	56
Width of road.....	29
Wood pavements.....	101
advantages.....	102
chemical treatment of wood.....	103
creosoting.....	103
defects.....	103
expansion of blocks.....	105
filling for joints.....	106
manner of laying.....	105
quality of wood.....	103
Zigzags.....	24

89090506379



b89090506379a